


vtech[®]

User's Manual

Talk & Learn Smart Phone



© 2014 VTech
Printed in China
91-009667-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Talk & Learn Smart Phone**.

The **VTech® Talk & Learn Smart Phone** helps your child learn while experiencing great pretend play with their very own smart phone. 10 activities introduce phonics, alphabetical order, numbers, time concepts, music and more! A special microphone feature also allows your child to use real voice activation play, and a phone book allows for pretend calls to family and friends. Ready for a chat? Just pick up your **Talk & Learn Smart Phone** and start talking!

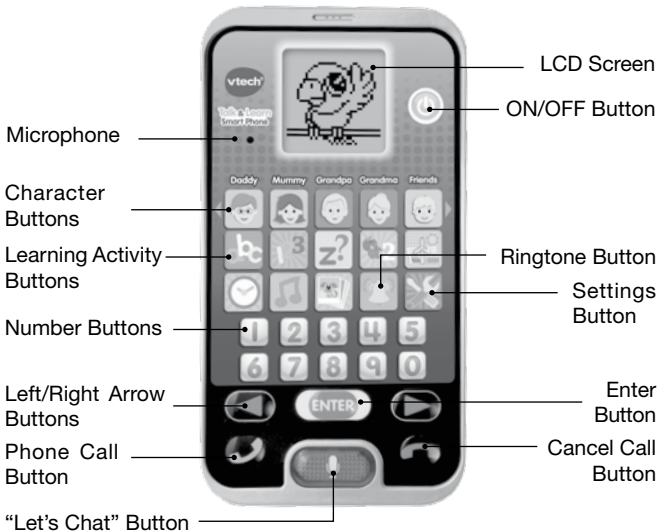

INCLUDED IN THIS PACKAGE

- One VTech® Talk & Learn Smart Phone
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please make sure the unit is OFF and then remove the demo strip to activate normal play mode. The volume level will be much lower in normal play mode to protect the hearing of the user.

Note:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

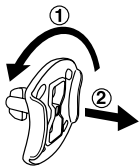


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is OFF.
2. Locate the battery cover on the back of the unit.
3. Use a screwdriver to open the battery cover.
4. Install 2 new "AAA" Size (AM-4/LR03) batteries following the diagram inside the battery box.
5. Replace the battery cover.

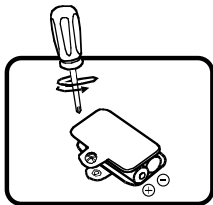

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit **ON** and press it again to turn the unit **OFF**.

2. 5 CHARACTER BUTTONS



Press one of the **5 CHARACTER BUTTONS** to bring up that person's phone number.

3. LEARNING ACTIVITY BUTTONS



Press the **LEARNING ACTIVITY BUTTONS** directly to play one of the 8 learning activities.

4. LET'S CHAT BUTTON

Press the **LET'S CHAT BUTTON** to enter the Let's Chat activity. This activity uses the voice activation feature.

5. RINGTONE BUTTON

Press the **RINGTONE BUTTON** to set the ringtone of your phone. There are 5 different ringtones to choose from. Use the arrow buttons to select one and then press Enter to confirm. The selected ringtone will be heard when pressing the **PHONE CALL BUTTON**.

6. SETTINGS BUTTON

Press the **SETTINGS BUTTON** to adjust the screen contrast or turn the background music on/off. Use the arrow buttons and Enter to select which item to adjust, then use the arrow buttons to make adjustments. Press Enter to confirm and exit the Settings menu.

7. PHONE CALL BUTTON

Press the **PHONE CALL BUTTON** to make a phone call. You will hear the phone ringing and then be able to leave a message on the answering machine.

8. CANCEL CALL BUTTON

Press the **CANCEL CALL BUTTON** at any time to exit the current activity and return to the opening animation.

9. MICROPHONE

This Microphone hole is used for the voice activation feature. The suggested distance to keep between the microphone and your mouth is about 4-5 inches.



10. ENTER BUTTON

Press the **ENTER BUTTON** to confirm your choice.

11. ARROW BUTTONS

Press the **ARROW BUTTONS** to make a selection in activities or menus.

12. NUMBER BUTTONS



Press the **NUMBER BUTTONS** to learn numbers or to answer number-related questions.

13. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

ACTIVITIES:

The **VTech® Talk & Learn Smart Phone** offers a total of 10 fun activities to play.

1: Phone Book

Press any of the **5 CHARACTER BUTTONS** to enter that person's phone number page. Press the Call button to call them, then use the microphone feature to leave a message when you see the light go on. You can also edit the default phone number for each person. Just press Enter when in the phone number page and use the arrow and number buttons to change the phone number.



2: Letter Chat

In this activity, you can learn the phonetic sounds of the alphabet by using the arrow buttons to scroll from a to z.



3: Number Counting

In this activity, press any number to show the number and see a counting animation. Use the arrow buttons to scroll from one number to the next.



4: Letter Quiz

In this activity, you will be asked some letter questions. Use the arrow buttons to choose your answer and then press Enter.



5: Number Quiz

In this activity, you will be asked some number questions that will gradually get more challenging. Use the arrow buttons to choose your answer and then press Enter, or press the number buttons directly to answer the question.



 
6: Charge It Up!

Uh oh! The mobile phone's battery is low. Let's charge the phone by using wind power and solar power. Listen to the instructions and then blow into the microphone to spin the windmill or move the clouds away from the sun.



7: My Clock

In this activity, you can learn the different hours on a clock. Use the arrow buttons to move the clock hands and press Enter to hear the clock chime out the number.



8: Music Fun

In this activity, you can choose from 5 different melodies to enjoy. While listening to the melody, press the arrow buttons to change instruments for added fun.



9: Picture Fun

In this activity, you can choose from 7 different pictures to enjoy. Use the arrow buttons to choose another picture and press Enter to watch an animation.



10:Let's Chat

In this activity, you can press the Let's Chat button to make a call to the friendly bird. He loves to chat and will ask you questions. Use the microphone to have a chat with him and respond to his questions. Press the cancel button at any time to hang up.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK), and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have.

A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK) and +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

