

User's Manual

Stack, Sort & Store Tree



© 2016 VTech Printed in China 91-003171-001(JR) VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Bally

Toys that will stimulate their interest in different textures, sounds and colours

lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

l want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

Birth-36 months






INTRODUCTION

Thank you for purchasing the VTech® Stack, Sort & Store Tree learning toy!

The **Stack**, **Sort & Store Tree** is a stacker and more! Stack the pieces, create building blocks or nest them inside each other. Your little learner can then place the cat on top of each piece to learn colours and numbers.

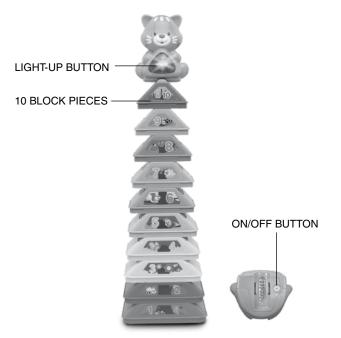

INCLUDED IN THIS PACKAGE

- One VTech® Stack, Sort & Store Tree learning toy (includes ten stacking block pieces)
- One instruction manual

WARNING:


All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep user's manual as it contains important information.

GETTING STARTED BATTERY INSTALLATION

- Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the cat piece. Use a screwdriver to loosen the screw.
- Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

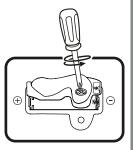

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- · Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/ OFF BUTTON** (也). To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Stack, Sort & Store Tree will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing the button or by stacking the blocks.

Note: When the product is in the packaging, the unit will be in try-me mode. To begin normal play, please follow one of the following steps:

- When the unit is turned on in try-me mode, place the cat onto a block, then remove the block.
- When in sleep mode, press the ON/OFF button once to set normal mode.
- When the unit is switched on, press the ON/OFF button once to interrupt the try-me mode and to commence normal play.

ACTIVITIES

 Press the on/off button to turn the unit on. You will hear a playful sound, a song and a fun phrase. The light will flash with the sounds.



- When there is no block placed under the cat, press the light-up button to play a fun Find It game. When there is a block placed under the cat, press the light-up button to learn the number, colour or the animal/ object on the block. You will also hear a variety of songs and melodies. The light will flash with the sounds.
- Stack the blocks under the cat to learn about numbers, colours and objects and hear short tunes. The light will flash with the sounds.





MELODY LIST:

- Froggy Went a Courtin'
- 2. Good Morning Merry Sunshine
- 3. Little Robin Red Breast
- 4. Pop! Goes the Weasel
- 5. Ta Ra Ra Boom De Ay
- 6. Flight of the Bumblebee
- 7. Yellow Rose of Texas
- 8. Shoo Fly Don't Bother Me
- 9. This Old Man
- 10. Mary, Mary Quite Contrary
- 11. London Bridge is Falling Down
- 12. Mulberry Bush
- Turkey in the Straw
- 14. Pussy Cat, Pussy Cat
- 15. Oats, Peas, Beans and Barley Grow

SING-ALONG SONG LYRICS

SONG 1

Build a tower, block by block, Stack the tree up one by one.

SONG 2

One, two, three, four, five, Six, seven, eight, nine, ten.

SONG 3

Can you see who's playing in the tree?

SONG 4

I'm an orange cat, I have many friends playing on my tree.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- Please turn the unit OFF.
- Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtech.co.uk

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.





rtech[®] PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- 2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
 - Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

