

Toot-Toot Drivers[®]

Construction Site



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

3-6 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® Construction Site!**

Little construction workers will love exploring the **Toot-Toot Drivers® Construction Site!** Pick up, sort and dump the three shape blocks with the digger, crane tower and rock sorter. The horn has blown and it's time to get to work!

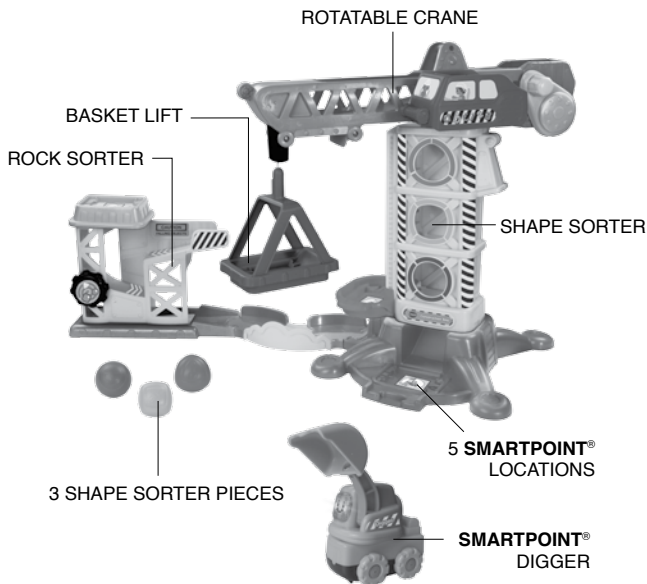

INCLUDED IN THIS PACKAGE



One **SmartPoint®**
digger



One tower base



One rock
sorter base



One shape
sorter tower



One crane



One rock sorter



One **SmartPoint®**
control platform



One **SmartPoint®**
basket lift base



 
One **SmartPoint®**
tower lift



One **SmartPoint®**
unload platform



One rock
sorter wheel

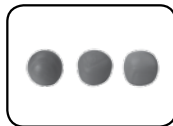


Three shape
sorter pieces



Two 60-degree
male track



 One 90-degree
female track

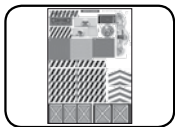

One label sheet

One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

 
Please keep this user's manual as it contains important information.



CAUTION:

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Unlock the packaging locks:

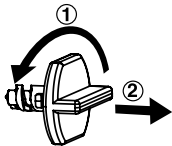


① Turn the packaging lock counter-clockwise several times.

② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION – DIGGER

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the digger. Use a screwdriver to loosen the screw.

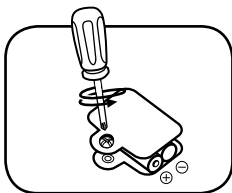

3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Alkaline Batteries are recommended.
- Alkaline Batteries are recommended. Rechargeable batteries are not guaranteed to work with this product.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.

- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 
Help protect the environment by disposing of your product or batteries responsibly.

 
 
 
 
 
 
 
 
For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

Please stick the labels to the play set securely as indicated on the following page:

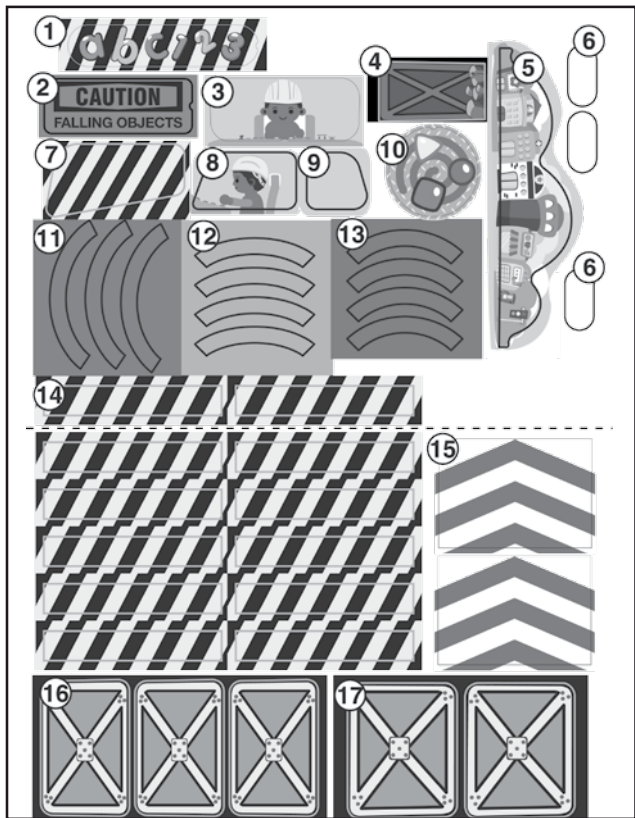


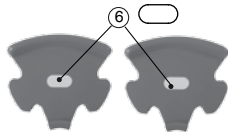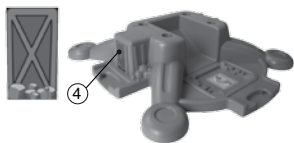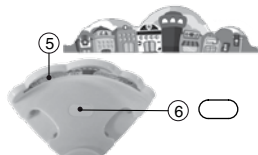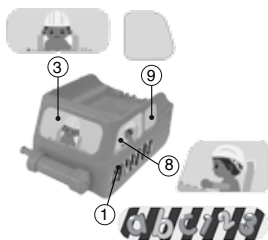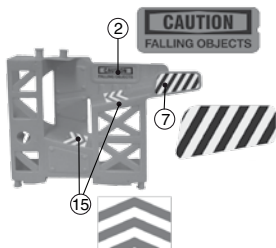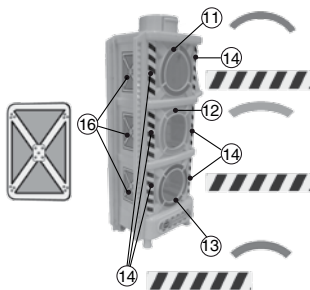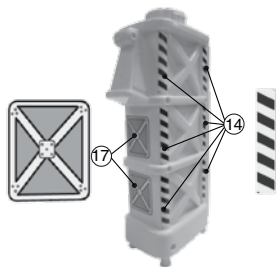


ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Drivers Construction Site**, safety comes first. To ensure your child's safety, adult assembly is required.

 
1. Insert the **SmartPoint®** tower lift on the grooved side of the shape sorter tower.

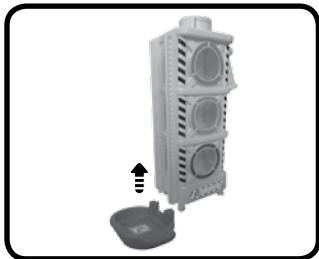


2. Attach the shape sorter tower to the tower base as shown below. You will hear a click sound to indicate the shape sorter tower is secure. Once the shape sorter tower is connected to the tower base, it cannot be detached.

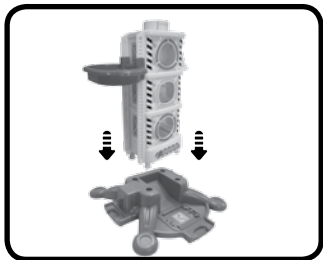 

 3. Insert the **SmartPoint**® control platform to the four open slots on the crane as shown below. You will hear a click sound to indicate the **SmartPoint**® control platform is secure. Once the **SmartPoint**® control platform is connected to the crane, it cannot be detached.

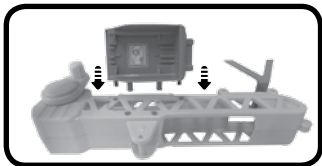

 
4. Connect the crane to the circular opening on top of the shape sorter tower as shown below. You will hear a click sound to indicate the crane is secure. Once the crane is connected to the shape sorter tower, it cannot be detached.

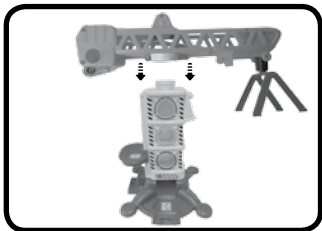


5. Insert the **SmartPoint**® basket lift base into the four basket lift supports as shown below. You will hear a click sound to indicate the **SmartPoint**® basket lift base is secure. Once **SmartPoint**® basket lift base is connected, it cannot be detached.



 6. Attach the rock sorter to the rock sorter base as shown below. You will hear a click sound to indicate the rock sorter is secure. Once the rock sorter is connected to the rock sorter base, it cannot be detached.

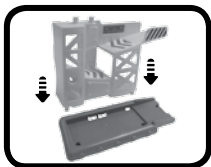

 7. With the rock sorter connected to the rock sorter base, attach the **SmartPoint®** unload platform to the rock sorter as shown below. Then attach the rock sorter wheel to the rock sorter. You will hear a click sound when each piece is connected. Once a piece is connected to the rock sorter, it cannot be detached.

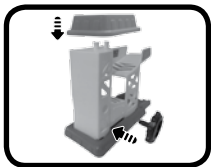

Once you've completed the above steps, you are ready to play! You can connect these pieces to the included track pieces or you can connect this play set to other **Toot-Toot Drivers** play sets (each sold separately).





EXPAND & EXPLORE

 
Connect to the **Toot-Toot Drivers Deluxe Track Set** (as shown below) or other **Toot-Toot Drivers** play sets (each sold separately) to expand the **Toot-Toot Drivers Construction Site** and inspire creativity.



PRODUCT FEATURES - DIGGER

1. ON/OFF SWITCH

To turn the digger **ON**, slide the **ON/OFF SWITCH** to the **ON** () position. To turn the digger **OFF**, slide the **ON/OFF SWITCH** to the **OFF** () position.

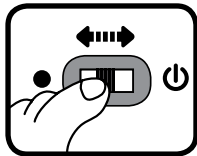


2. AUTOMATIC SHUT-OFF

To preserve battery life, the included digger will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing the light-up face button, pushing the digger quickly or triggering a **SmartPoint®** location.


Note: This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play.

ACTIVITIES - DIGGER

 
1. Slide the **ON/OFF SWITCH** to the **ON** position to turn the digger **ON**. You will hear digger sounds, a song and a phrase. The light will flash with the sounds.

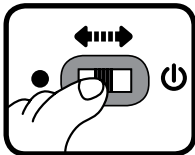

 
2. Press the **LIGHT-UP DRIVER BUTTON** to hear digger sounds, songs and phrases. The light will flash with the sounds.

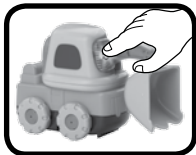

 3. Push the digger to hear fun sounds and melodies. While a melody is playing, push the digger again to add in fun sounds on top of the melody. The light will flash with the sounds.

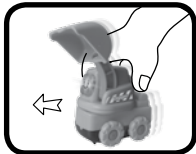



 
4. Move the digger bucket and arm up and down. The digger cab can also rotate back and forth.

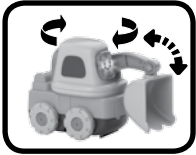


5. For added fun, the digger interacts with the **Toot-Toot Drivers Construction Site**. Simply place the digger on one of the construction site's five **SmartPoints®** to see the digger's light flash and to hear fun sounds, short tunes and phrases. The digger even interacts with other **Toot-Toot Drivers** play sets (each play set sold separately).

ACTIVITIES – CONSTRUCTION SITE

   
1. Place the digger or any **SmartPoint®** vehicle (each sold separately) on any of the construction site's five **SmartPoint®** locations to trigger fun sounds, songs or phrases.
2. Lift objects on the crane basket lift by turning the crane basket lift crank.
3. Move the crane back and forth to move objects from one area of the job site to another.
4. Drop objects off at the rock sorter, and watch them drop to the bottom.

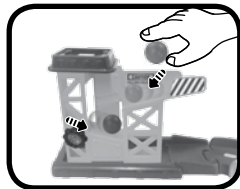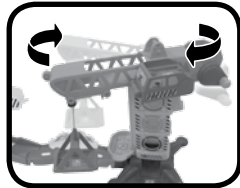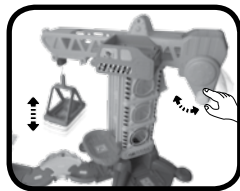

 
5. Place the digger on the **SmartPoint®** crane tower lift, and move up and down the crane tower.

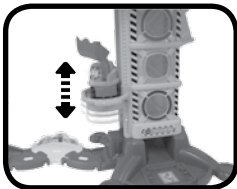

 6. Place the digger in the **SmartPoint®** control platform.

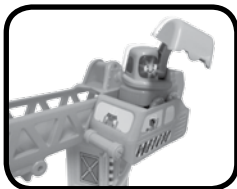

 7. Insert the shape sorter pieces into the correct locations on the crane tower.

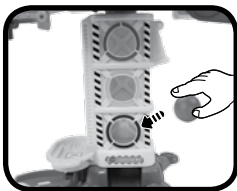

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech learning products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on at 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

