



Instruction Manual

SPIDEY LEARN & GO



© MARVEL

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years




4-10 years



INTRODUCTION

Thank you for purchasing the **Spidey Learn & Go** by VTech®! Level up your little one's preschool skills with 5 action-packed games exploring letters, numbers, shapes, counting and phonics. Designed with first-time gamers in mind, **Spidey Learn & Go** features simple controls and dynamic colour-changing eye effects as Spidey and his Amazing Friends guide you through the adventure!

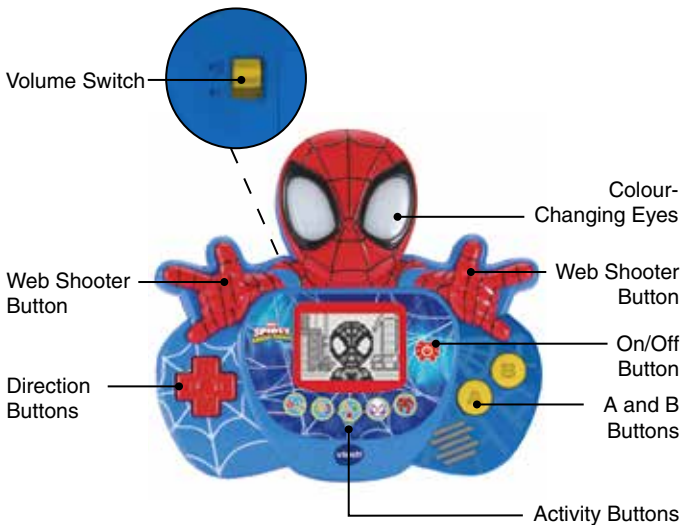

INCLUDED IN THIS PACKAGE


- One **Spidey Learn & Go**
- 3 AAA batteries (for demo purposes only)
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

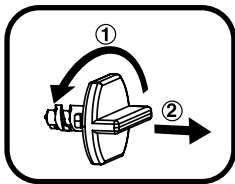

Unlock the Packaging Locks

- ① Turn the packaging locks several times anti-clockwise.
- ② Pull out and discard the packaging locks.

GETTING STARTED

• HOW TO EXIT TRY ME MODE

If you've just taken the **Spidey Learn & Go** out of the packaging for the first time, you need to disable Try Me mode before playing.

To disable Try Me mode, press the **On/Off Button** to turn the unit On and then slide the **Volume Switch** to Low position.

• TURN ON THE UNIT

Press the **On/Off Button** to turn the unit On and enter normal play mode, where Spidey will greet you. Press the **Activity Buttons** to enter the corresponding game.

Note: The included batteries are for demo use only. We recommend replacing the included batteries with new batteries before using the **Spidey Learn & Go**.

• BATTERY STATUS


When the batteries are exhausted, the low battery icon will be displayed and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.

• AUTO POWER OFF

To preserve battery life, **Spidey Learn & Go** will automatically power Off if there is no operation for a period of time.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA/AM-4/LR03 batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

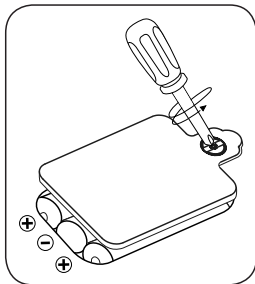

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off Button

Press this button to turn the unit On or Off.



2. Activity Buttons

Press these buttons to start a game.



3. A or B Button

Press these buttons to confirm a selection or to interact with games.



4. Direction Buttons

Press these buttons when making a selection or during game play.



5. Web Shooter Buttons

Press these buttons to enter Web Shoot mode and view fun animations.



6. Volume Switch

Slide the selector to set Low or High volume.



ACTIVITIES

1. Spidey and Friends

Once the unit has been turned On, press the **A Button**, the **B Button** or the **Direction Buttons** to view fun animations of Spidey and his Amazing Friends.



2. Web-Letter Lab

Select a letter to view the letter with vocabulary animations and hear the letter sounds. You can also select to start a web mission:



Spidey loves to do science and experiments. This means he can create a variety of inventions. Remember the letter shown on the laboratory bottle at the beginning of each question and each time that letter appears, press the **A** or **B Button** to catch the bottle. Let's see what amazing web fluid we can invent.

3. Number Swing

Select a number to view collections of objects and hear them counted aloud. You can also select to start a web mission:



Oh no, Spin's Techno-Racer has been stolen by Green Goblin. Time to swing across rooftops to chase the baddie. Press the **Direction Buttons** to choose the building with the correct number and press the **A** or **B Button** to swing.

4. Shape Build

Select a shape to hear about its special features and start a mission.

Help Hulk rebuild after Doc Ock has destroyed the amusement park! Press the **Direction Buttons** to collect and catch the correct shapes.



5. Deep Dive

Rhino has stolen gold coins and dumped them into the sea! Ghost-Spider needs to dive deep to collect the coins. Press the **Direction Buttons** to move Ghost-Spider and collect the coins, but watch out for the obstacles.



6. Lost and Found

Spidey's backpack has been taken by a recycling truck and TRACE-E was inside! TRACE-E has sent a message on the comm-link telling Spidey how to find them. Watch carefully and remember the arrow sequence, then press the **Direction Buttons** to repeat the sequence to catch up with TRACE-E.



7. Web Shoot

Press Spidey's **Web Shooter Buttons** to enter Web Shoot mode and view fun animations.



8. Screen Contrast Setting

Press and hold the **Direction Buttons** to the right, then press the **On/Off Button** to turn On the unit. This will activate the Screen Contrast Menu. Use the **Direction Buttons** to adjust the screen's contrast, and press the **A or B Button** to confirm the setting and close the menu.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Environmental Phenomena

Static electricity may cause the unit to malfunction. In cases where the unit malfunctions due to static electricity, reset the system by pressing and holding the **ON/OFF Button** for 10 seconds until the unit turns on again, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

