
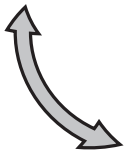


vtech®

Parent's Guide

SWITCH & GO[®] DiNOS

Turmoil the Triceratops

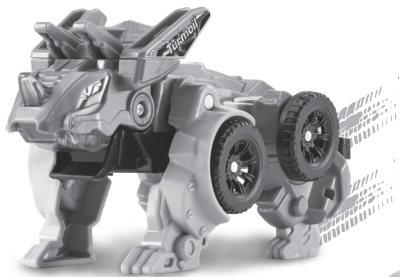

91-003922-000 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years





To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Switch & Go Dinos® Turmoil the Triceratops**. Hi, I'm **Turmoil the Triceratops**. I'm powerful and I can transform into a super cool car! I can also project light, which makes me look like I'm breathing fire! Let's Switch & Go!

Head Trigger

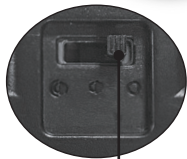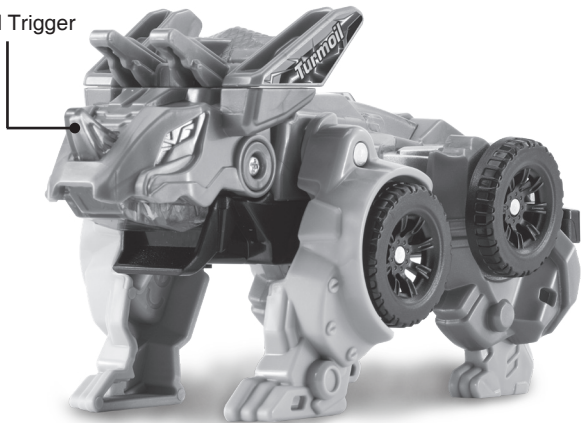

Off/Volume Switch

INCLUDED IN THIS PACKAGE

- One VTech® SWITCH & GO DINOS® Turmoil the Triceratops
- One parent's guide


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover underneath the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
3. If a depleted battery is present, remove it by pulling up on one end of the battery.
4. Install a new AA (LR6/AM-3) battery following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

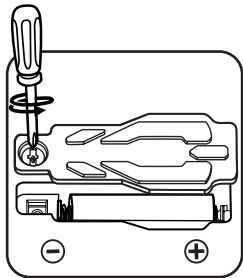

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:




Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

1. OFF/VOLUME SWITCH

To turn the unit **ON** or to adjust the volume, slide the switch to **LOW** () / **HIGH** (). To turn the unit **OFF**, slide the switch to **OFF** ()



2. HEAD TRIGGER

Tilt the **HEAD TRIGGER** back to hear fun phrases, dinosaur facts and cool dinosaur sounds in dino mode. In vehicle mode, tilt the head to hear fun phrases and great vehicle sounds. The light projection will show with the response.




3. MOTION SENSOR

Move Turmoil to hear wild dinosaur sounds and phrases in dino mode. In vehicle mode, move Turmoil to hear great vehicle sounds.


4. AUTOMATIC SHUT-OFF

To preserve battery life, Turmoil will automatically turn off after approximately 30 seconds without input. Turmoil can be woken up again by tilting Turmoil's head back, or by switching Turmoil between dino and vehicle modes. Turmoil will also automatically turn off when battery power is very low.


HOW TO SWITCH TURMOIL

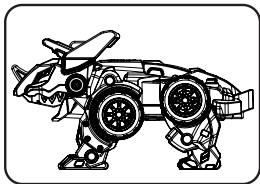


1. Dino mode.

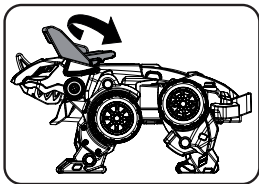


2. Rotate the shield 180 degrees.

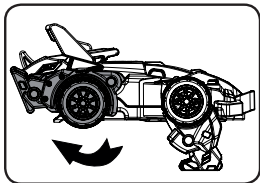


3. Pull the front legs up and towards the head.

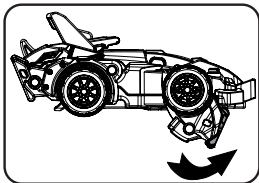

4. Pull the feet backwards as illustrated.

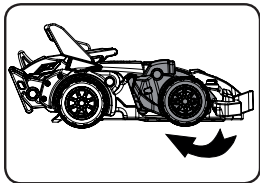

5. Pull the legs towards the head as illustrated.

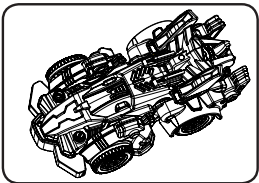

6. Vehicle mode.

NOTE

To switch Turmoil back into a dinosaur, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the dino clean by wiping it with a slightly damp cloth.
2. Keep the dino out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the dino will not be in use for an extended period of time.
4. Do not drop the dino on hard surfaces and do not expose the dino to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the dino **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the dino stand for a few minutes, then replace the batteries.
4. Turn the dino **ON**. The dino should now be ready to play with again.
5. If the dino still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003922-000 (UK)