

**vtech**<sup>®</sup>  
Baby

# Parent's Guide

## Musical Cuddle Bug



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **E**lectronic Learning Computers

**Cool, aspirational and inspiring computers for curriculum related learning**

### **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

#### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

#### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

#### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

3-6 years



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

 
# INTRODUCTION

The **Musical Cuddle Bug** features various soft fabrics and colourful patterns! Enjoy fun responses which teach Do-Re-Mis, colours and shapes! Press the colour changing tummy button for further responses, sing-along songs and more! Hear fun and exciting melodies in Daytime mode, before switching to Sleepytime mode for calming classical melodies.

8 Shape Buttons

On/Off/Volume Switch

Mode Switch

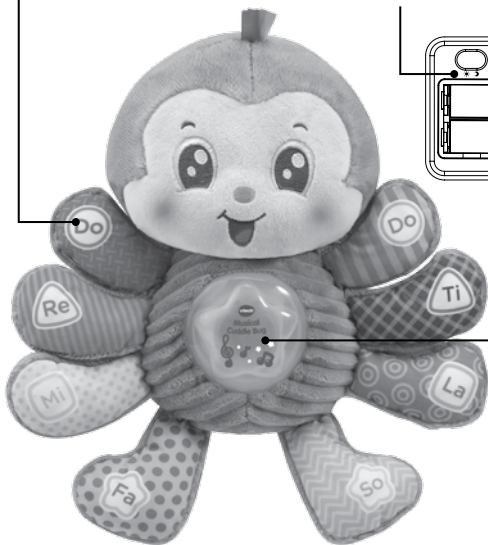

Light Up  
Tummy Button

# INCLUDED IN THIS PACKAGE

- One **Musical Cuddle Bug**
- One parent's guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

 
## NOTE:

Please keep this parent's guide as it contains important information.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the electronic module. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove the old batteries by pulling up on one side of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

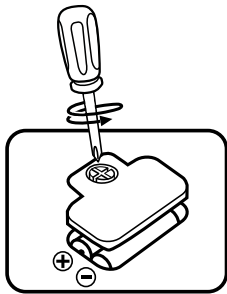

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.




For more information, please visit:

 
[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)



# PRODUCT FEATURES


## 1. On/Off/Volume Switch

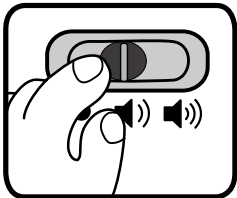To turn the unit **On**, slide the **On/Off/Volume Switch** to the **Low**  or **High**  volume position. You will hear a playful phrase and a song. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off**  position.



## 2. Mode Switch

 Slide the **Mode Switch** to **Daytime Mode**  or **Sleepytime Mode** . You will hear different songs, phrases and sounds in each mode. The light flashes in different colours in **Daytime Mode** and it slowly changes colours in **Sleepytime Mode**.

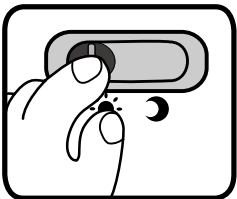

## 3. Eight Fabric Legs With Eight Shape Buttons

The eight multicoloured legs include eight musical **Shape Buttons** which teach musical notes, colours, shapes and play eight songs.



## 4. Automatic Shut Off

To preserve battery life, the **Musical Cuddle Bug** will automatically power down after approximately 55 seconds without input. The unit can be turned on again by pressing any button.

### Note:

If the unit powers down during play, please install a new set of batteries.

# ACTIVITIES

## 1. Light Up Tummy Button

Press the **Light Up Tummy Button** to learn numbers and to hear playful songs and melodies in **Daytime Mode**. When in **Sleepytime Mode**, you will hear soothing songs and lullabies. Press and hold the **Light Up Tummy Button** in **Sleepytime Mode** to activate approximately five minutes of lullabies. The light will flash in different colours in **Daytime Mode** and the light will slowly change colours in **Sleepytime Mode**.



## 2. Shape Buttons

Press the **Shape Buttons** to learn colours, shapes, music notes and to hear short tunes in **Daytime Mode**. When a melody is playing and the **Shape Buttons** are pressed, the melody will then play note by note. Simply stop pressing the buttons to resume normal play. The light will flash in different colours. In **Sleepytime Mode** you will hear cute sounds and a soothing melody. The light will slowly change colours.



# MELODY LIST

1. Cello Suite No.1 in G - Bach
2. Für Elise - Beethoven
3. Piano Sonata in C, K. 545 1st Movement - Mozart
4. Nocturne Op. 9 No. 2 - Chopin
5. The Blue Danube Waltz - Strauss
6. Canon in D - Pachelbel
7. Clair de Lune - Debussy
8. Swan Lake Waltz - Tchaikovsky
9. Looby Loo
10. A-Tisket, A-Tasket
11. Pat-a-Cake
12. Skip to My Lou
13. Polly Put the Kettle On
14. Ta-ra-ra Boom-de-ay
15. The Glow-Worm

# SING-ALONG SONG LYRICS

## Song 1

I'm a snuggly little bug,  
I like it when we cuddle up.  
Hug me, kiss me, snuggle with me,  
I'll be your friend forever.

## Song 2

One, two, buckle my shoe,  
Three, four, knock at the door,  
Five, six, pick up sticks,  
Seven, eight, lay them straight,  
Nine, ten, a big fat hen.

## Song 3

Are you sleeping, are you sleeping?  
Little one, little one.  
Morning bells are ringing, morning bells are ringing!  
Ding ding dong, ding ding dong!



## CARE & MAINTENANCE

 
1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The unit is surface washable. Remove the electronic module before wiping down the unit.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

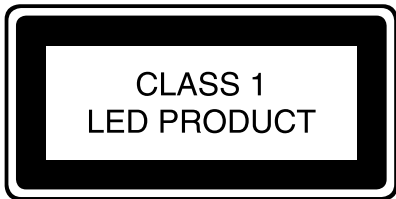

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

Australian Customers:

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

NZ Customers:

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

