

vtech®

Parent's Guide

**Toot-Toot
Friends™**

Moonlight Campervan



91-003837-001 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Toot-Toot Friends™ Moonlight Campervan!**


Climb aboard for a light-filled journey! Drive to your next holiday destination, then open to reveal the cool campervan interior. Go camping with friends and project a starry light show! Explore colours, seasons and weather with two adult characters, a baby and a MagicPoint™ location that plays fun sounds, music and phrases.

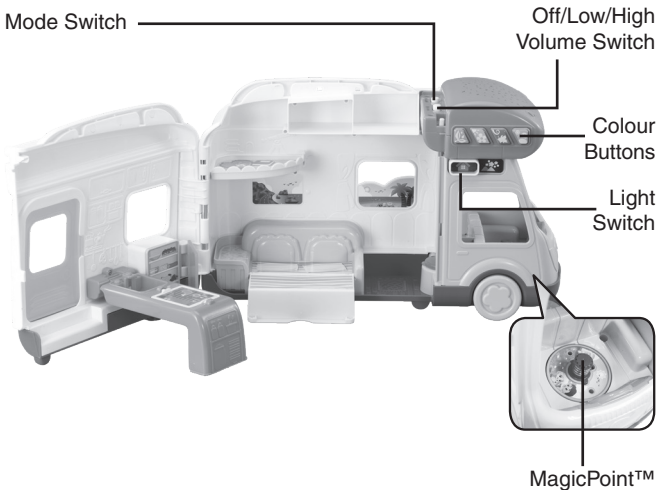

INCLUDED IN THIS PACKAGE

NOTE: This toy is not intended for teething.

 - **Toot-Toot Friends™ Moonlight Campervan**
- Parent's guide

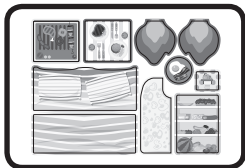

- Three characters
- One label sheet

 


- One campfire
- One pan
- One suitcase
- Two chairs

WARNING:


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

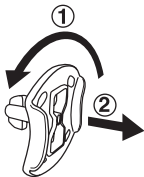Removing the Packaging Lock

- ① Rotate the packaging lock 90 degrees anticlockwise.
- ② Pull out the packaging lock and discard.



Note: Please cut and discard the paper ties as shown in the pictures before playing with the unit. The paper ties are not part of the product and should be discarded for your child's safety.

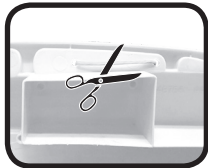

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom right of the unit and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

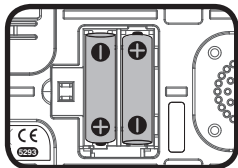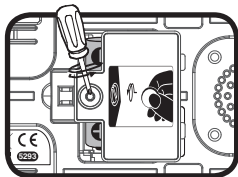

BATTERY NOTICE

- For those products can works properly with alkaline batteries & Ni-MH Rechargeable Batteries.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.

- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

 
NOTE

This product is in Try Me mode in the packaging. To activate Normal Play mode, please follow these steps:

1. Turn the unit ON.
2. Place one of the adult characters onto the MagicPoint™.
3. When you hear two short sounds, normal game play has been activated.




LABEL APPLICATION

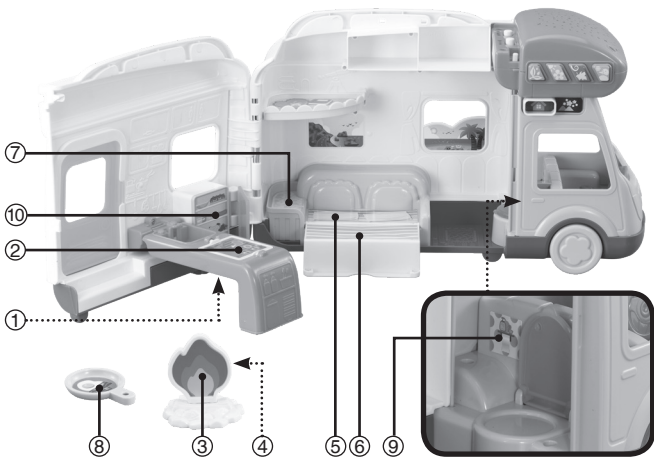Please securely stick the labels to the play set as indicated below:






PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to either the Low Volume  or High Volume  position. To turn the campervan **Off**, slide the switch to the **Off**  position.



2. Mode Switch

Slide the **Mode Switch** to the right to enter Learning mode . Slide the **Mode Switch** to the middle to enter Camping Fun mode . Slide the **Mode Switch** to the left to enter Night-time mode .



3. Colour Buttons

Press the four **Colour Buttons** to learn about colours, the seasons and weather.



4. Light Switch

Slide the **Light Switch** to the left  to see beautiful lights shine inside the campervan. Slide the **Light Switch** to the right  to see beautiful lights shine above the campervan. Turn off the unit if you feel uncomfortable.



5. Push Along

Hear songs and phrases as you roll the campervan along.




6. MagicPoint™

Place the adult characters onto the **MagicPoint™** location to hear songs and phrases.



7. Transformation

The campervan can be opened to show the interior living space, and closed again to go for a drive. Hear fun sounds when you open or close the campervan.

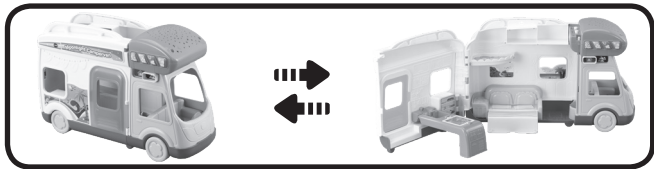

8. Automatic Shut-Off

To preserve battery life, the **Toot-Toot Friends™ Moonlight Campervan** will automatically shut off after several minutes of no input. The unit can be turned on again by sliding the **Off/Low/High Volume Switch** to the Low Volume position or High Volume position, or by sliding the **Mode Switch** to Learning mode, Camping Fun mode or Night-time mode position.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

Mode 1: Learning Mode

Slide the **Mode Switch** to the right position to enter this mode. Press the four **Colour Buttons** to learn about colours, the seasons and weather. Place the adult characters onto the **MagicPoint™** location to hear fun sounds.

Mode 2: Camping Fun Mode

Slide the **Mode Switch** to the middle position to enter this mode. Press the four **Colour Buttons** to hear what we can do whilst camping during the different seasons. Place the adult characters onto the **MagicPoint™** location to hear them talk and sing.

Mode 3: Night-time Mode

Slide the **Mode Switch** to the left position to enter this mode. Press the four **Colour Buttons** to hear melodies. Place the adult characters onto the **MagicPoint™** to hear them hum and talk.

SING-ALONG SONG LYRICS

Song 1:

Hop on!
Family road trips are really fun!
Laughing and singing under the sun.

Song 2:

The world is full of things to see!
From high, high mountains, to low valleys,
Big, big trees and little bumblebees,
How lucky are we! Yeah!

Song 3:

In the night sky, the stars are bright!
We're together under the moonlight,
Telling jokes and stories at our campsite.

Song 4:

When we find our campsite, we set up camp!
We set up camp!
When it gets dark, we turn on our party lamp!
Our party lamp!

Song 5:

Camping is a great way to be outdoors.
When you're outside you can imagine
Flowers or dinosaurs!

CARE & MAINTENANCE

1. Keep the unit and its metal parts clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

EPILEPSY WARNING

Due to a pre-existing condition, a small percentage of users may experience epileptic seizures when viewing flashing lights or patterns.

Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing.

TROUBLESHOOTING

If for some reason the toy stops working or malfunctions whilst a character is on the **MagicPoint™** location, please remove the character and place it back onto the **MagicPoint™**. If the toy still does not function, or if for some reason the toy stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.



CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

Product Warranty/ Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

