

**vtech**<sup>®</sup>

**User's Manual**

# **Learning Tunes Music Player**



© 2017 VTech  
All rights reserved  
Printed in China  
91-003292-002 UK

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Learning Tunes Music Player!**  
Your child will love listening to the music, playing games, singing along with the songs and dancing around!



- |                           |                                 |
|---------------------------|---------------------------------|
| ① LETTER SONGS BUTTON     | ⑪ ON/OFF BUTTON                 |
| ② NUMBER SONGS BUTTON     | ⑫ CLOCK CHIMES BUTTON           |
| ③ CLASSICAL MUSIC BUTTON  | ⑬ WHAT LETTER COMES NEXT BUTTON |
| ④ HIP HOP MUSIC BUTTON    | ⑭ ANIMAL REMIX BUTTON           |
| ⑤ INSTRUMENT REMIX BUTTON | ⑮ ROCK MUSIC BUTTON             |
| ⑥ PREVIOUS BUTTON         | ⑯ BOOGIE DANCE BUTTON           |
| ⑦ TEMPO BUTTON            | ⑰ NEXT BUTTON                   |
| ⑧ PLAY/PAUSE BUTTON       | ⑱ VOLUME BUTTON                 |
| ⑨ LIGHT-UP MUSIC BUTTON   |                                 |
| ⑩ LCD SCREEN              | ⑲ LED LIGHT                     |

# INCLUDED IN THIS PACKAGE

- One **Learning Tunes Music Player!**
- One set of headphones
- User's manual

## WARNING:


**All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.**

## NOTE:

Please keep this user's manual as it contains important information.

## Unlock the packaging lock:


- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

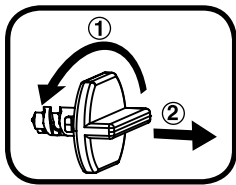

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 2 new AAA size LR03/AM-4 batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover to secure it.

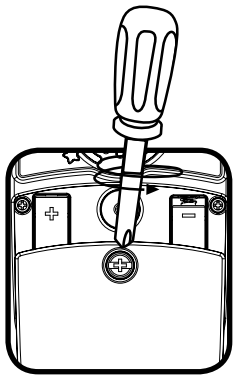

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable.)
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES

## 1. ON/OFF BUTTON

Press the **ON/OFF BUTTON**  to turn the unit **ON**. Press the **ON/OFF BUTTON** again to turn the unit **OFF**.

## 2. FUNCTION BUTTONS

### A) PLAY/ PAUSE BUTTON

Play or pause the music by pressing the **PLAY/ PAUSE BUTTON**.

### B) PREVIOUS BUTTON or NEXT BUTTON

Press the **PREVIOUS BUTTON** or **NEXT BUTTON** to make a selection.

### C) LIGHT-UP MUSIC BUTTON

Press the **LIGHT-UP MUSIC BUTTON** to hear music or confirm your selection.

### D) TEMPO BUTTON


Press the **TEMPO BUTTON** to adjust the tempo of the melodies.

### E) VOLUME BUTTON

Press the **VOLUME BUTTON** to adjust the volume.

## 3. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

When you see this low battery icon  on the screen or the unit repeatedly powers down, please insert new batteries and try switching it on again.

# ACTIVITIES

## 1. LETTER SONGS MODE

Learn letters and phonics while listening to letter songs. Press the **PREVIOUS & NEXT BUTTONS** to select different songs.

## 2. NUMBER SONGS MODE

Listen to number songs while watching cute animations to learn about numbers and counting.

## 3. WHAT LETTER COMES NEXT MODE

Listen to the ABC song. When the music stops, use the **PREVIOUS & NEXT BUTTONS** to choose the letter that comes next.

## 4. CLOCK CHIMES MODE

Listen to the clock chimes and press the **PREVIOUS & NEXT BUTTONS** to select the correct number of chimes.

## 5. CLASSICAL MUSIC MODE

Listen to classical music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

## 6. HIP HOP MUSIC MODE

Enjoy some hip hop music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

## 7. ROCK MUSIC MODE

Hear rock music by pressing the **PREVIOUS & NEXT BUTTONS** to select different melodies.

## 8. ANIMAL REMIX MODE

Listen to the animals sing cute songs by pressing the **PREVIOUS & NEXT BUTTONS** to select different animals.

## 9. INSTRUMENT REMIX MODE

Remix the melody by pressing the **PREVIOUS & NEXT BUTTONS** to select different instruments.

## 10. BOOGIE DANCE MODE

Dance and “freeze” when the music stops. Listen to the words in the song and boogie down!



# SING-ALONG SONGS

## SONG 1

It's dancin' time, let's boogie down!  
Move and groove and shake around!  
C'mon now, let's turn up the beat!  
Play it again, put it on repeat!

## SONG 2

1 little, 2 little, 3 little penguins  
4 little, 5 little, 6 little penguins  
7 little, 8 little, 9 little penguins  
10 will waddle away

## SONG 3

Clap, clap, clap your hands!  
Bounce, bounce, bounce around!  
Stomp, stomp, stomp your feet!  
Jump, jump, touch the sky!  
Boogie, boogie, boogie down!

## SONG 4

Dance, dance, dance it out!  
Wave, wave, wave your arms!  
Dance, dance, dance all day!  
Slow, slow, slow it down!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1  
LED PRODUCT



# PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

