



# User's Manual

## Cosy Kitten Carrier



© 2016 VTech  
All rights reserved  
**Printed in China**  
91-003226-001 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

## **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

**3-6 years**

 
**Birth-36 months**



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Cosy Kitten Carrier** learning toy! Come and play with the **Cosy Kitten Carrier**. Slide, press and roll the sliders, buttons and rollers and be rewarded with playful phrases, cute songs and fun sounds. Open the door to the pet carrier and take your kitty friend with you wherever you go!

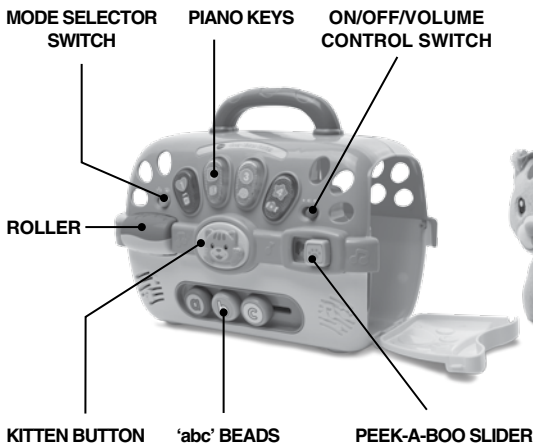


# INCLUDED IN THIS PACKAGE

- One VTech® Cosy Kitten Carrier learning toy
- One soft kitten
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this instruction manual as it contains important information.

 **Unlock the packaging locks:**

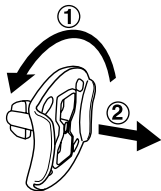


① Rotate the packaging locks 90 degrees anti-clockwise.

② Pull out the packaging locks.

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover inside the pet carrier. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

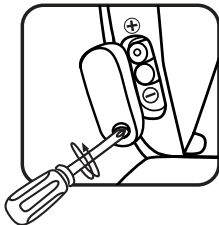

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

## PRODUCT FEATURES

### 1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **LOW VOLUME** ( ) or the **HIGH VOLUME** ( ) position. To turn the unit **OFF**, slide the **ON/OFF/VOLUME CONTROL SWITCH** to the **OFF** ( ) position.



### 2. MODE SELECTOR SWITCH

To choose a mode of play, slide the **MODE SELECTOR SWITCH** to the **LEARNING MODE** ( ) or the **PET CARE MODE** ( ).



### 3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Cosy Kitten Carrier** will automatically power-down after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

**NOTE: If the unit repeatedly powers down quickly or the red light flashes three times then powers down, we suggest changing the batteries.**

## ACTIVITIES

1. Slide the **ON/OFF/VOLUME CONTROL SWITCH** to turn the unit ON. You will hear a song, a playful phrase and a sound. The lights will flash with the sounds.



2. Press the **PIANO KEYS** to learn numbers, colours, shapes and objects in the **LEARNING MODE** and hear playful phrases in the **PET CARE MODE**. The lights will flash with the sounds.



3. Spin the **ROLLER** to hear a variety of fun sounds in both modes. The lights will flash with the sounds.



 
4. Press the **KITTEN BUTTON** to hear playful phrases and sounds in the **LEARNING MODE** and answer simple questions in the **PET CARE MODE**. The lights will flash with the sounds.



5. Slide the **PEEK-A-BOO SLIDER** to see fun surprises and hear playful phrases in both modes. The lights will flash with the sounds.



6. Slide the '**abc**' **BEADS** to learn letter sounds and hear fun melodies in the **LEARNING MODE** and hear a variety of fun melodies in the **PET CARE MODE**. The lights will flash with the sounds.

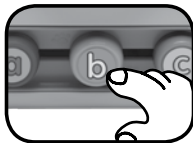

7. Open or close the **PET CARRIER DOOR** to hear playful responses and learn opposites in both modes. The lights will flash with the sounds.



8. If there is no input to the unit after approximately 10 seconds, you will hear a phrase and a song in the **LEARNING MODE** and a phrase and short tune in the **PET CARE MODE**. After another 10 seconds without input, you will hear a song in both modes. If there continues to be no input for another 10 seconds, the unit will play a short tune and power down. The unit can be turned on again by pressing any button, spinning the roller, sliding the slider or opening/closing the door.

## MELODY LIST:

1. Did You Ever See a Lassie?
2. A-Tisket, A-Tasket
3. Are You Sleeping?
4. Pop! Goes the Weasel
5. For He's a Jolly Good Fellow
6. Polly Put the Kettle On
7. Home On the Range
8. Teddy Bears' Picnic
9. Good Morning Merry Sunshine
10. Pussy Cat, Pussy Cat
11. Here We Go Round the Mulberry Bush
12. Mary, Mary Quite Contrary
13. Jack and Jill
14. Little Miss Muffet
15. Riddle Song
16. Skip To My Lou
17. Georgie Porgie
18. Looby Loo
19. Alouette
20. See Saw Margery Daw

# SING-ALONG SONG LYRICS

## SONG 1

1, 2, 3, then comes 4.

Join me to learn about numbers, shapes and more!

## SONG 2

Knock-knock, knock-knock,

It's time to get up.

Tick-tock tick-tock.

I'm ready to run, play and talk.

## SONG 3

Ah, buh, cuh, cuh is for cat,

meow, meow, I'm a cat!

## SONG 4

My heart beats with love!

## SONG 5

The circle is round like my ball of wool.

## SONG 6

Look at my comb, it looks like a square.

## SONG 7

Twinkle twinkle little star,

Meow meow meow meow meow.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

## IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1  
LED PRODUCT



# PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.