

vtech®

 
Instruction Manual

SUPER SOUND KARAOKE




INTRODUCTION

Bring the party wherever you go! This portable **Bluetooth®** speaker is a must for parties, with its included microphone (2 metre cable) you can get the karaoke party going! The multicoloured party light adds to the atmosphere, as well as controls to adjust volume, echo, and even your voice with voice changing effects! Warm up your singing voice with the built-in vocal warm up activity! Reduce/remove the vocal track of your songs at the push of a button!

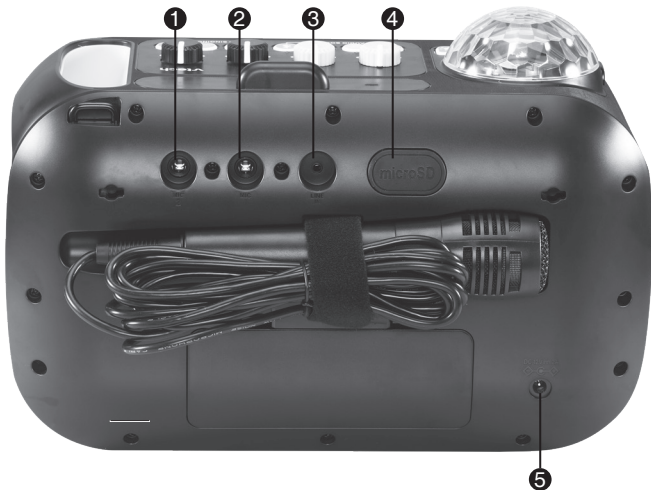

 - ❶ 6.35mm Mic 2 Jack
- ❷ 6.35mm Mic 1 Jack
- ❸ Line-in Jack
- ❹ microSD Card Slot
- ❺ AC Adaptor Jack

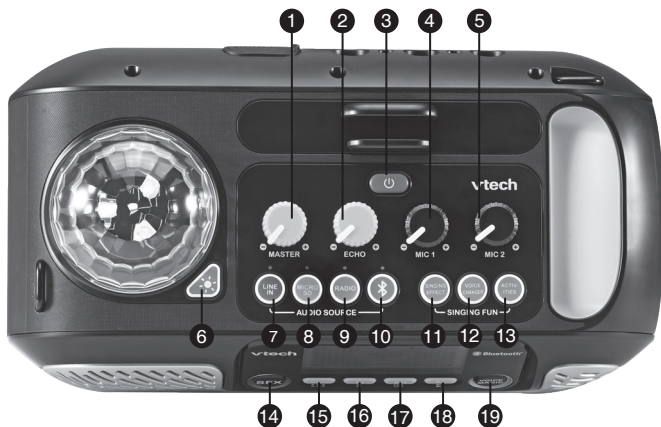

1 Master Volume Dial

2 Echo Dial

3 Power Button 

4 Mic 1 Volume Dial

5 Mic 2 Volume Dial

6 Party Light On/Off Button 

7 Line-in Button 

8 microSD Button 

9 Radio Button 

10 **Bluetooth®** Button 

11 Singing Effect Button 

12 Voice Changer Button 

13 Activities Button 

14 SFX Button 

15 Mode Button 

16 Back Button 

17 Play/Pause/OK Button 

18 Next Button 

19 Voice Magic Button 

INCLUDED IN THE PACKAGE

- One VTech® Super Sound Karaoke
- Quick Start Guide

NOTE:

 
Please save this Instruction Manual as it contains important information.

NOTE:

Before first use, we recommend ensuring that the volume is lowered.

Removing the Packaging Locks:

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

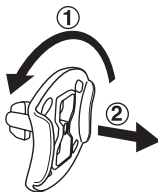

GETTING STARTED

 
Note:

This product is in Try-me mode in the packaging.

Plug the Microphone into any 6.35mm Mic Jack to exit Try-me mode.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Remove the battery cover on the back of the unit.
3. If used batteries are present, remove them by pulling up on one end of each battery.
4. Install 6 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover.

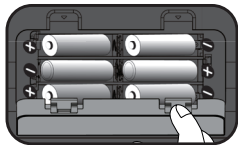

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the product.
- Dispose of batteries safely.
- Do not dispose of batteries in fire.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

POWER ADAPTOR CONNECTION

- Make sure your Super Sound Karaoke is turned off.
- Locate the AC Adaptor Jack on the back of the unit.
- Connect an AC Adaptor (not included) to the AC Adaptor Jack.
- Plug the adaptor into a power outlet.
- Press the Power Button to turn the system on.

Note:

When the unit is not going to be used for an extended period of time, unplug the adaptor.

Safety information:

We recommend using a power supply (AC/DC adaptor) of the below specification: Power rating: 12V/2A or above DC output with 5.5mm/2.5mm plug (positive centre).

- Never clean a plugged in product with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be scrapped.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the unit **ON**. Press it again to turn the unit **OFF**.



2. Line-in Jack

Connect an external music player here using a 3.5mm jack audio cable (cable and music player not included).



3. microSD Card Slot

Insert a microSD card (we recommend 8 or 16 GB) in this slot and push gently until you hear a click sound (microSD card not included).



4. AC Adaptor

Connect the **Super Sound Karaoke** to AC power (adaptor not included).



5. Mic 1 and Mic 2 Jack

 
Plug a Microphone into the 6.35mm jack to connect (only one Microphone included).



6. Party Light On/Off Button



Press this button to switch the **Party Light ON/OFF**.

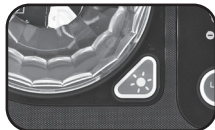

BUTTONS AND FEATURES

1. Volume Control

Master Volume Dial, Mic 1/Mic 2 Dial, Echo Dial:

Turn clockwise to increase the volume, anticlockwise to decrease.



2. Line-in Button



Press this button to listen to the Music from your connected external music player.



Note: All playback controls (including play/pause, back, next) can only be controlled by the external music player.

The “Voice Magic” feature is unavailable for Line-in.

3. microSD Button



Press this button to listen to music from the microSD card in (MP3 file format). Press the Mode Button to “shuffle” or “repeat” the music.



4. Radio Button



Press this button to listen to FM radio. Change the station by pressing the Back or Next Buttons. If the signal is weak, please try another station or move Super Sound Karaoke to a different area.



5. Bluetooth® Button



Press this button to hear Music from the **Bluetooth®** connected device. Select “VTech Super Sound Karaoke” from your **Bluetooth®** device, then input the PIN displayed on your Super Sound Karaoke. Press the Mode, Back or Next Buttons if you would like to turn the PIN off. If there are any connection problems, please reset the **Bluetooth®** settings on your device.



6. Singing Effect Button



Press to apply special effects to your voice.



7. Voice Changer Button

Press this button to apply 1 of 4 voice changing effects to your voice.



8. Activities Button

Press the Activities Button to enter the Activities menu.

Use the Left/Right Buttons to select an activity, press the OK Button to confirm.

Activity 1: Singing Warm Up

First, listen to the built-in instructor's guide voice, and then repeat.

You can press the Back/Next Button to select a different scale.

Press the Mode Button if you would like to quit the activity.



Activity 2: Sing As You Like

Select the Background Music you would like, and then sing along to it.



Activity 3: Singing Concert

Sing and hear an audience cheer you on!



9. SFX Button

Press this button to play a random fun sound effect.



10. Mode Button

When playing music from a microSD card, press this button to toggle shuffle and repeat functions.

Press this button during other activities to quit the activity.



11. Back Button, Play/Pause/OK Button and Next Button

Press these buttons to select and control songs and activities.



12. Voice Magic Button

Press this button to reduce or remove the main vocal track of the song you're listening to.

Note: This feature is not available during Line-in mode.

This feature may not work with every song, but works best for studio recorded songs.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

Bluetooth® Statement

The *Bluetooth®* word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5474 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

FM Radio:

Frequency Band: 87.5MHz – 108MHz

Bluetooth®:

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 1.6mW (2dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5474 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

FM Radio:

Frequency Band: 87.5MHz – 108MHz

Bluetooth®:

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 1.6mW (2dBm)

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Important Additional Instructions:

Ecodesign Information	(EU) 2023/826 amending Regulation (EC) No. 1275/2008
Manufacturer's name	VTECH
Product type	Karaoke Machine
Model No.	5474
Power consumption in off mode	0.2 W
Default time to switch to off mode	15 minutes
Adaptor Information	AC/DC adaptor, Conform to the ERP norm, DC output 12V/2A

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

