




## Parents' Guide

# PAW Patrol: The Movie: Learning Tab-top



© & TM Spin Master Ltd. ©2021 Viacom

91-003982-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

### **vtech Baby**

Toys that will stimulate their interest in different textures, sounds and colours

#### **I am...**

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to reach, grasp, sit up, crawl and walk

**Birth-36 months**



### **Pre-School**

Interactive toys to develop their imagination and encourage language development

#### **I want...**

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



### **Primary Learning** **Curriculum**

Goal, inspirational and inspiring resources for curriculum related learning

#### **I need...**

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

**4-10 years**



# INTRODUCTION

Thank you for purchasing the **PAW Patrol: The Movie: Learning Tab-top!**

Six exciting activities introduce letters, phonics, spelling, typing, maths, memory, shapes and weather conditions! Six character buttons play fun animations and sound effects. Get ready for a learning adventure with the PAW Patrol!

Support Stand



Chase Button

Skye Button

Clock Button

Marshall Button

Ryder Button

Liberty Button

Rubble Button

6 Learning Game Buttons

Settings Button

 
Music On/Off Button

26 Letter Buttons

Left Button

Right Button

OK Button

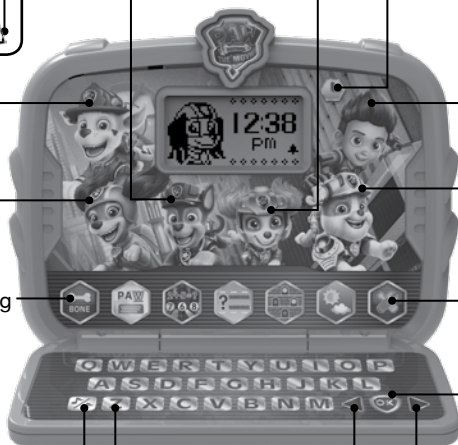

# INCLUDED IN THIS PACKAGE

- **PAW Patrol: The Movie: Learning Tab-top**
- Parents' Guide

 
## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please keep the Parents' Guide as it contains important information.

## Unlock the Packaging Locks

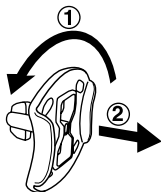


- ① Turn the packaging lock anti-clockwise several times.
- ② Pull out the packaging lock and discard.

# INSTRUCTIONS
 
## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

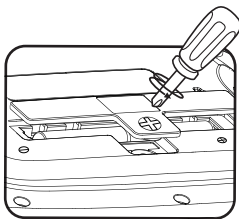

4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# PRODUCT FEATURES

## 1. Keyboard

Open the keyboard to begin playing.  
Close the keyboard to go into sleep mode.



## 2. Clock Button

 
Press the **Clock Button** to show the time or to wake the unit up from sleep mode.

## 3. Learning Game Buttons



Press one of the **Learning Game Buttons** to choose any of the six learning games.

## 4. Character Buttons



Press the **Marshall, Liberty, Chase, Skye, Rubble and Ryder Buttons** to hear character voices and see fun animations.

## 5. Letter Buttons

Press a **Letter Button** to learn letters or to answer letter-related questions within the games.

## 6. Left and Right Buttons

Press the **Left or Right Button** to navigate on the screen or to select an option.

## 7. OK Button



Press this button to confirm a selection.

## 8. Settings Button



In the Settings menu, press the **Left** or **Right Button** to scroll through the various options:

### A. Time Setting

Press the **Left** or **Right Button** to select between 12-hour and 24-hour time format, then press the **OK Button** to confirm.



### B. Clock Face

Press the **Left** or **Right Button** to select from six different clock faces, then press the **OK Button** to confirm.



### C. Cuckoo Clock

To activate or disable the Cuckoo Clock, press the **Left** or **Right Button** to turn the hourly chime on or off, then press the **OK Button** to confirm. When activated, the Cuckoo Clock will chime at the top of each hour between 7 a.m. and 7 p.m. when in Sleep mode.



### D. Alarm Clock

Press the **Left** or **Right Button** to select from three alarm tone options, then press the **OK Button** to confirm.



### E. Volume Setting

Use the **Left Button** to reduce the volume or use the **Right Button** to increase the volume level. Press the **OK Button** to confirm.



## F. Screen Contrast

Use the **Left Button** to reduce the screen contrast or use the **Right Button** to increase the screen contrast. Press the **OK Button** to confirm.



## 9. Background Music On/Off Button

Press this button to turn the background music on or off.

## 10. Automatic Shut-Off

To preserve battery life, the **PAW Patrol: The Movie: Learning Tab-top** will go to sleep mode after several minutes of inactivity or when the keyboard is closed. The unit can be turned **On** again by pressing the **Clock Button** or by opening the keyboard.

## 11. Low Batteries




The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

## 12. Support Stand

The product has a support stand at the back to allow it to stand upright.

# TO BEGIN PLAY

When using the unit for the first time, you must deactivate Try-Me mode to play. Open the keyboard, then press the **Letter Discover**

**Button**  + **Left Button**  + **OK Button**  for approximately one second to deactivate Try-Me mode. You will hear three beeping sounds when the Try-Me mode is deactivated. Press the **Left** or **Right Button** to select between 12-hour and 24-hour time format, then press the **OK Button** to confirm





and move to the next option to set the time. Once you have completed all time settings a tick icon will be displayed to confirm your selection.

## ACTIVITIES

### 1. Letter Discovery



Let's learn about Adventure City! Press any **Letter Button** to learn about letters, phonics and words.



Press any of the six **Character Buttons** during this activity to introduce the character name, the first letter of that character's name and play an animation of the chosen character.

### 2. Typing Escape



Humdinger's men are chasing after the PAW Patrol. Help them escape by using the **Letter Buttons** to type the letters as fast as you can!



Press any of the six **Character Buttons** during this activity to hear the character name and the spelling of that character name.

### 3. Number Quiz



Solve the maths problem to choose the correct path to rescue Ryder. Press the **Left** or **Right Button** to choose, then press the **OK Button** to confirm.

 


Press any of the six **Character Buttons** during this activity to watch a fun animation of that character.

#### 4. Tyre Match-Up

Chase has been kidnapped by Mayor Humdinger's men. Find and rescue Chase by matching the tyre tread marks to the correct patterns. Press the **Left** or **Right Button** to choose a pattern. Then press the **OK Button** to confirm.

Press any of the six **Character Buttons** during this activity to see each character's badge.



#### 5. Shapes Maze

Help Liberty find her way through a maze and free Chase. Press the **Left** or **Right Button** to move Liberty. Then, press the **OK Button** to enter a door.

Press any of the six **Character Buttons** during this activity to hear the names of shapes and play animations related to the game.



#### 6. Weather Quiz

The Cloud Catcher has mixed up the weather. Help Skye identify each weather condition.

Press the **Left** or **Right Button** to choose, then press the **OK Button** to confirm.

Press any of the six **Character Buttons** during this activity to play an animation of that character in one of the weather conditions.



# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **0330 678 0149 (from UK)** or **+44 330 678 0149 (outside UK)**, or by going to our website **[www.vtech.co.uk/support](http://www.vtech.co.uk/support)** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

