

**vtech**<sup>®</sup>

# Parent's Guide

## 3-in-1 Sports Centre



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **3-in-1 Sports Centre!**


Cheer on your little sports star with the **3-in-1 Sports Centre**. Kick the football into the goal to hear fun sounds and throw the basketball into the hoop to score points. Then press the three shape buttons to learn about shapes, colours and more.

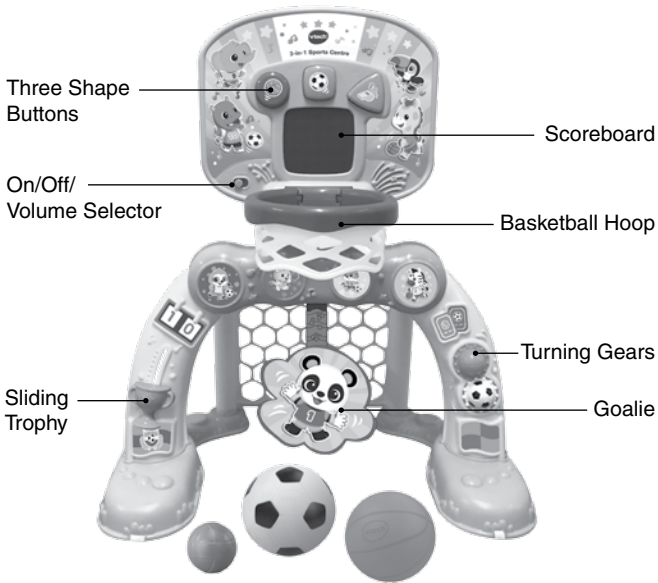

# INCLUDED IN THIS PACKAGE



 Scoreboard

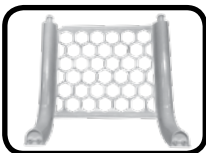

Football goal



Two base pieces



Two support posts



 
Top support piece



Basketball hoop



Goalie

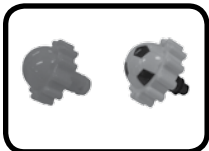

Two gears



Trophy



Basketball, football  
and mini ball



Eight screws



Label sheet

- Parent's guide

## **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE**

Please keep this parent's guide as it contains important information.



## **CAUTION**

**Do not aim the basketball, football and mini ball at eyes or face.**



## **CAUTION:**

**Adult assembly required.**

**This package contains small parts. For your child's safety, do not let your child play with the toy until it is fully assembled.**

## **NOTE**

 
If the balls become soft, inflate them with a standard, hand-operated air pump with a standard air needle (not included) until firm. Do not over-inflate the balls.



# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the scoreboard and use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

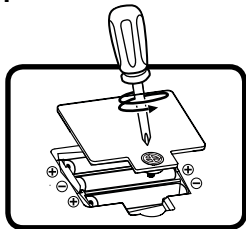

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

 
For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# LABEL APPLICATION

Please securely stick the labels to the play set as indicated below:

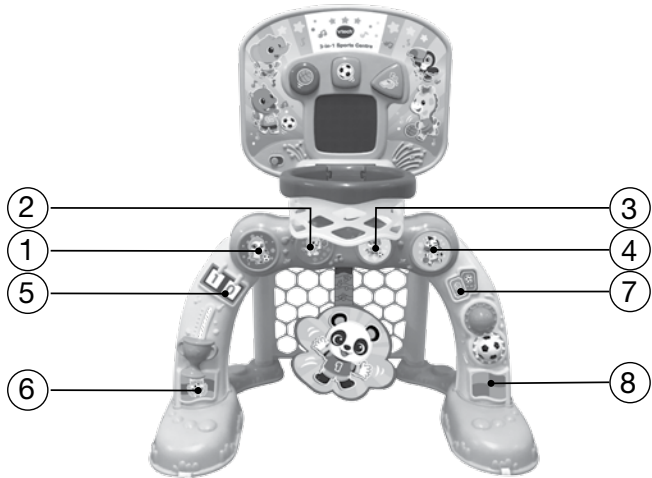




# ASSEMBLY INSTRUCTIONS

With the **3-in-1 Sports Centre**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.

 
1. Insert the **Goalie** into the **Top Support Piece** at a slight angle. Press down on the opposite side. You will hear the pieces snap together when connected properly.

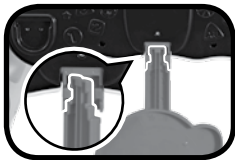

2. Insert the two **Support Legs** into the **Top Support Piece**. You will hear the pieces snap together when connected properly.



 
3. Insert the two **Support Legs** into the two **Base Pieces**. You will hear the pieces snap together when connected properly.

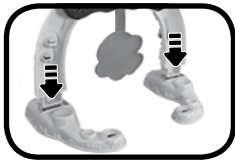


4. Insert the **Football goal** into the **Top Support Piece**. Next, slide the **Football goal** into the two **Base Pieces**. You will hear the pieces snap together when connected properly.



 5. Insert the small screws and use a screwdriver to secure the **Football net** to the **Top Support Piece** and the two **Base Pieces**.

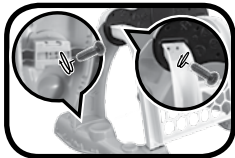

 
6. Insert the **Scoreboard** into the top of the **Football goal**. Press and turn the lock anticlockwise to the end, insert the scoreboard and slide it up or down.

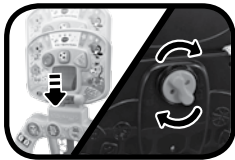

7. Insert the **Basketball Net** into the **Scoreboard**. You will hear the pieces snap together when connected properly.



 8. Insert the **Trophy** and two **Spinning Gears** into the slots in the two **Support Legs**. You will hear the pieces snap together when connected properly.

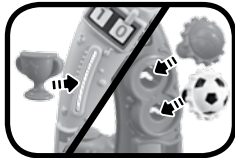

Once you've completed the above steps, you are ready to play!

# PRODUCT FEATURES

 
## 1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/Volume Selector** to the Low volume ◀) or the High volume ◀)) position. You will hear a song, a phrase and fun sounds. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the Off ● position.



## 2. Height Adjustable Scoreboard

The animated LED **Scoreboard** can be adjusted to two different heights. Press and turn the lock anticlockwise and slide to the end, slide the scoreboard up or down. Press and turn the lock clockwise to secure.

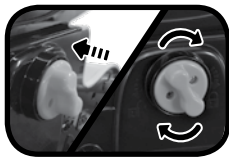

## 3. Automatic Shut-Off

To preserve battery life, the **3-in-1 Sports Centre** will automatically power down after approximately 30 seconds without input. The unit can be turned on again by pressing any button. The hoop sensor will not turn the unit back on.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

## 1. Shape Buttons

Press the **Shape Buttons** to learn about shapes, colours and hear fun sports phrases. The **Scoreboard** will light up and play a variety of playful animations.



## 2. Basketball Hoop

Throw the **Basketball** into the **Basketball Hoop** to hear the points count from 1 to 10. After the net has counted to 10, it will play music notes before going back to counting. The **Scoreboard** will light up and play a variety of playful animations.



### NOTE

The infrared light sensor in the **Basketball Hoop** is sensitive to sunlight. The sensor may not perform properly in brightly lit, sunny rooms or under direct sunlight.

## 3. Slam Dunk Basketball

Slam dunk the **Basketball** into the **Basketball Hoop** to hear fun cheering sounds and phrases. The **Scoreboard** will light up and play a variety of playful animations.



## 4. Football Goal and Goalie

Kick the **Football** into the **Football Goal** and hear a variety of playful sounds when you connect with the **Goalie**. The screen will light up and play a variety of playful animations.



## 5. Target Play

Throw the **Mini Ball** at the back of the scoreboard and hear a variety of playful sounds. The screen will light up and play a variety of playful animations.



# MELODIES

1. Aiken Drum
2. Boys and Girls Go Out to Play
3. Dill Pickles
4. Ding Dong Bell
5. Georgie Porgie
6. Hickory, Dickory, Dock
7. Arkansas Traveller
8. Baa, Baa, Black Sheep
9. Did You Ever See a Lassie?
10. Jack Be Nimble
11. MacNamara's Band
12. Muffin Man
13. Take Me Out to the Ballgame
14. Alexander's Ragtime Band
15. Blow the Man Down
16. Pop! Goes the Weasel
17. There Is a Tavern in the Wood
18. Ta-Ra-Ra Boom-De-Ay

# SONG LYRICS

## Song 1

It's a great day to play some sports,  
Grab your friends and start a game.  
Work together, play as a team.  
Yeah! Go, team!

## Song 2

Bounce, bounce, bounce the ball,  
Throw the ball in the hoop,  
1-2-3-4-5 points for your team!

## Song 3

You're a great football player,  
You're a great football player,  
You're a great football player,  
Kick the ball in the net!

## Song 4

Our team is strong,  
Our team works hard,  
Hip-hip-hip-hooray!  
We win the game!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The unit is surface washable. Remove the electronic module before wiping down the unit.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.



CLASS 1  
LED PRODUCT

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

Australian Customers:

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

NZ Customers:

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***



TM & © 2020 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003766-001 