

**vtech**<sup>®</sup>

Parent's Guide

**TOOT-TOOT**  
**CORY**  
**CARSON**<sup>®</sup>

## **Cory's Super Slide**



91-004019-000<sup>UK</sup>

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**




To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Cory Carson® Cory's Super Slide!**

Are you ready to have fun? Launch Cory down the slide and watch him go. Rearrange the slides for three different ways to play. Three, two, one, launch and go!

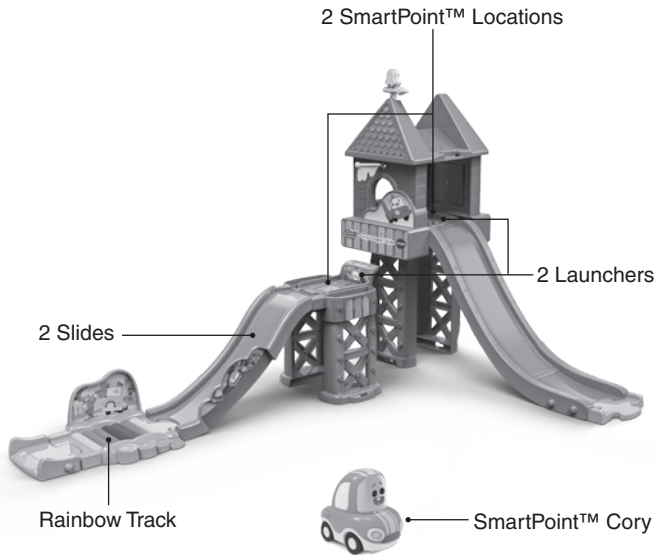


# INCLUDED IN THIS PACKAGE



One **SmartPoint™**  
Cory




One small platform with  
**SmartPoint™** launcher

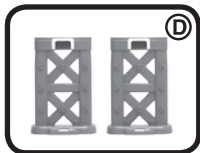

Two small platform  
supports




One large platform with  
**SmartPoint™** launcher

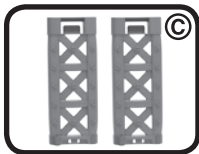


Two large platform  
supports




One rainbow  
track wall

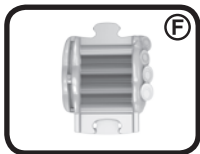


One rainbow track

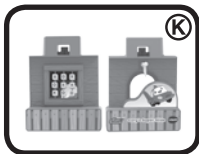


Two house walls

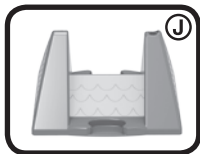


One house top

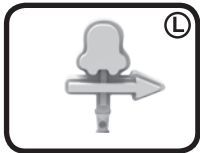


One weathervane

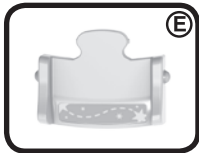

One small ramp track

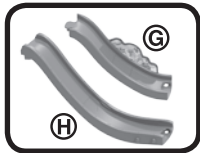

Two slide tracks

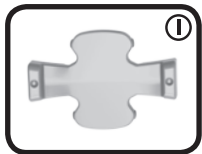

One connector track

- One label sheet
- One Parent's Guide


**WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

**NOTE:**

Please keep this Parent's Guide as it contains important information.

**Removing the Packaging Locks**

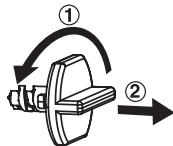


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

# INSTRUCTIONS

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of **SmartPoint™ Cory**. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

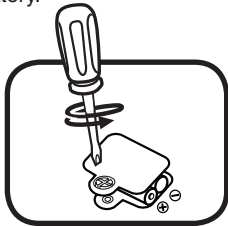

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:



Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

# LABEL APPLICATION

Please apply the labels to the play set as shown below:

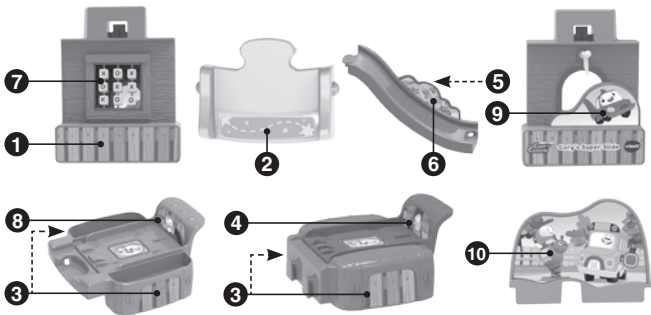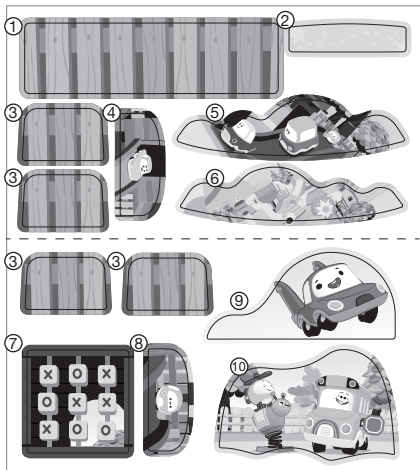





# ASSEMBLY INSTRUCTIONS

With the **Toot-Toot Cory Carson® Cory's Super Slide**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Attach the small platform supports (D) to the small launcher platform (A). You will hear a "click" sound to indicate the pieces are secure.

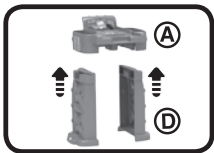


2. Attach the large platform supports (C) to the large launcher platform (B). You will hear a "click" sound to indicate the pieces are secure.

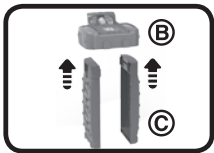


3. Insert the rainbow track wall (N) to the rainbow track (F).

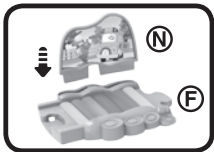


4. Insert the house walls (K) into each side of the house top (J). You will hear a “click” sound to indicate the pieces are secure.

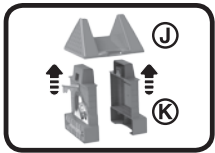

5. Insert the weathervane (L) to the house top (J). You will hear a “click” sound to indicate the pieces are secure. Once the pieces are connected, they cannot be detached.

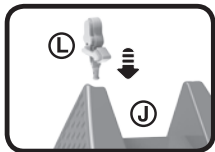


After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.

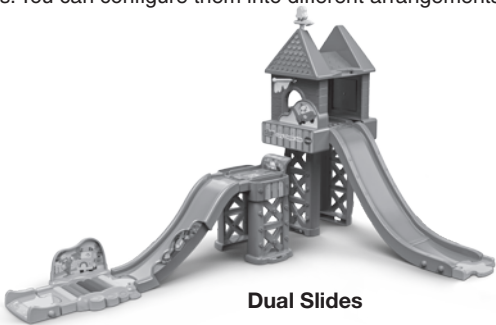

**Dual Slides**



**Stunt Slides**

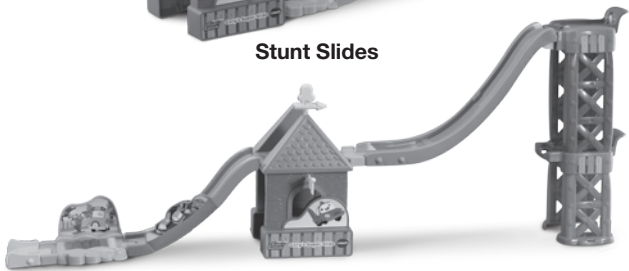



**Super Slide**


You are now ready to play! Connect the track pieces together or you can use them to connect to other **Toot-Toot Drivers®** play sets (each sold separately).

**Note: SmartPoint™** vehicles respond to **SmartPoint™** locations with different phrases, music or fun sound effects (each sold separately).

# PRODUCT FEATURES

## 1. On/Off Switch

To turn the unit On, slide the On/Off Switch to the On  position. To turn the unit Off, slide the On/Off Switch to the Off  position.

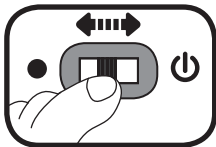

## 2. Automatic Shut-Off

To preserve battery life, **SmartPoint™ Cory** will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the **Light Up Button**, **Action Button** or by pushing **SmartPoint™ Cory** quickly.


### NOTE:

This product is in try-me mode in the packaging. After opening the package, turn **SmartPoint™ Cory** off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

# SMARTPOINT™ CORY ACTIVITIES


## 1. Light Up Button

Press the **Light Up Button** to hear sounds, songs, phrases and melodies. The light will flash with the sounds.

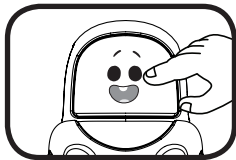


## 2. Action Button

Press the **Action Button** to activate Cory's lights and hear fun sounds. The lights will flash with the sounds.

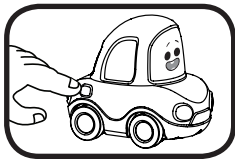


## 3. Sounds and Melodies

Push Cory to hear fun sounds. If a melody is already playing, push Cory to add fun sounds on top of the melody. The light will flash with the sounds.

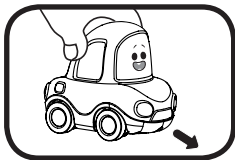

## 4. SmartPoint™ Locations

For added fun, Cory interacts with the **SmartPoint™** locations on **Toot-Toot Cory Carson®** play sets. Simply roll Cory over the **SmartPoint™** location to see the light flash and to hear fun sounds, short tunes or sing-along songs.

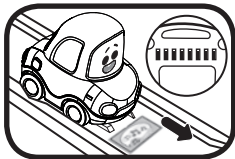

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

