

vtech®

Parent's Guide

Mylia *The Blush and Bloom unicorn*



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Hi, I'm Myla the Blush and Bloom Unicorn! Let's have some fun! My magic wand allows you to become my super stylist! Select any colour by pressing the button on my wand, apply it magically to my horn, eyes and wings then watch in amazement as they magically light up in that colour! Make me beautiful by brushing my mane or add clips to my hair! Blow me a kiss and watch my flower light up.

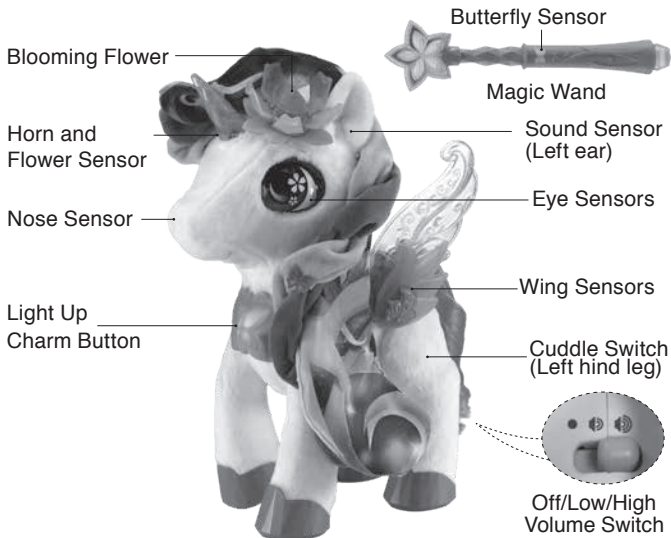

Comb and Jewellery Play Pieces



INCLUDED IN THIS PACKAGE

- Myla the Blush and Bloom Unicorn
- 1 magic wand
- 1 comb
- 7 hair clips
- Parent's Guide

WARNING


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Parent's Guide as it contains important information.

Removing the Packaging Locks:

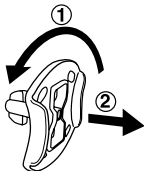

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.



GETTING STARTED

 
How to Exit Try-Me Mode

The Unicorn is in Try-Me mode in the packaging.

Slide the **Off/Low/High Volume Switch** on the underside of the unicorn to turn the unit **Off** and then slide the switch to either **Low Volume**  or **High Volume**  to turn the unit **On** again.


BATTERY REMOVAL AND INSTALLATION (Unicorn)

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the underside of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

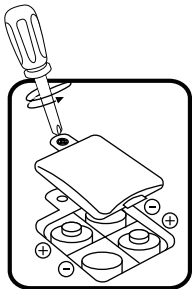

BATTERY REMOVAL AND INSTALLATION (Magic Wand)

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the side of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

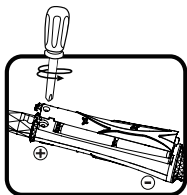

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.



VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:




Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the **Low Volume**  or **High Volume**  position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off**  position.



2. Magic Wand

Touch the **Butterfly Sensor** on the **Magic Wand** to choose a colour. Wave the **Magic Wand** close to Myla to see her mane, horn, flower, eyes and wings glow in that colour.

3. Horn, Eye And Wing Sensors

Touch the **Butterfly Sensor** on the **Magic Wand** to choose a colour. Touch the tip of the **Magic Wand** to her **Horn Sensor** to apply the colour to her horn, mane and flower. Touch the tip of the **Magic Wand** to her **Eye Sensors** to apply the colour to her eyes. Touch the tip of the **Magic Wand** to her **Wing Sensors** to apply the colour to her wings.



Horn Sensor



Eye Sensors



Wing Sensors

4. **Nose Sensor**

Boop Myla's **Nose Sensor** to hear some sweet phrases and see her wings flap.



5. **Sound Sensor**

Play any sound and Myla will interact with you, change colour and flap her wings. The louder you play the sound, the more colour changes you will see.

6. **Light Up Charm Button**

Press Myla's **Light Up Charm Button** to choose different games and see her lights flash.



7. **Flower and Wings**

Myla's flower blooms and wings flap when she talks and sings.

8. **Automatic Shut-Off**

To preserve battery life, **Myla the Blush and Bloom Unicorn** will automatically power-down after several minutes without input. The unicorn can be turned on again by pressing the **Light Up Charm Button**. The **Magic Wand** can be turned on again by pressing the **Butterfly Sensor** to choose a colour. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Standing Mode

All games in Standing mode can be selected by ensuring that Myla is standing upright and then you can go through the different modes by pressing her Light Up Charm Button.

1. Magical Colours Game

Let's learn how to apply some colour on Myla. Touch the **Butterfly Sensor** on the **Magic Wand** to choose a colour and use the tip of the wand to apply it on Myla's horn, eyes or wings. Wave the magic wand near Myla to see her lights glow and hear her adorable responses. Boop her nose to hear cute responses.

2. Sing with Me Game

Press Myla's **Light Up Charm Button** to hear her sing. When Myla sings a song, her lights will flash, her flower will bloom and she'll flap her wings. After the song is finished, choose a colour on the **Magic Wand** and touch her horn, eyes and wings or wave the **Magic Wand** and she'll sing another song for you.

3. Blooming Flower

Blow a kiss towards Myla to see her flower bloom and she will tell you how she loves you too!

4. Let's Roll Game

Play any of your favourite songs for Myla and her lights will flash along with the music. Myla listens best if you place the music player on her left side. The louder you play, the more her lights will flash, but don't play too loud!



5. Fashion Colour Game

Want to know your fashion colour? Light up the **Magic Wand** by touching the **Butterfly Sensor** and then wave it at Myla. She'll light up and pick a magic fashion colour for you!

6. Share With Me

Share something fun or sweet with Myla to interact with her. Nothing to share? No worries, she's got something fun to share with you!

Cuddle Mode

All games in Cuddle mode can be selected by tucking Myla's legs forward until she is in Cuddle mode and then you can go through the modes by pressing the **Light Up Charm Button**.



7. Colour Cuddle

Myla needs your cuddles! Use the **Magic Wand** to touch Myla or wave the wand to hear her as she tries to fall asleep. It really soothes Myla when you gently boop her nose.

8. Colour Dream Game

Everyone dreams! Myla has her colour dreamland too! Wave the **Magic Wand** to unlock the colour of Myla's dream! She'll tell you about her dream and loves to hear your dream colour, too!

9. Sing Me a Lullaby

Myla loves lullabies! Hug Myla and sing her a soft lullaby to soothe her to sleep. Don't worry if you feel a little shy, Myla's got a lullaby to sing for you!

SONG LYRICS

Flap Your Wings

We got the beat, we got the beat,
We move our, move our, move our feet.
To the right, to the right,
To the left and back,
Jump, jump and spin,
Now flap your wings! Flap your wings! Yeah, flap your wings again!
We got the beat, we got the beat,
We move our, move our, move our feet. Oh yeah!

Colours True

We've got our colours true,
To share with me and you,
Lights shine!
Colours bright!
Gather 'round and spread delight!
Shine on, now.

Glow Bright

We're gonna glow bright, glow bright, with rainbow light!
We're gonna sparkle until the sky shines with light.
Glow bright, glow bright,
All through the night.
We're gonna sparkle until we fill your life with delight.

We Got Every Colour

We got every colour, every single one,
We got all the colours, we got all the fun,
We got a rainbow, we got the light,
We got the glitter, watch us, glowin' bright.

Drop the Beat

Hooves go tappin' on clouds tonight.
Wings go flappin' and fly alright.
The horn gets its glow, gets its glow, gets its glow.
Drop the beat, drop the beat,
Hey, everybody drop the beat!

Live Your Dream

We're gonna flap our wings and light up the sky.
We're gonna flap our wings and fly so high.
We're gonna flap our wings and reach for the stars.
You can live your dream no matter who you are.
Let your colours shine!

Dream Comes True

Look at the colours all around us,
Let's see the lights and the sparkle too.
I've got a magical wish I hope comes true,
Let's hope my dreams come true.

Sparkle in Some Light

We could all use a little colour, all use a little light.
I love different colours, shinning bright.
It makes everything feel all right,
Add a little colour, sprinkle in some light.
Just might feel,
A little light,
And help make everything bright!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, please install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTech Electronics (Australia) Pty Limited – Consumer Guarantees

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2021 VTech Holdings Limited.
All rights reserved.
IM-547100-001
Version: 1