

vtech[®]

Parent's Guide

Toot-Toot Drivers

Airport




91-003545-000 (US)

INTRODUCTION

Thank you for purchasing the **Toot-Toot Drivers® Airport** by **VTech®**! Watch the adventurous Aeroplane come to life when you fly him around the course and over the five **SmartPoint®** locations. Launch the Aeroplane into the cloud, spin around the tower, or slide the luggage up and down. Children will have a blast while strengthening motor skills and engaging in imaginative play.

Cloud Platform

Launcher

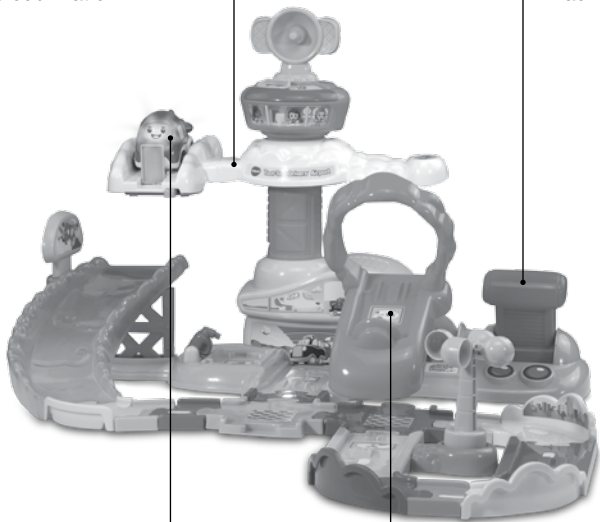


SmartPoint®
Aeroplane

6 SmartPoint®
Locations

INCLUDED IN THIS PACKAGE




One **SmartPoint®**
Aeroplane

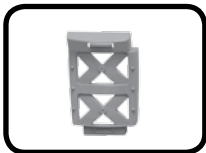

One ramp support



One airport
building

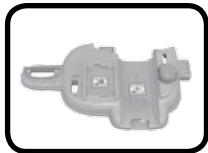

One airport base



One fuel nozzle



One ramp track



One ramp track sign



One launcher
platform



One launcher ring




One cloud platform




One launcher base



One launcher handle

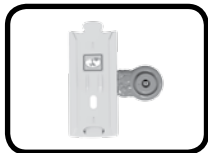

One wind meter track

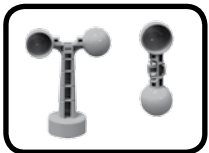

Wind meter A & B




One airport tower



Four 1/4 straight tracks



One 1/4 straight track,
female

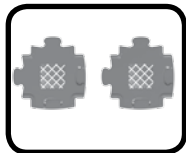

Two cross tracks



Two 90 Degree track
convex




One 60° track, male



One spot track



One track half circle

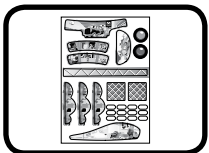

One label sheet


- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

Unlock the packaging locks:

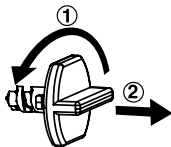


- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

Aeroplane

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the Aeroplane. Use a coin or screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

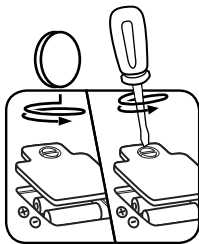

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.


Help protect the environment by disposing of your product or batteries responsibly.






For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

Please stick the labels to the play set securely as indicated on the following pages below:

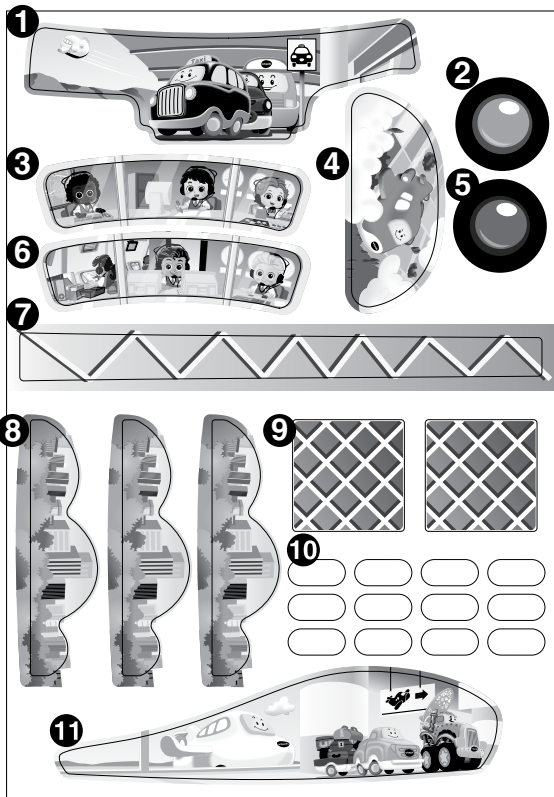

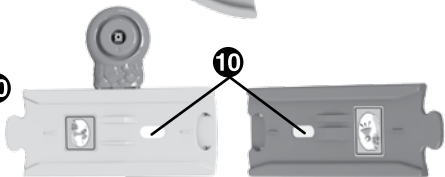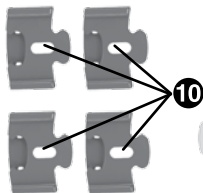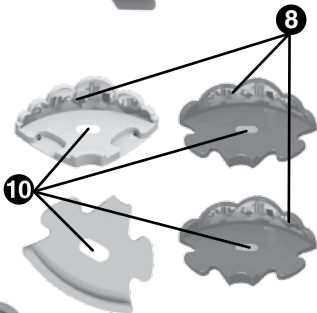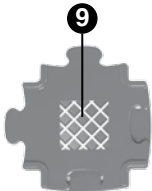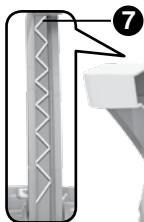

ASSEMBLY INSTRUCTIONS

Airport

With the **VTech® Toot-Toot Drivers® Airport**, safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the **Airport Tower** into the **Cloud Platform**, as shown below.





2. Insert the **Airport Tower** into the **Airport Building**. Then, attach the **Airport Building** and **Fuel Nozzle** to the **Airport Base**, as shown below.





3. Connect the **Ramp Track Sign** to the **Ramp Track**, as shown below.



4. Attach the **Ramp Support** to the **Airport Base**. Then, connect the **Ramp Track** to the **Ramp Track Support**, as shown below.

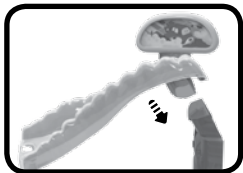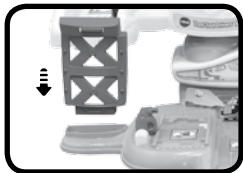

5. Attach the **Launcher Ring** to the **Launcher Platform**. Then, connect the **Launcher Platform** and **Launcher Handle** to the **Launcher Base**. Lastly, connect the **Launcher Base** to the **Airport Base**, as shown below.

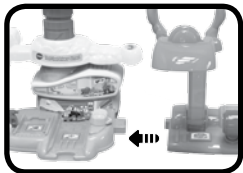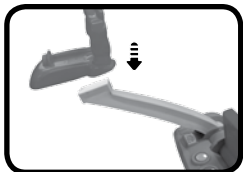

6. Connect **Wind Meter A** and **B**. Then, attach the **Wind Meter** to the **Wind Meter Track**, as shown below.



Once you've completed the above steps, you are ready to play! You can connect these pieces to other included track pieces or you can connect this play set to other **Toot-Toot Drivers**[®] play sets and tracks (each sold separately).



EXPAND & EXPLORE

Connect to the **Toot-Toot Drivers**[®] **Police Patrol Tower** (as shown below) or other **Toot-Toot Drivers**[®] play sets (each sold separately) to expand the **Airport** and inspire creativity.




PRODUCT FEATURES

Aeroplane

1. ON/OFF SWITCH

To turn the unit **ON**, slide the **On/Off Switch** to the **ON** (☺) position. To turn the unit **OFF**, slide the **On/Off Switch** to the **OFF** (●) position.

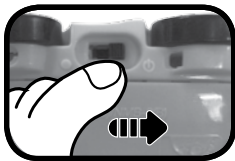

2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Toot-Toot Drivers® SmartPoint®** Aeroplane will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing the **Light Up Button**, pushing the Aeroplane quickly, triggering a **SmartPoint®** location or turning the Aeroplane **OFF** and **ON**.

Note: This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Aeroplane

1. Slide the **On/Off Switch** to turn the Aeroplane **ON**. You will hear a song, phrases and sounds. The light will flash with the sounds.
2. Press the **Light Up Button** to hear sounds, songs and phrases. The light will flash with sounds.

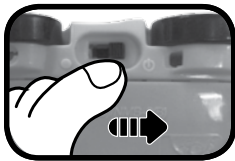

3. Push the Aeroplane to hear fun sounds and melodies. While a melody is playing, push the Aeroplane again to add in fun sounds on top of the melody. The light will flash with the sounds.




4. For added fun, the Aeroplane interacts with the **Toot-Toot Drivers® Airport**. Simply place the Aeroplane on one of the five **SmartPoint®** locations to see the Aeroplane's light flash and to hear fun sounds, short tunes and phrases. The Aeroplane even interacts with other **Toot-Toot Drivers®** play sets (each play set sold separately).



ACTIVITIES

Airport

1. Place the Aeroplane or any **SmartPoint®** vehicle (each sold separately) on the five **SmartPoint®** locations to trigger fun sounds, songs or phrases.
2. Place the Aeroplane on the **Launcher**, and pull the handle to launch the Aeroplane to the cloud.

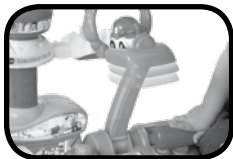

Note: Do not aim or launch the Launcher at a person's head or face.

3. Fly around by spinning around the tower. Rotate the radar satellite to the landing (🛬) icon when you are ready to land. After landing, lift the **Cloud Platform** to the top of the **Airport Tower** and make sure the satellite is turned to the flying (✈️) icon.



4. For added role play, spin the wind meter, move the fuel nozzle or slide the luggage up and down.



SONGS

1. Here we go flying 'round the town,
'Round the town,
'Round the town,
Here we go flying 'round the town,
On a fun little journey!
2. In the air, we'll fly everywhere!
3. Time to take off, 1, 2, 3!
Going on an adventure just you and me!

MELODY LIST

1. Flying Trapeze
2. Baa, Baa, Black Sheep
3. Big Rock Candy Mountain
4. Ding Dong Bell
5. For He's a Jolly Good Fellow
6. Mulberry Bush

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/customer support](http://www.vtech.co.uk/customer-support)

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

