

vtech®

User's Manual

Body-Bot



© 2016 VTech
All rights reserved
Printed in China
91-003230-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

- ...responding to colour, sounds and textures
- ...understanding cause and effect
- ...learning to reach, touch, crawl, sit up, crawl and walk

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

Primary Learning Computer

Goal, motivational and inspiring computers for curriculum related learning

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

4-10 years

3-6 years

Birth-36 months

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Body-Bot** by **VTech®**.


Programmed for fun, **Body-Bot** is a robot buddy that responds to his 9 included accessories for role-play fun and plays a variety of activities. **Body-Bot** can also move and dance on his wheels or his legs.

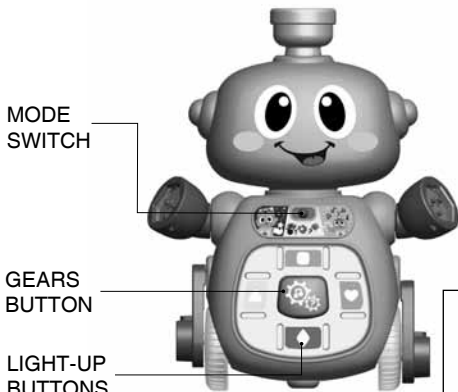

OFF/VOLUME SWITCH



 9 ACCESSORIES

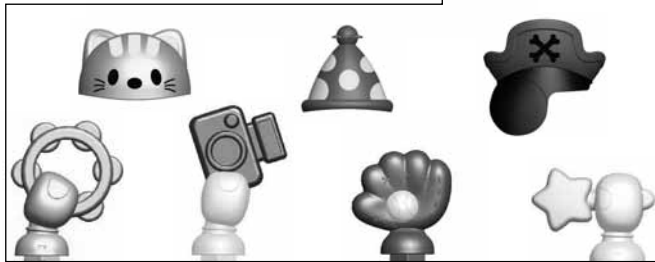

INCLUDED IN THIS PACKAGE

- One VTech® Body-Bot
- Nine accessories
- User's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

Note:

 
The cable ties are not part of this toy. For your child's safety, please cut and discard the cable ties before letting them play with the product.



GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

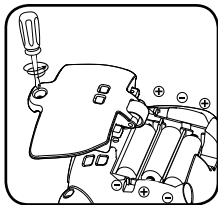

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).

- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. OFF/VOLUME SWITCH

To turn the unit **ON** or adjust the volume, slide the switch to **LOW** or **HIGH**. To turn the unit **OFF**, slide the switch to **OFF**.



2. MODE SWITCH

Slide the **MODE SWITCH** to choose an activity.



3. GEARS BUTTON

Press the **GEARS BUTTON** on Body-Bot's tummy for a variety of responses.



 
4. LIGHT-UP BUTTONS

Press the **4 LIGHT-UP BUTTONS** to interact with the activities.



5. 9 ACCESSORIES

Attach the **9 ACCESSORIES** to the correct places and hear fun phrases. Watch **Body-Bot** roll around on his wheels or you can put on his legs and watch him dance.

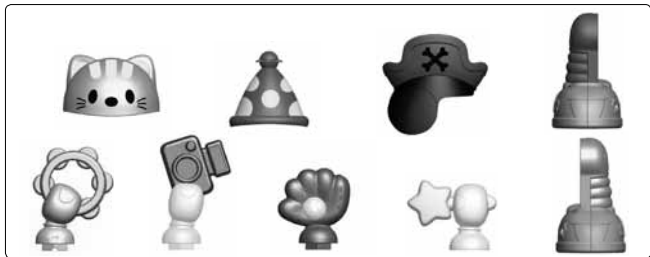

6. AUTOMATIC SHUT-OFF

To preserve battery life, **Body-Bot** will automatically power down after several minutes without input. **Body-Bot** can be turned on again by pressing the **LIGHT-UP BUTTONS**, **GEARS BUTTON** or sliding the **MODE SWITCH**.

Note: If the unit repeatedly powers down or the lights flash then fade out, replace the batteries.

ACTIVITIES

Robot Creativity



Choose the **Robot Creativity** mode and use the **9 ACCESSORIES** to dress-up **Body-Bot** in more than 70 silly combinations. Press the **GEARS BUTTON** to hear songs, fun responses and to see **Body-Bot** move around. Press the **LIGHT-UP BUTTONS** to explore different fun responses.



Challenge Time



 
 
Choose the **Challenge Time** mode and answer questions by attaching the correct accessory to the right place. Press the **GEARS BUTTON** or a **LIGHT-UP BUTTON** to repeat the question.



Robot Symphony



Choose the **Robot Symphony** mode and press the **GEARS BUTTON** to listen to fun music and watch **Body-Bot** dance. Press the **LIGHT-UP BUTTONS** or attach one of the **9 ACCESSORIES** to create a funny remix.

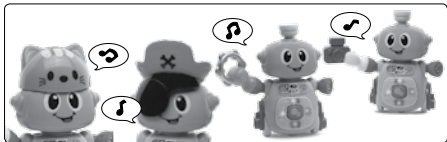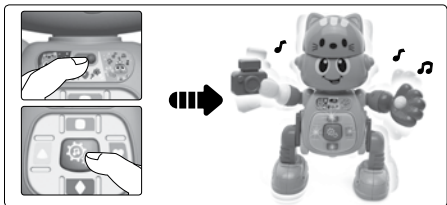

SING-ALONG SONG LIST

PIRATE HAT SONG

Searching for treasure across the open sea
Yo Ho Ho, the pirate's life for me! Wahoo!

KITTEN HAT SONG

Kittens meow. Cows moo. Puppies bark. Monkeys say "oo oo oo"

PARTY HAT SONG

It's party time, let's boogie down!
Move it, groove it, shake it all around!

BASEBALL GLOVE SONG

I take a swing and then WHAM,
Look at that, I hit a grand slam!

MAGIC WAND SONG

With a wave of my wand and a flick of my wrist, I can do magic tricks!

CAMERA SONG

Say cheese and snap a pic.
Strike a pose and click, click, click!

TAMBOURINE SONG

Jingle, jangle, shake it all around!
Listen to that beat, and boogie down!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.