



Instruction Manual

MUSICAL MOMENTS PLAYER



BBC
STUDIOS

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

 
3-6 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Put on your Bluey headphones and hear sing-along songs, classical music, dance beats and soothing tunes from your favourite show. Then, get up and boogie or play games with Bluey.

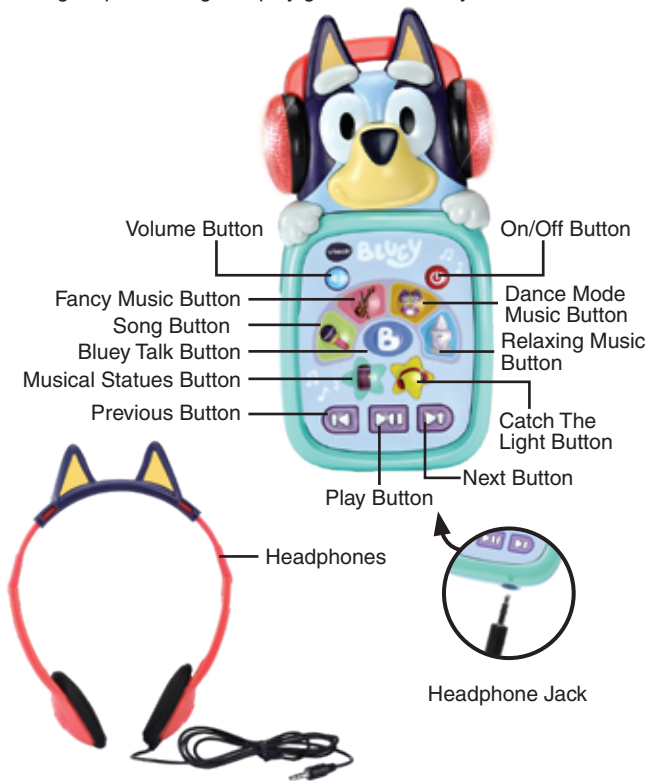

INCLUDED IN THE PACKAGE

- One **Musical Moments Player**
- One set of headphones
- One Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

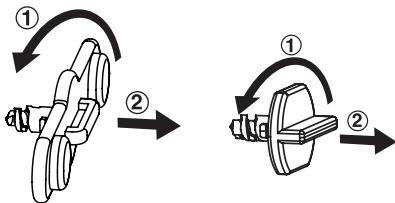

① Turn the packaging locks anticlockwise several times.

② Pull out and discard the packaging locks.

GETTING STARTED

Exit Try-Me Mode

Plug the headphones into the Bluey Music Player to exit Try-Me Mode. The player will restart.

Before playing for the first time, please install 2 new AAA batteries. (The AAA batteries included in the unit are for demo purposes only and are not life long batteries).

INSTRUCTIONS

Note:

 
In order to protect your child's hearing, the volume level of the headphones is lower than the speaker.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 1.5V AAA (LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

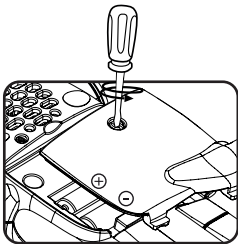

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Note:

If the unit repeatedly powers down while playing or the lights fade out, we suggest changing the batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.


Player		Headphones	
Maximum output voltage	$\leq 150\text{mV}$	Wide band characteristic voltage	$\geq 75\text{mV}$

This toy is only to be connected to equipment bearing either of the following symbols:  or 

Product Features

1. ON/OFF BUTTON

 Press the ON/OFF BUTTON to turn the unit ON. Press the ON/OFF BUTTON again to turn the unit OFF

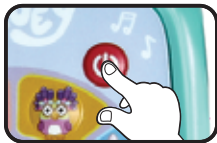

2. VOLUME BUTTON

Press the VOLUME BUTTON to adjust the volume to low, medium or high.



 
3. FUNCTION BUTTONS

A) PLAY/PAUSE BUTTON

Play or pause the music by pressing the PLAY/PAUSE BUTTON .

B) PREVIOUS BUTTON & NEXT BUTTON

Press the PREVIOUS BUTTON & NEXT BUTTON to make a selection.

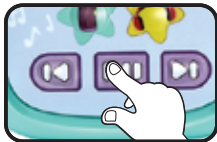

4. 4 MUSIC MODE BUTTONS

Press the different MUSIC MODE BUTTONS to hear different music styles and songs.



5. BLUEY TALK BUTTON

Press the BLUEY TALK BUTTON to hear Bluey's fun phrases.



6. 2 GAME BUTTONS

Press these buttons to play games.



7. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power-off after about 1 minute without input. The unit can be turned on again by pressing the ON/OFF BUTTON.

ACTIVITIES

1. Songs



Explore different Bluey and Bingo songs from the show.

2. Fancy Music



Hear classical music from the show.

3. Dance Mode Music



Dance mode! Dance along to the music.

4. Relaxing Music



Listen to relaxing music for a moment of calm.

5. Bluey Talk Mode



Hear Bluey chat about her favourite things and talk about her day.

6. Musical Statues Game



Follow Bluey's instructions and freeze when the music stops.

7. Catch The Light Game



Press the left and right arrow buttons (previous and next buttons) to catch the lights as they appear on Bluey's headphones.

SONG LYRICS

1. FIVE LITTLE MEN IN A FLYING SAUCER

Five little men in a flying saucer
Flew round the world one day
They looked left and right
But they didn't like the sight
And then they flew away.

2. ONE MAN WENT TO MOW

One man went to mow
Went to mow a meadow
One man and his dog <yap>
Went to mow a meadow

Two men went to mow
Went to mow a meadow
Two men, one man and his dog <yap>
Went to mow a meadow

Three men went to mow
Went to mow a meadow
Three men, two men, one man and his dog <yap>
Went to mow a meadow.

3. POOR LITTLE BUG

Poor little bug on the wall
Jing Jing!
No one to love her at all
Jing Jing!
No one to tickle his toes
Jing Jing!
No one to blow his nose!
Jing Jing!

4. BURGER DOG

Burger Dog, B-Burger Dog.
He has pickles and he has cheese.
Burger Dog, B-Burger Dog.
Fluffy bun with some ses'me seeds.
Burger Dog, B-Burger Dog.
Yap yap yap yap yap yap yap!
Burger Dog, B-Burger Dog.
He was once a wiener dog, now he is a burger dog.
Burger Dog. B-Burger Dog.

5. CHICKEN RAT

Lay an egg
Lay an egg
Lay a chickenrat egg
For our breakfast
For our breakfast
Make a chickenrat egg
For our breakfast!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a brand new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

