

**vtech**<sup>®</sup>  
Baby

# User's Manual

## Caterpillar Teether



© 2016 VTech  
Printed in China

91-003141-001-006

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

## Pre-School

Interactive toys to develop their imagination and encourage language development

## vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

### I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

## Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

### I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

 
4-10 years



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Caterpillar Teether** learning toy!  
The **Caterpillar Teether** by **VTech®** is the perfect grab and go toy!  
Press the music button to hear songs, sounds, phrases and music whilst  
chewing on the two soft and soothing teethers. The removable apple-  
shaped teether can be placed in the fridge for helping soothe sore gums!

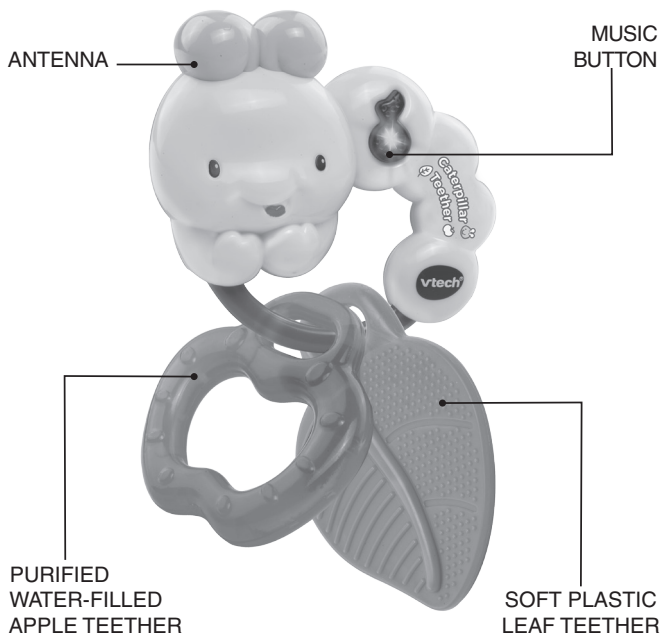


## INCLUDED IN THIS PACKAGE

- One VTech® Caterpillar Teether
- One purified water-filled apple teether
- One soft plastic leaf teether
- One user's manual

**WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this user's manual as it contains important information.
 
### Unlock the packaging locks:

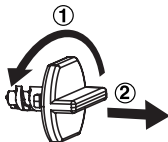


- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

Included In This Package

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
2. Install one new AAA (AM-4/LR03) battery following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance.)
3. Replace the battery cover and tighten the screw to secure.

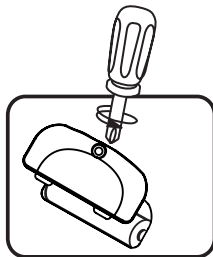

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

## PRODUCT FEATURES

### 1. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Caterpillar Teether** will automatically power-down after each sound response. The unit can be turned on again by pressing the music button.

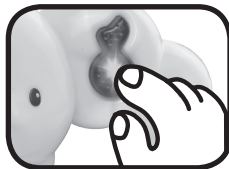



## 2. TEETHERS

Before using the teethers for the first time and after each use, wash with warm soapy water, rinse and air dry. DO NOT use boiling water, steam, a microwave or dishwasher to clean the teethers. To chill the purified water-filled apple teether, place in the refrigerator. DO NOT place in the freezer compartment. Check the teethers regularly for wear. Discard the teethers if any cracks or tears are found on the teethers.

 


3. To open the ring, turn the **locking mechanism** to the unlock (🔓) position and press down. Whilst pressing down the lock button, pull the end of the ring out from the caterpillar. Add or remove the teethers as necessary. To close, insert the end of the ring into the caterpillar.



## ACTIVITIES

1. Press the **music button** to hear playful phrases, songs, fun sounds and melodies. The light will flash with the sounds.

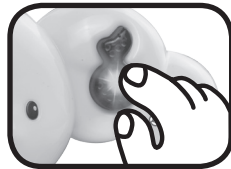



## MELODY LIST

1. Aiken Drum
2. Riddle Song
3. Glow Worm
4. Grandfather's Clock
5. Listen to the Mockingbird
6. Polly Wolly Doodle
7. Skip To My Lou
8. This Old Man
9. Little Miss Muffet
10. Alouette

## SING-ALONG SONG LYRICS

### SONG 1

I have a big smiling face,  
I am happy because I get to play with you!

### SONG 2

Nibble, nibble, crunch!  
I'm dreaming of a green leaf to munch!

### SONG 3

I like to munch, chew and crunch.  
I want the red apple for my lunch!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.





## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Interrupt the power supply by removing the batteries.
2. Let the unit stand for a few minutes, then replace the batteries.
3. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

### IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1  
LED PRODUCT



## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at [www.vtech.co.uk](http://www.vtech.co.uk)

