

vtech®

Instruction Manual

KARAOKE LIGHTS Mic



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Karaoke Lights Mic!** Turn any room into an instant party with this fun-packed music and karaoke companion. The vibrant 5X5 Pixel Light Show moves in sync with your music, creating a mini-concert vibe wherever you are. With **Bluetooth®** streaming, you can play your favourite tracks and sing along instantly! Add excitement with fun voice effects that make every performance unforgettable.



1	Pixel Light Button	11	Normal Button
2	<i>Bluetooth</i> ® Button	12	Recording Light
3	Power Button	13	Music Volume Buttons
4	Indicator Light	14	Reverb Setting Buttons
5	Recording Button	15	Song Selection Buttons
6	Microphone Volume Buttons	16	Fuzz Button
7	Key Change Buttons	17	Voice Changer Button
8	Microphone On/Off Button	18	Vocal Remover Button
9	Vibrato Button	19	Exit Try-Me Button
10	MC Mode Button		

INCLUDED IN THE PACKAGE

- **VTech® Karaoke Lights Mic**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this product and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Pixel Lights Protective Film


Remove the transparent protective film from the front of the **Karaoke Lights Mic** before use.



INSTRUCTIONS

Exit Try-Me Mode:

The microphone is in **Try-Me Mode** in the packaging. To exit **Try-Me Mode**, turn **ON** the unit. Then press the **Exit Try-Me Button** (located at the back of unit). Use a paper clip to press and hold the button for 1 second to exit **Try-Me Mode**. The indicator light will flash for a while, then the unit will turn **ON** automatically once it has entered **Normal Mode**.

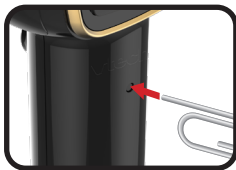


WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the side of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

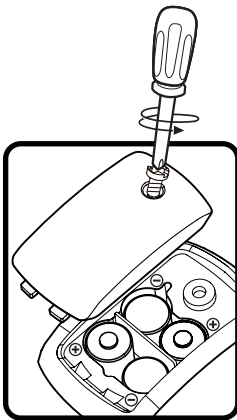

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the product.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this product a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the microphone **ON** and the indicator light will turn red. Press it again to turn the microphone **OFF**.



2. Microphone

Speak or sing into the **Microphone** and the built-in speaker will amplify your voice.



3. Pixel Light Button

Press the **Pixel Light Button** () to select pixel light patterns. Hold the **Pixel Light Button** for 2 seconds to turn the pixel lights **ON/OFF**.



4. Bluetooth® Button

Press the **Bluetooth® Button** to connect to a nearby device via **Bluetooth®** connection. When the microphone is pairing, the Indicator light will turn blue and flash. When the microphone is successfully connected with a device, the light will remain blue and on. Press the **Play/Pause Button**, **Previous Song Button** and **Next Song Button** to select the music from your music device.



Bluetooth® Connection

- 4.1 Press the **Bluetooth® Button**  then the Indicator light will turn blue and flash.
- 4.2 Open your device's **Bluetooth®** settings and search for devices.
- 4.3 Select “**VTech 5909 Microphone**” when you see it displayed on your device.
- 4.4 A 6-digit PIN number will display on the front of the **Karaoke Lights Mic**.
- 4.5 Enter the PIN number on your device.
- 4.6 When connected successfully, the **Karaoke Lights Mic** will play “**Bluetooth®** connected”.
- 4.7 While in **Bluetooth®** mode, the Indicator light will remain blue and on.
- 4.8 To exit **Bluetooth®** mode, press the **Bluetooth® Button**  again.
- 4.9 The microphone will automatically reconnect to the last **Bluetooth®** device it was paired with. You don't need to repeat this process next time.

5. Microphone Volume Buttons



Press the **+ Button** to increase the volume of the microphone, Press the **– Button** to decrease it.



6. Music Volume Buttons

Press the **+ Button** to increase the volume of the music, Press the **- Button** to decrease it.



7. Key Change Buttons

Press the **+ or - Button** to change the key of the music. There are a total of 13 different key changes, from +6 to -6 semitones.



8. Recording Button

Hold the **Recording Button** down for a few seconds to record. You will hear a “beep” and the Recording light will remain On to indicate it is recording. Press the **Recording Button** again to stop the recording and review it.



9. Reverb Setting Buttons

Press the **+ or - Button** to increase or decrease the microphone reverb effect.



10. Microphone On/Off Button

Press the **Microphone On/Off Button** to turn the microphone function **OFF**. Press it again to turn the microphone function **ON**.



11. Song Selection Buttons

Press the **Play & Pause Button** (), **Previous Song Button** () and **Next Song Button** () to select and play the music from your music device when **Bluetooth®** is connected. Press these buttons to select and play the built-in songs when **Bluetooth®** is not connected.



12. Vibrato Button

Vibrato

Press the **Vibrato Button** to active the Vibrato effect. Press it again to stop the effect and resume back to normal singing.



13. Normal Button

Normal

Press the **Normal Button** to resume back to original singing tone.



14. Fuzz Button

Fuzz

Press the **Fuzz Button** to active the Fuzz effect. Press it again to stop the effect and resume back to normal singing.



15. MC Mode Button

MC Mode

Press the **MC Mode Button** to activate the MC effect. It will automatically play one of the songs and the volume of the song will decrease when the voice input is detected.



16. Vocal Remover Button

Vocal Off/Auto/On

Press the **Vocal Remover Button** once to remove the vocals in the song. Press it a second time, to auto remove your vocal when the microphone detects voice input. Pressing it a third time will add the vocals back in.



17. Voice Changer Button

Voice Changer

Press the **Voice Changer Button** to change your voice using one of our five different voice changing effects.



18. Automatic Shut-Off

To preserve battery life, the **VTech® Karaoke Lights Mic** will automatically power down after several minutes without any button or voice input. The unit can be turned on again by pressing the **Power Button**. The unit will also automatically turn off when the batteries are low on power.

Note: If the unit repeatedly powers down or shows low battery on the pixel lights while playing, please insert new batteries and try powering it on again.

SONG LYRICS

SONG 1

Living in colour, not black and white.
Every shade in me feels so right,
Glowing bright, like the city lights.
Now I'm shining day and night.

This is my moment and I won't rewind.
I'm breaking rules you try to define.

Watch my colours burst like a firework sky.
When I'm me, I will never hide.
I'm unique and that's who I'll stay.
Shine my light in my brightest way.

I'm shining bright, can't dim me now,
All the colours, I wear them proud.
Nothing in this world can define me.
No labels, I'm flying free.

This is my moment and I won't rewind.
I'm breaking rules you try to define.

Watch my colours burst like a firework sky.
When I'm me, I will never hide.
I'm unique and that's who I'll stay.
Shine my light in my brightest way.

SONG 2

Going out, got that sunshine in my eyes,
Got big plans, I'm gonna touch the sky.
Laughing loud, with my friends right by my side.
Let's go, it's a magical ride!

Jump up! Feel the energy,
Come and sing with me.
Let's spin around and touch the sky,
No limits, we are flying high.
Jump up! Reach up high,
Sing, don't be shy.
No limits, we are flying high,
Flying high, yeah, you and I!

Clap your hands, come on feel the beat.
(ooh-ooh)
Dancing shoes, nothing else we need.
(ooh-ooh)
Jump up, we're 'bout to fly high.
Let's go, it's a magical ride.

Jump up! Feel the energy,
Come and sing with me.
Let's spin around and touch the sky,
No limits, we are flying high.
Jump up! Reach up high,
Sing, don't be shy.
No limits, we are flying high,
Flying high, yeah, you and I!

SONG 3

Hey, look in the mirror, what do you see?
You're one of a kind, just like you, just like me.

No need to change, no need to hide,
You're a big star on the wild side.
Don't need to blend in with the crowd,
You'll sing your truth, you'll sing it loud.

You are you, yeah you're one of a kind,
You light up the world, let your colours shine.
Unique and bold, breaking the mould.
You're cool, you're real.
Be proud of yourself, that's the magic you feel!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If there is a **Bluetooth®** connection problem, please follow these steps:

1. Delete “**VTech 5909 Microphone**” from your device’s list of paired **Bluetooth®** devices.
2. If applicable, select to forget the pair code of the Microphone.
3. Reconnect the microphone to your device by selecting “**VTech 5909 Microphone**” from the list of available **Bluetooth®** devices on your device.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

Bluetooth® STATEMENT

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5909 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5909 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

