 


# Float & Splash Instruction Manual

## Getting Started

### Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If a used battery is present, remove it from the unit by pulling up on one end of the battery.
4. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

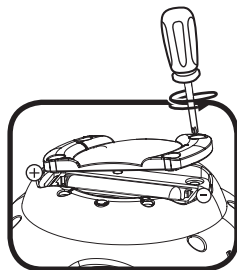

#### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

**WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this instruction manual as it contains important information.

 
### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

#### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

#### **Unlock the Packaging Locks:**

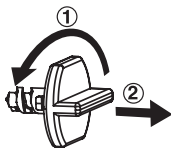

① Rotate the packaging locks 90 degrees anticlockwise.

② Pull out the packaging locks and discard.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:


[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

 
[www.vtech.com.au/sustainability/recycled](http://www.vtech.com.au/sustainability/recycled).

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## Product Features

### 1. On/Off Button

To power on the character, press the **On/Off Button** (  ). To power off the character, press this button again.

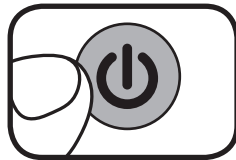

### 2. Automatic Power Off

After approximately 45 seconds of inactivity, the character will automatically power off. The character can be turned on again by pressing the **Light Up Button**.




## NOTE :

 
If the unit powers down whilst playing, please install a new battery.

**WARNING:** The battery compartment must be properly closed, as per the instructions in this manual, before putting the toy in contact with water.

The toy is to be operated in water only when fully assembled in accordance with the instructions.

## Activities

1. Press the **On/Off Button** (  ) to hear a song and to hear the character introduce themselves. The light will flash with the responses.
2. Keep pressing the **Light Up Button** to hear different phrases, sound effects, 3 songs and 15 melodies.

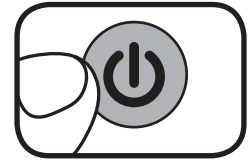

## WARNINGS

- Batteries must be changed by an adult.
- Do not use the toy in salt water.
- We do not recommend submerging the unit in the water. If the unit does get submerged in the water, please dry the unit completely.
- To prevent drowning, never leave a child unattended in the bath.
- Use a thermometer to check the temperature of the water before sitting a child in the bath. Children have very sensitive skin and can burn easily if the water is too hot.
- The toy can only be used in water between 10°C and 45°C.
- After play, empty any water that may have accumulated (particularly in the loudspeaker) and dry the toy.
- This electronic toy is intended for use in the bath and is waterproof

when used as intended. Water cannot enter the electronic components if the battery compartment door is closed properly. Tests were carried out by immersing the toy under water to a depth of 15cm for 30 minutes. Acoustic performance is reduced when the toy is immersed in water.

## CARE & MAINTENANCE

1. **Remove the unit from the water after each use.**
2. **Keep the unit clean by wiping it with a slightly damp cloth.**
3. **Keep the unit out of direct sunlight and away from any direct heat source.**
4. **Make sure to rinse and dry all the elements of the unit before storing.**
5. **Remove the batteries when the unit will not be in use for an extended period of time.**
6. **Do not drop the unit on hard surfaces.**

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. **Please turn the unit Off.**
2. **Interrupt the power supply by removing the batteries.**
3. **Let the unit stand for a few minutes, then replace the batteries.**
4. **Turn the unit On. The unit should now be ready to play with again.**
5. **If the product still does not work, install a brand new set of batteries.**

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information

The Vtech logo, consisting of the word "vtech" in a white, lowercase, sans-serif font with a registered trademark symbol (®) to its upper right, all contained within a dark grey, rounded, pill-shaped background.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***

