

vtech®

Parent's Guide

Too-Too
Drivers®

Fire Station



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003367-000 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION


Thank you for purchasing the **VTech® Toot-Toot Drivers® Fire Station!** Place the **SmartPoint®** fire engine on top of the fire station and watch him slide down, raise him up in the lift or spin him down the fire pole to promote motor skill development. The four **SmartPoint®** locations trigger songs, melodies, sounds and phrases that will engage your little one on their playtime mission.

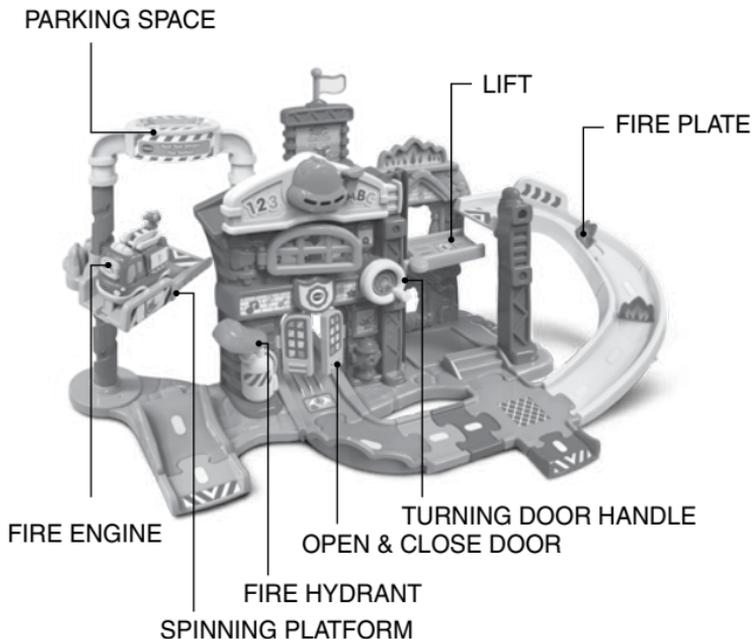

INCLUDED IN THIS PACKAGE



One **SmartPoint**[®]
fire engine

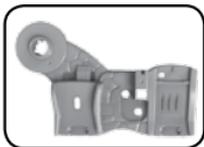

One **SmartPoint**[®]
base, blue



One base, grey



One **SmartPoint**[®]
fire station



One house wall



One flag




One pole



One spinning
platform



One **SmartPoint**[®]
parking platform

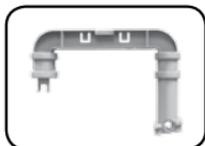

One parking
bracket



One **SmartPoint**[®]
lift platform



One top ramp
track support



One top ramp track



One bottom ramp track




Two fire plates



One bottom ramp track support



One cross track

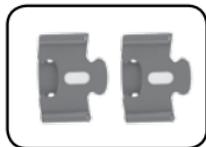

Two 1/4 straight tracks




One 90-degree track, male



Two end tracks, male



One big fire piece

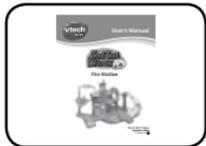

one parent's guide



One label sheet


WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this user's manual as it contains important information. The toy is surface washable only.

Adult assembly required.

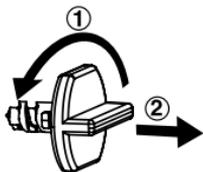


- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION Fire Engine

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the fire engine. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

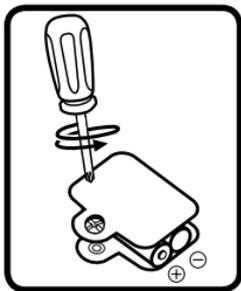

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).


The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

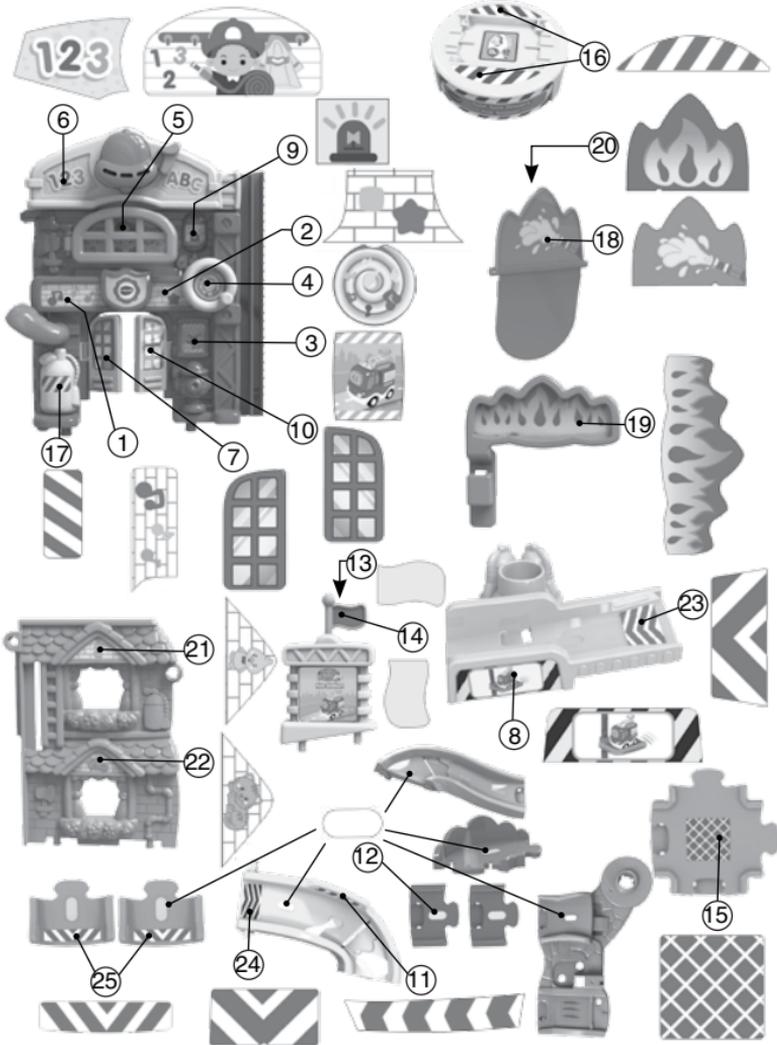


ASSEMBLY INSTRUCTIONS


Fire Station

With the VTech® Toot-Toot Drivers® Fire Station, safety comes first. To ensure your child's safety, adult assembly is required.


1. Connect the blue SmartPoint base and grey base together, as shown on the right. You will hear a “click” sound to indicate they are secure. Once the bases are attached, they cannot be removed.

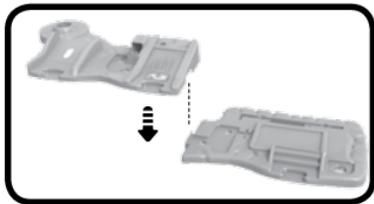

2. Attach the fire station to the blue and grey bases. You will hear a “click” sound when the pieces are secure. Once the fire station is attached, it cannot be removed.

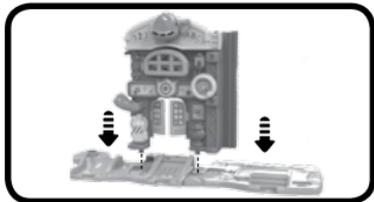

3. Insert the top ramp track support into the grey base. You will hear a “click” sound to indicate the piece is secure. Once the top ramp track support is attached, it cannot be removed.

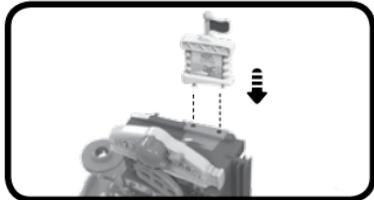


4. Attach the house wall to the grey base and to the fire station, as shown below. You will hear a “click” sound to indicate it is secure. Once the house wall is attached, it cannot be removed.




5. Attach the lift to the fire station, as shown below. Lift it up and down smoothly to make sure it is secure.




6. Insert the top ramp track support into the grey base. You will hear a “click” sound to indicate the piece is secure. Once the top ramp track support is attached, it cannot be removed.

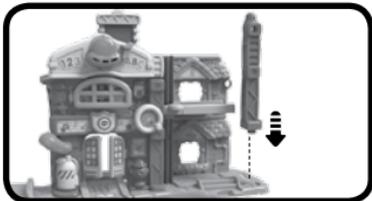


7. Attach the top ramp track to the top ramp track support and the house wall. You will hear a “click” sound to indicate the pieces are secure.

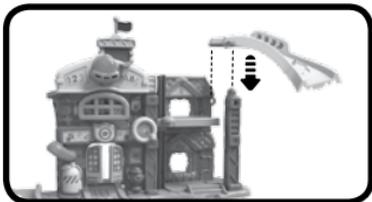


8. Attach the bottom ramp track support to the bottom ramp track and connect this to the top ramp track, as shown.

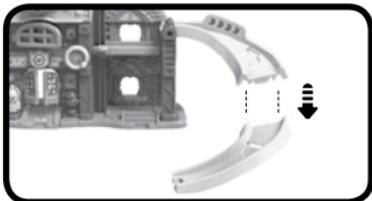


9. Insert the fire plates into both ramp tracks ensuring that you see the fire labels from the front of the play set, as shown.

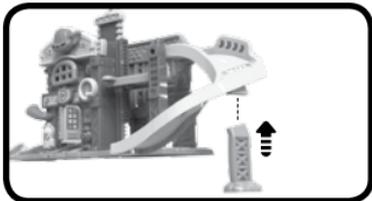


10. Insert the pole into the blue SmartPoint base. You will hear a “click” sound to indicate it is secure.

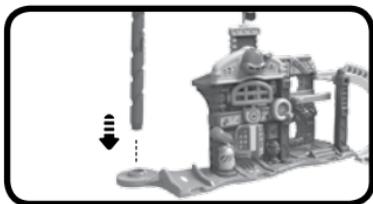


11. Insert the spinning platform onto the pole and spin it up and down smoothly to make sure it is secure.

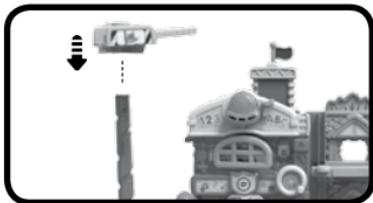


12. Insert the parking bracket onto the pole and the fire station at the same time. You will hear a “click” sound to indicate it is secure.

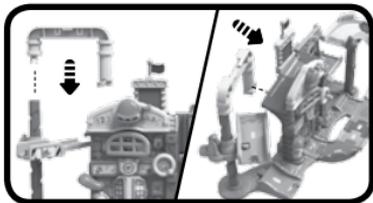


13. Attach the parking platform to the parking bracket. You will hear a “click” sound to indicate it is secure.

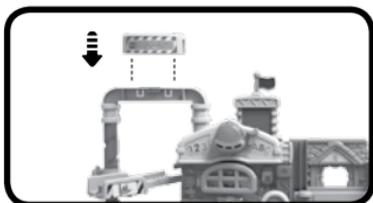

14. Insert the big fire piece into the house wall. You will hear a “click” sound to indicate it is secure.

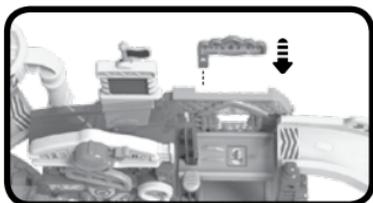

Once you've completed the above steps, you are ready to play! You can reconfigure the track pieces or you can connect this play set to other **Toot-Toot Drivers**® play sets (each sold separately).

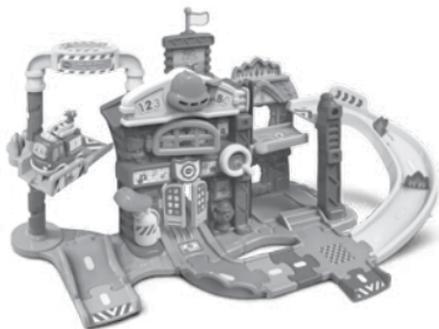

EXPAND & EXPLORE

Connect this play set to the **Toot-Toot Drivers**® **Ultimate Track Set** (as shown below) or to other **Toot-Toot Drivers**® play sets (each sold separately) to expand play and inspire creativity.




PRODUCT FEATURES

Fire Engine

1. ON/OFF SWITCH

To turn the fire engine **ON**, slide the **ON/OFF SWITCH** to the **ON** (⏻) position. To turn the fire engine **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

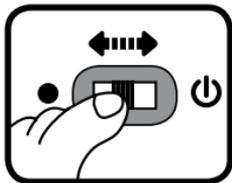

2. AUTOMATIC SHUT-OFF


To preserve battery life, the included fire engine will automatically power down after approximately 50 seconds without input. The unit can only be turned on again by pressing the **LIGHT UP BUTTON**, pushing the fire engine quickly or triggering a **SmartPoint®** location.

Note: This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Fire Engine

1. Slide the **ON/OFF SWITCH** to turn the fire engine **ON**. You will hear a song, fun phrases and sounds. The light will flash with the sounds.
2. Press the **LIGHT UP BUTTON** to hear fun sounds, songs and phrases. The light will flash with the sounds.

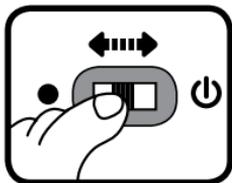

3. Push the fire engine to hear fun sounds and melodies. While a melody is playing, continue pushing the fire engine to add in fun sounds on top of the melody. The light will flash with sounds.



4. For added fun, the fire engine interacts with the **Toot-Toot Drivers® Fire Station**. Simply put the fire engine on one of the play set's four **SmartPoint®** locations to see the fire engine's light flash and to hear fun sounds, short tunes and phrases. The fire engine even interacts with other **Toot-Toot Drivers®** play sets (each play set sold separately).



ACTIVITIES

Fire Station

1. Place the fire engine or any **SmartPoint®** vehicle (each sold separately) on any of the play set's four **SmartPoint®** locations to trigger fun sounds, songs or phrases.
2. Put the fire engine on the **SmartPoint®** lift platform and lift the lift up to the top of the fire station.
3. Slide the fire engine from the top of the fire station to see it spin down the pole.
4. Watch the fire engine roll down the long ramp.
5. Flip open the fire station door to have role-play fun with the fire engine.



SING-ALONG SONGS

SONG 1

I'm a fire engine,
A big red fire engine.
I'm a fire engine,
Ready for a call!

SONG 2

Answer the call!
My siren sings,
Get to the fire to help them all.

SONG 3

Raise my ladder up,
To help those in need.
When they're safe from harm,
My job is done.

MELODY LIST

1. Flight of the Bumblebee
2. Animal Fair
3. Chicken Reel
4. The Daring Young Man on the Flying Trapeze
5. It's Raining, It's Pouring
6. Incy Wincy Spider



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.



If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.





**Visit our website for more
information about our products,
downloads, resources and more.**

vtech.co.uk



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003367-000 