



Instruction Manual

Tidy Up Vacuum



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Be a cleaning machine with the **Tidy Up Vacuum** by **VTech®**. Tackle floors, furniture and all the spaces in between with three fun configurations. Discover numbers, colours, music and counting.

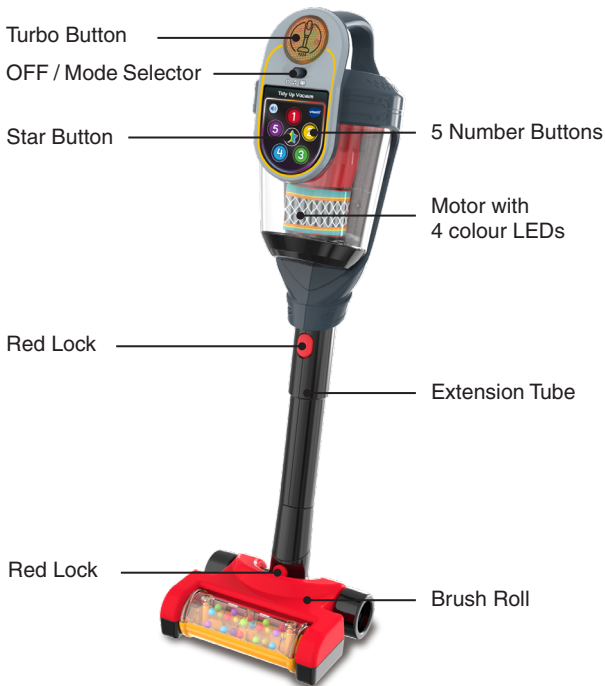

INCLUDED IN THIS PACKAGE

- One Vacuum



- One Extension Tube



- One Brush Roll



- 4 x AA batteries for demo purposes only
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

UNLOCK THE PACKAGING LOCKS:

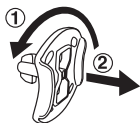


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned OFF.
2. Find the battery cover located on the back of the vacuum. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

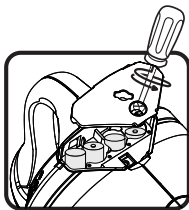

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ACTIVATING NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. To activate normal play mode, remove the packaging lock on the vacuum. You will hear 3 short “**beeps**”. The vacuum is now in normal mode.



MODES

This product includes 3 modes of play by simply adjusting the configuration of the 3 included pieces.

- Handheld



- Mini Vacuum



- Stick Vacuum



ASSEMBLY INSTRUCTIONS

Note: Adult supervision is recommended for assembly.

1. Ensure the unit is in the **OFF** position prior to assembly. Slide the **Mode Selector** to the **OFF** position.



2. Insert the **Extension Tube** into the Vacuum as illustrated. You will hear a “click” when the **Extension Tube** is inserted properly

 


3. Insert the other end of the **Extension Tube** into the Brush Roll as illustrated. You will hear a “click” when the **Extension Tube** is inserted properly.




DISASSEMBLY INSTRUCTIONS

1. Press the **Red Lock** and then pull the **Extension Tube** out from the Vacuum.

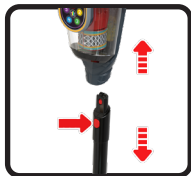

 2. Press the **Red Lock** and then pull the **Extension Tube** out from the Brush Roll.

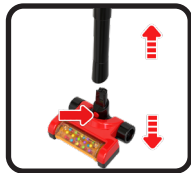

PRODUCT FEATURES

1. OFF/ Mode Selector

To turn the unit On, slide the **OFF/Mode Selector** from the Off position to a mode position. To turn the unit Off, slide the **OFF/Mode Selector** to the Off position.



2. Turbo Button

Press the **Turbo button** to learn about vacuuming. The orange light will glow or flash during play.

3. 5 Number Buttons

Press the **5 Number Buttons** to learn colours and numbers or hear some silly sounds.

4. Star Button

Press the **Star Button** to enjoy music or play a quiz game.

5. Motor with 4 colourful lights

When the Motor is on, the 4 colourful LEDs will light up and play related responses.

6. Volume Button

There are 3 volume levels: low / medium / high. Press the **Volume Button** to adjust the level.

ACTIVITIES

1. Vacuum Fun Mode

Slide the **OFF/Mode Selector** to the Vacuum Fun Mode. Press the **Turbo Button** to learn about vacuuming. Press the **Number Buttons** to hear some silly sounds. Press the **Star Button** to enjoy music.



2. Clean & Learn

Slide the **OFF/Mode Selector** to the Clean & Learn Mode. Press the **Turbo Button** to start to clean up with fun sound effects. Press the **Number Buttons** to learn the colours, numbers and counting.

Press the **Star Button** to play a quiz game. Press the **Turbo** or **Number Buttons** to answer the questions. When the answer is correct, the vacuum will play rewarding responses.



3. Automatic Shut-Off

To preserve battery life, the **Tidy Up Vacuum** will automatically power-down after several minutes without input. The unit can be turned on again by sliding the **OFF/Mode Selector** to a mode position. The unit will automatically turn off when the batteries are very low.

SONG LYRICS 🎵

Song 1

I'm a vacuum, hear me zoom,
Cleaning up around the room.
Back and forth, I clean the floor,
Shiny clean from door to door!

Song 2

One, two, count with me,
vacuuming so happily!
Three, four, we clean the floor,
five let's clean some more!

Song 3

Count the numbers, one by one.
Cleaning up is so much fun!
Two and three, come sing along.
Four and five, a tidy song!

Song 4

Red, blue, yellow too,
green and purple, peek-a-boo!
Colours shining, what a view,
I love each and every hue!

Song 5

Red and yellow, blue and green,
purple too, each colour seen!
Bright and happy, one by one,
cleaning colours can be fun!

Song 6

Zoom zoom zoom, the dirt is gone.
Vacuum and sing a little song.
Crumbs are gone, the floor looks new.
Cleaning's fun to do with you!

Song 7

Crumbs and dust, we clean away.
Now it's time to clean and play.
Zoom and swoosh, the mess is gone.
Clean and bright, we carry on!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back On. The unit should now be ready to use again.

5. If the unit still does not work, install a new set of batteries. If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

Product Warranty/Consumer Guarantees

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

