

vtech®

Instruction Manual



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school

4-10 years

3-6 years

Birth-36 months



 
To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Kidi Super Star® DJ!**



Kidi Super Star® DJ helps encourage your child to sing, dance, show their creativity and much more! This feature packed product includes a microphone, adjustable stand and a 3.5mm jack audio cable, so you can connect your own music player! Use the Music Magic feature to remove or reduce the vocals of songs! Play 4 fun games and add in over 30 sound effects to your performances! You can even record your own sound effects and tracks! Sing along to the 6 songs in Singing Fun mode or DJ to the 6 songs in DJ Mixer mode! It's time to set the mood with the disco light and get this party started!

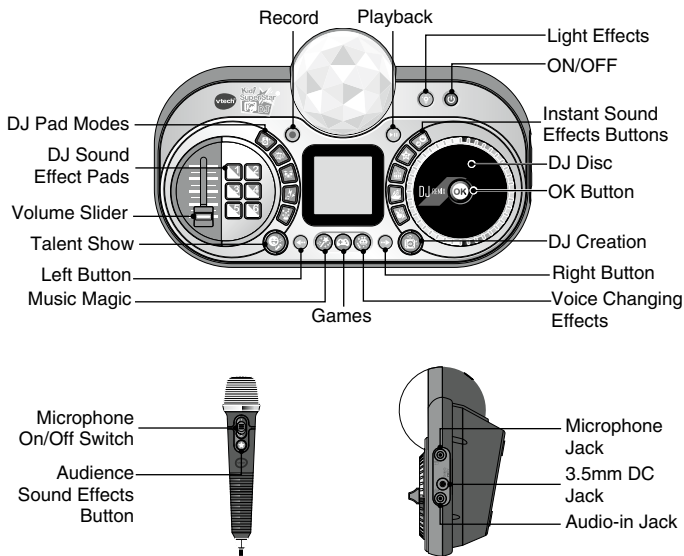




PRODUCT FEATURES



PRODUCT LAYOUT AND BUTTONS

BUTTONS ON THE MAIN UNIT

ON/OFF	Press this button to turn the unit ON/OFF.
Volume Slider 	<p>This controls the master volume of the whole unit, including the microphone volume. Slide the slider to adjust the volume at any time.</p> <p>NOTE: This unit complies with maximum volume output standards to protect your child's hearing.</p>
Music Magic Button 	<p>This feature is for Singing Fun mode & External Music Connection use only. It reduces or removes the main vocal track from most songs. This allows you to sing along to the music as the lead. Press the Music Magic button to toggle between Music Magic mode and Normal mode.</p> <p>Music Magic mode:</p> <p>Reduces or removes the main vocal track from songs*.</p> <p>Normal mode:</p> <p>Normal music playback.</p> <p>NOTE:</p> <p>This feature is not available in DJ Creation mode.</p> <p>*Music Magic feature may not work for all songs. Its effectiveness varies depending on the song. For best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic will work for every song. We do not recommend using Music Magic for mono songs or live concert performances, etc.</p>

Record 	<p>Press this button to record your performance. A menu will appear with 2 recording slots. Press the Directional buttons and press the OK button to select a slot and begin recording. During your recording, press this button again to stop recording.</p> <p>NOTE: Each slot can store a recording up to 2.5 minutes in length. Please ensure you do not remove the batteries or power adaptor (sold separately) during recording, otherwise the recording may not be saved.</p>						
Playback 	<p>Press this button to play or pause your recordings. Use the Directional buttons to select the recording you would like to listen to and press the OK button to play.</p>						
Light Effects 	<p>Press this button to turn the light ON, to dim the light, or to turn the light OFF. When the light options are shown, use the Directional buttons to change the light effect.</p> <p>NOTE: We recommend turning off the disco light if the light makes your eyes feel uncomfortable.</p>						
Voice Changing Effects 	<p>Press this button to switch between different voice changing microphone effects.</p>						
Instant Sound Effects Buttons 	<p>There are 5 instant sound effects buttons on this unit. Press any of these buttons to add a sound effect over your performance:</p> <table border="1" data-bbox="361 1057 923 1209"> <tbody> <tr> <td>• Laughter</td><td>• Applause</td></tr> <tr> <td>• Award</td><td>• Cheering</td></tr> <tr> <td>• Intro Drum</td><td></td></tr> </tbody> </table>	• Laughter	• Applause	• Award	• Cheering	• Intro Drum	
• Laughter	• Applause						
• Award	• Cheering						
• Intro Drum							


DJ Pad Modes





DJ Sound Effects Pads




There are 5 DJ Pad modes on this unit, press these buttons to switch between different DJ Pad sound effects.


 **DJ Sounds:** After selecting this mode, press any of the 6 DJ Sound Effects Pads to play general DJ sound effects.

 **Announcer Sounds:** After selecting this mode, press any of the 6 DJ Sound Effects Pads to play announcer sounds.

 **Drum Sounds:** After selecting this mode, press any of the 6 DJ Sound Effects Pads to play drum set sounds.

 **Singing / Cartoon Sounds:** After selecting this mode, press any of the 6 DJ Sound Effects Pads to play singing sound effects or cartoon sound effects whilst playing a DJ Mixer song, or to hear cartoon sound effects only in any other mode.

NOTE: Pressing this button during a DJ Mixer song will toggle between singing sound effects and cartoon sound effects.

 **My SFX:** After selecting this mode, press any of the 6 DJ Sound Effects Pads to play your own recorded sound effects.

DJ Disc



Scratch the DJ Disc to hear a scratch sound effect, or to fast forward or rewind the track in DJ Mixer mode.

Talent Show

Press this button to enter Singing Fun, External Music Connection or Free Play.

DJ Creation

Press this button to enter the DJ Creation menu. Here you can DJ along to the songs, record your own sound effects and record your own DJ Mixer track.





Games

Press this button to enter Games mode for 4 different activities.

Directional Buttons





Press these buttons to make a selection.

OK Button 	Press this button to confirm your selection. In DJ Mixer mode, press this button to sync the drum loop in time with the track.
Microphone Jack 	Used to plug in your microphone. NOTE: Please ensure a firm connection.
Audio-in Jack 	Used to plug in a battery powered external music player (not included) using the supplied 3.5mm jack audio cable.
3.5mm DC Jack 	Used to plug in a 3.5mm DC 6V power adaptor (not included).










 

 
Note: For best performance, only connect to battery powered external music players.

BUTTONS ON THE MICROPHONE

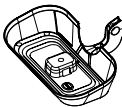Microphone ON/OFF Switch 	Use this switch to turn the microphone ON or OFF. Slide the switch up to (I) for ON and down to (O) for OFF. NOTE: To avoid picking up any unnecessary harsh sounds from the microphone, place the microphone away from the speaker and switch the microphone OFF whenever it is not in use.
Audience Sound Effects 	Press this button to add audience sounds over your performance. NOTE: The microphone must be switched ON for this button to work.



INCLUDED IN THIS PACKAGE

- 1 VTech® Kidi Super Star® DJ
- 1 microphone
- 1 3.5mm jack audio cable
- 1 instruction manual with lyrics
- 4 AA batteries for demo use only
- 1 set of stand components

	x 1		x 1		x 1
	x 2		x 1		
	x 1		x 1		x 1
	x 1		x 3		
	x 1		x 1		


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

This toy is only to be connected to equipment bearing either of the following symbols:  or .




Removing the packaging locks:





- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

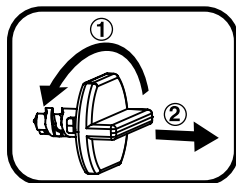


STAND ASSEMBLY

Adult assembly required. For your child's safety, do not let your child play with this product until it is fully assembled.

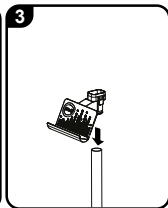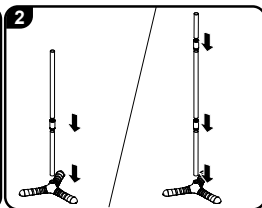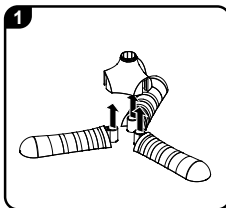


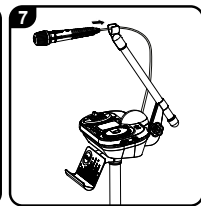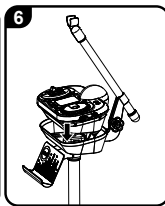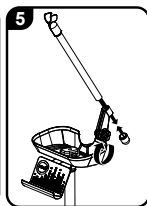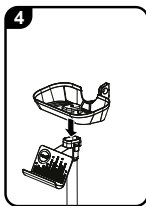


Stand components include 3 poles of different lengths to adjust height. You can choose a suitable height from 7 combinations for your child's height.

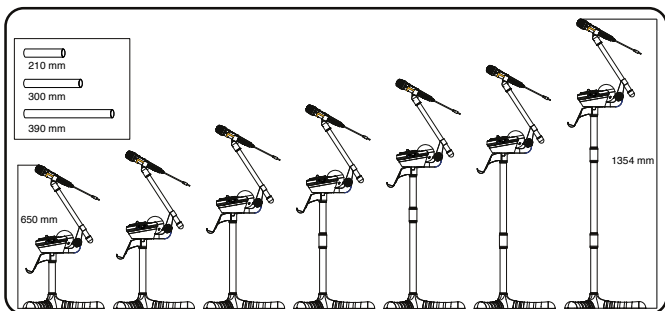

NOTE: For the best stability, we recommend positioning any foot of the stand perpendicular to the back of the **Kidi Super Star® DJ** unit. Please refer to the below illustration.

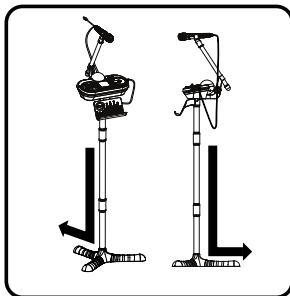

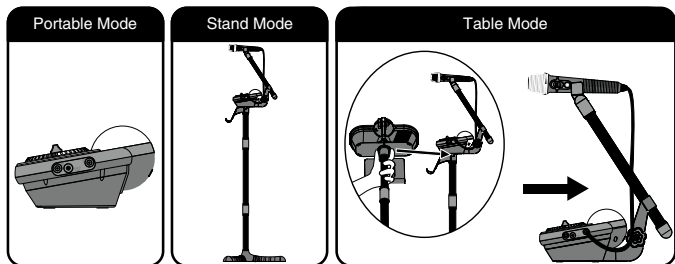

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION



Kidi Super Star® DJ uses 4 AA batteries or a 3.5mm DC 6V power adaptor (not included).

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

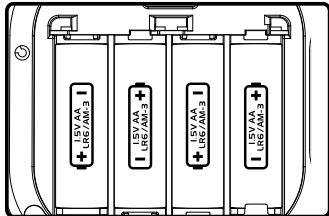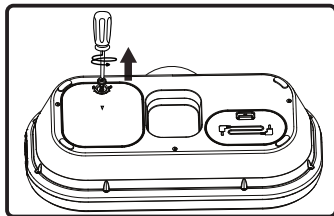

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

POWER ADAPTOR CONNECTION

- Make sure the unit is turned OFF and ensure no batteries remain inside the unit.
- Locate the 3.5mm DC Jack on the side of the unit.
- Connect the power adaptor (not included) into the unit's 3.5mm DC Jack.
- Insert the other end of the power adaptor into a plug socket.
- Make sure the plug socket switch is ON and then turn the unit ON.

Safety information when using power supply for toys

Note: The USB charger or AC/DC adapter is referred to as “power supply” throughout the manual.


- VTech recommends a power supply of the below specification:

6V/(800mA or above) DC output with 3.5mm(OD)/1.35mm (ID) plug (centre positive).

- This toy shall only be used with a power supply for toys.
- The power supply is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged in toy with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be scrapped.
- Power supplies for toys are not intended to be used as toys, and the use of these products by children shall be under the full supervision of parents.

NOTE: If the unit stops working or the sound becomes weak, it may be because of a fault with the power adaptor connection.

Turn the unit OFF and unplug the adaptor for 15 seconds. Then plug the adaptor back in and turn the unit ON. If the problem persists, the adaptor you are using may be faulty.

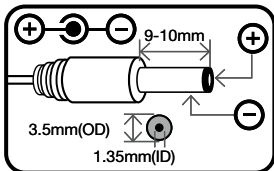


HOW TO USE THE MICROPHONE

Plug in the included microphone into the microphone jack. Please make sure it has a firm connection.

Slide the Microphone ON/OFF switch up to (I) to turn the microphone ON. Speak into the microphone as closely as possible for a loud and clear volume output.

To avoid picking up any unnecessary harsh sounds, please ensure that the microphone is kept away from the speaker and that the microphone is switched OFF whenever it is not in use.

TO BEGIN USING KIDI SUPER STAR® DJ TURN ON THE UNIT

Press the ON/OFF Button  to turn the unit ON and enter normal play mode.

LOW BATTERY ICON

When the batteries are exhausted, the low battery icon will be displayed and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.






If the product is frequently used, then the batteries will drain at a faster rate. We recommend using a power adaptor (not included) if this product is to be used frequently.

AUTO POWER OFF

To preserve battery life, **Kidi Super Star® DJ** will automatically power off if there is no operation for a period of time.

ACTIVITIES

Talent Show 	<ul style="list-style-type: none">• Singing Fun• External Music Connection• Free Play
DJ Creation 	<ul style="list-style-type: none">• DJ Mixer• Record your own DJ Mixer track to mix• DJ Sound Effects Customisation (Record your own sound effects)
Games 	<ul style="list-style-type: none">• Hungry Monster• Sneaky Notes• Freeze Dance• Tongue Twisters

1. TALENT SHOW

Press the Talent Show button to enter the Talent Show menu. Then press the Directional buttons to choose an activity and press the OK button to confirm.

1.1 Singing Fun

Choose the Singing Fun activity to learn and sing-along to the 6 built-in songs or music from your own battery powered external music player (not included). Press the Directional buttons to choose a song and press the OK button to begin.

Built-in Songs

Here you can sing along with the songs and watch great on-screen animations. When you are ready, press the Music Magic button to remove the main vocal track from the built-in songs and sing by yourself like a Super Star!



NOTE: For the lyrics of the 6 built-in sing-along songs, please refer to the APPENDIX.

External Music Connection

Choose the External Music Connection activity and plug in a battery powered external music player (not included) via the provided 3.5mm jack audio cable to listen to your own music! From here, you can press the Music Magic button to reduce or remove the main vocal track from the current song. Now you can sing-along and be a Super Star!



You can also set an auto off timer in this mode. To do so, simply press the OK button and press the Directional buttons to choose your desired auto off time: 60 minutes, 90 minutes, 120 minutes, 180 minutes or disable auto off. Please note that the disable auto off option can only be used when using a power adaptor (not included).

The volume slider on **Kidi Super Star® DJ** cannot control the volume of external devices. Please use the volume controls on your external music player (not included) to increase or decrease volume. Music Magic mode may not apply for all songs. For details, you may refer to the Music Magic section under PRODUCT LAYOUT AND BUTTONS.

NOTE: Please disconnect your external music player (not included) and the provided 3.5mm jack audio cable from **Kidi Super Star® DJ** if it is not in use.

Note: For best performance, only connect to battery powered external music players.

1.2 Free Play

Choose the Free play activity to start your show! You can perform your own concert, talk show, talent show, or to just play around and have fun! It's Show Time!



2. DJ CREATION

Press the DJ Creation button to enter the DJ Creation menu. Then press the Directional buttons to choose a DJ Mixer song, or to record your own DJ Mixer track or DJ sound effects! Once you've made your selection, press the OK button to begin.

2.1 DJ Mixer Songs

Choose a DJ Mixer song by pressing the Directional buttons. Then, press the OK button to begin.

Scratch the DJ Disc for a scratch sound effect and to fast forward or rewind the song. To change the drum loop, press a Directional button. Press the OK button to sync the drum loop to the track after fast forwarding or rewinding the track.

Press any of the DJ Sound Effects Pads to play different sound effects over your mix.

NOTE: For the lyrics of the 6 DJ Mixer songs, please refer to the APPENDIX.



2.2 Record your own DJ Mixer track to mix

Here you can use the microphone to record your own track for DJ mixing! You can record a 1 minute track, which will then be available in the DJ Mixer songs menu. Simply press the OK button to begin and to end your recording.

NOTE: For this recording, voice changing effects are not available.



2.3 DJ Sound Effects Customisation

Here you can record your own voice as sound effects for use on the DJ Sound Effects Pads.

Press any of the DJ Sound Effects Pads and then press the OK button to start your recording. Once you're done, press the OK button to stop the recording.

These recorded sound effects can be heard by pressing the DJ Sound Effects Pads if the DJ Pad Mode is set to My SFX mode.



3. GAMES

Press the Games button to enter the Games menu. From here, press the Directional buttons to choose a game, pressing the OK button to confirm.

3.1 Hungry Monster

Music notes will fall down from the top of the screen. Press the Directional buttons to help the monster catch the music notes as fast as possible. Be careful of the other falling objects!



3.2 Sneaky Notes

The sneaky notes are hiding in the music boxes. The music boxes will then begin moving around. When they stop, can you find which music box has the hidden music note? Press the Directional buttons to choose the music box, and press the OK button to confirm your selection.



3.3 Freeze Dance

To play this fun party game, simply dance along with the music and freeze when the music pauses. There is no right or wrong way to dance; this is just a fun party game to play either on your own or with friends! Enjoy and have an amazing dance time!



3.4. Tongue Twisters

Challenge yourself to master all of these tricky Tongue Twisters! Press the Directional buttons to select a twister, then press the OK button to confirm. Listen to the instructions and repeat the Tongue Twister! Press the OK button when you've finished and select the next Tongue Twister! Can you master them all?



NOTE: For all of the Tongue Twister sentences, please refer to the APPENDIX.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the device carefully.
3. Keep the device away from dusty or dirty areas.
4. Keep the device away from moisture or extreme temperatures.
5. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
6. Do not drop the device on a hard surface and do not expose it to or immerse it in water.

EPILEPSY WARNING:

A small percentage of users may experience epileptic seizures when viewing flashing lights or patterns.

Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing. Turn off the Disco Light on the **Kidi Super Star® DJ** if you do not feel comfortable.

TROUBLESHOOTING

Please refer to this section if you are experiencing difficulty operating your **Kidi Super Star® DJ**.

Problem	Possible cause	Correction
Your Kidi Super Star® DJ has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed using the correct polarity.
	Depleted batteries	Replace with new batteries.
	Power adaptor issue	Ensure that the adaptor is connected correctly.
Microphone output cannot be heard	The microphone is not plugged in correctly	Ensure that the microphone is connected to the unit firmly and correctly.
	The microphone is not switched on	Turn the ON/OFF switch on the microphone to the (I) ON position.
	The master volume is low	Turn up the master volume on the unit using the Volume Slider.
Microphone output is not enough*	The microphone volume is low	Turn up the master volume on the unit using the Volume Slider.

Harsh sounds coming from the speaker	The microphone may be too close to the speaker	To avoid picking up any unnecessary harsh sounds, please ensure that the microphone is kept away from the speaker and that the microphone is switched OFF whenever it is not in use.
Music Magic mode is not functioning correctly	The external music player is not correctly connected to Kidi Super Star® DJ	Make sure that your battery powered external music player is firmly connected to Kidi Super Star® DJ at both ends of the provided 3.5mm jack audio cable. NOTE: If your battery powered external music player is inside a case, we recommend removing it to ensure a firm connection with the audio cable.
	Unsuitable song source	The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, studio recorded songs are recommended. Unfortunately we cannot guarantee Music Magic will work with every song. It is not recommended to use Music Magic for mono songs or live concert performances, etc.

***NOTE:** This unit complies with maximum volume output standards to protect your child's hearing.

Note: For best performance, only connect to battery powered external music players.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

APPENDIX

Tongue Twisters

1	Double bubble gum, bubbles double.
2	She sells seashells on the seashore.
3	Red lorry yellow lorry, red lorry yellow lorry, red lorry yellow lorry.
4	She sees cheese, she sees cheese, she sees cheese.
5	Rolling red wagons, rolling red wagons, rolling red wagons.
6	Freshly fried flying fish.
7	A proper copper coffee pot.
8	I scream, you scream, we all scream for ice cream.
9	Which wristwatches are Swiss wristwatches?
10	Many an anemone sees an enemy anemone.
11	How much wood would a woodchuck chuck if a woodchuck could chuck wood?
12	Peter Piper picked a peck of pickled peppers, A peck of pickled peppers Peter Piper picked.
13	Fuzzy Wuzzy was a bear. Fuzzy Wuzzy had no hair. Fuzzy Wuzzy wasn't fuzzy, was he?
14	Any noise annoys an oyster, but a noisy noise annoys an oyster more.
15	If two witches were watching two watches, which witch would watch which watch?



1. I'll Be There For You!

You can count on me, like 1-2-3,
I'm always here to chat, I've always got your back.



No matter where or when,
No matter if you are happy or sad,

I'll be there for you,
When it rains, when it pours, I'll be there for you!
When it rains, when it pours, I'll be there for you!



So never give up, just hang in there.
I'm always here to care, I'm always here I swear.



No matter where or when,
No matter if you are happy or sad.

I'll be there for you.
When it rains, when it pours, I'll be there for you!
When it rains, when it pours, I'll be there for you!





2. Thank you, Earth!

Green grass that we walk on with our bare feet.
Fruit and berries that we eat as a little treat.
Fresh air that we breathe in as we stroll on down
the street.
Blue oceans that make us feel so free.



Thank you, Earth!
Our home on Earth.
Thank you for giving us everything we need.
Thank you for helping us grow.
Thank you for bringing us peace.
Thank you, Earth!



By the beach we'll lay out and feel the sea breeze.
In the forest, the sun shines through the tree leaves.
When it rains we'll smile, as it makes our rivers flow.
When it's winter, we'll play out in the snow.



Thank you, Earth!
Our home on Earth.
Thank you for giving us everything we need.
Thank you for helping us grow.
Thank you for bringing us peace.



Thank you, Earth!
Our home on Earth.
Thank you for giving us everything we need.
Thank you for helping us grow.
Thank you for bringing us peace.
Thank you, Earth!





3. Move and Groove!

Follow me now and clap, clap, clap your hands!

Follow me now and jump, jump up and down!



Dance like nobody's watching,

Dance, dance, dance, come on!

Sing like nobody's listening,

Ohh, ohh, ohh, ohh yeah!



We're gonna groove like we mean it,

We're gonna move and groove, yeah!

Follow me now and sing, sing, ooh ooh ooh!

Ooh ooh ooh ooh ooh ooh, ooh ooh ooh ooh ooh ooh!

Follow me now and sing, sing, yeah yeah yeah!

Yeah, yeah, yeah yeah yeah yeah!



Dance like nobody's watching,

Dance, dance, dance, come on!

Sing like nobody's listening,

Ohh, ohh, ohh, ohh yeah!

We're gonna groove like we mean it,

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!





4. We Dream On!

When we're feeling blue,
Just know I got you.
Cause I know we'll be alright and that in the end.



We'll dream on,
We can reach the stars if we just imagine.
Yeah, we'll dream on,
If we just imagine, we can make it happen.



Yeah, you know it's true,
One plus one makes two.
Side-by-side we're the best of friends,
And we can make it through.



We'll dream on,
We can reach the stars if we just imagine.
Yeah we'll dream on,
If we just imagine, we can make it happen.



5. Super Star!

Dim the lights, come on,
Let's rock the house tonight.
Turn it up, come on,
Let's put on a show alright.



I'm a super star tonight,
Standing centre in the spotlight.
I have come so far, strumming my guitar.
I'm a super star tonight!



We are here to dance and party all night long.
Volume up,
Let's hear the crowd all sing this song!



I'm a super star tonight,
Standing centre in the spotlight,
I have come so far, strumming my guitar,
I'm a super star tonight!





6. You and Me!

Time flies by,
With you right here by my side.
Our friendship's not easy to come by.



You and Me,
We have so much fun together.
You and Me,
We'll always be best friends forever.
You and Me,
Let's go on this adventure together!



Such good times,
When we are hanging out,
Time after time,
It's always such a blast, there's no doubt!



You and Me,
We have so much fun together.
You and Me,
We'll always be best friends forever.
You and Me,
Let's go on this adventure together!



1. I'll Be There For You!

You can count on me, like 1, 2, 3,
I'm always here to chat,
I've always got your back.

I'll be there for you,
When it rains, when it pours.
I'll be there for you,
When it rains, when it pours.
I'll be there for you!

I'll be there for you,
When it rains, when it pours.
I'll be there for you,
When it rains, when it pours.
I'll be there for you!

Singing Sound Effect



Me



1, 2, 3



To chat



 
I'll



Be there for you



For you

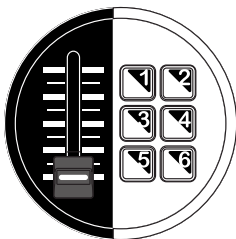

2. Thank you, Earth!

Green grass that we walk on with our bare feet.

Fruit and berries that we eat as a little treat.

Fresh air that we breathe in as we stroll on down the street.

Blue oceans that make us feel so free.

Thank you, Earth.

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth.

Our home on Earth.

Thank you for giving us everything we need.

Thank you for helping us grow.

Thank you for bringing us peace.

Thank you, Earth!

Singing Sound Effect



Little treat



Down the street



Blue oceans



 
Feel so free



Thank you, Earth



Earth

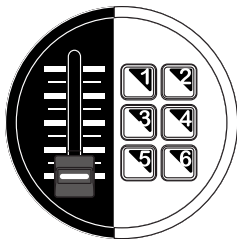

3. Move and Groove!

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!

Follow me now and clap, clap, clap your hands.

Follow me now and jump, jump up and down.

Dance like nobody's watching,

Dance, dance, dance come on!

Sing like nobody's listening,

Ooh, ooh, ooh, ooh yeah!

We're gonna groove like we mean it.

We're gonna move and groove, yeah!

We're gonna groove like we mean it.

We're gonna move and groove, yeah!

We're gonna move and groove, yeah!

Singing Sound Effect



We're gonna move and groove, yeah



Clap your hands



Up and down



 
Come on



Ooh, ooh, ooh, ooh yeah



Yeah

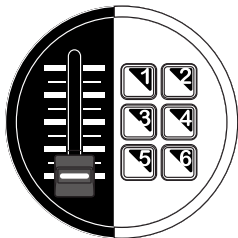

4. We Dream On!

We'll dream on,

We can reach the stars if we just imagine.

Yeah, we'll dream on,

If we just imagine, we can make it happen.

When we're feeling blue,

Just know I got you.


Cause I know we'll be alright and that in the end.

We can reach the stars if we just imagine.

If we just imagine, we can make it happen!

Singing Sound Effect




 1 We'll dream on

 
 2 Imagine

 3 Happen

 4 Feeling blue

 5 Mmm...

 6 In the end

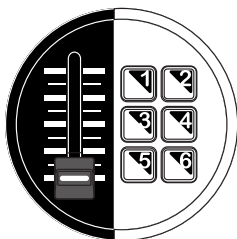

5. Super Star!


Dim the lights, come on,
 Let's rock the house tonight.
 Turn it up, come on,
 Let's put on a show alright.

 
I'm a super star tonight,
 Standing centre in the spotlight.
 I have come so far, strumming my guitar.

I'm a super star tonight,
 Standing centre in the spotlight.
 I have come so far, strumming my guitar.
 I'm a super star tonight.
 I'm a super star tonight.

Singing Sound Effect



-  1 Tonight
-  2 Alright
-  3 Super star tonight
-  4 Light
-  5 My guitar
-  6 I'm a super star tonight

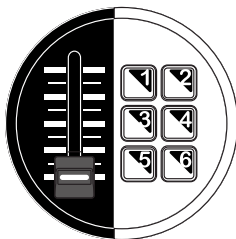

6. You and Me!

You and Me!


You and Me!


Such good times,
When we are hanging out.
Time after time,
It's always such a blast, there's no doubt.


You and Me,
We have so much fun together.
You and Me,
We'll always be best friends forever.
You and Me,
Let's go on this adventure together!

Singing Sound Effect



 1 You and Me

 
 2 Hanging out

 3 No doubt

 4 Me

 5 Forever

 6 Together

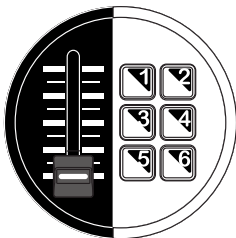

Ecodesign Information	(EU) 2023/826 amending Regulation (EC) No. 1275/2008
Manufacturer's name	VTECH
Product type	Toy
Model No.	5317
Power consumption in off mode	0.2 W
Default time to switch to off mode	18 minutes
Adaptor Information	AC/DC adaptor, Conform to the ERP norm, DC output 6V/800mA

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

