


vtech®

User's Manual

Gadget the Learning Robot



© 2015 VTech
Printed in China
91-003103-003 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Gadget the Learning Robot**. Get ready to learn and dance with **Gadget the Learning Robot**! Clap your hands and watch him dance to the beat! Featuring 6 built-in games and 3 two sided game cards Gadget teaches letters, phonics, numbers, colours, animals, logic and more! You can also give Gadget different faces by turning the dials! Come on! Let's have fun with **VTech® Gadget the Learning Robot**!

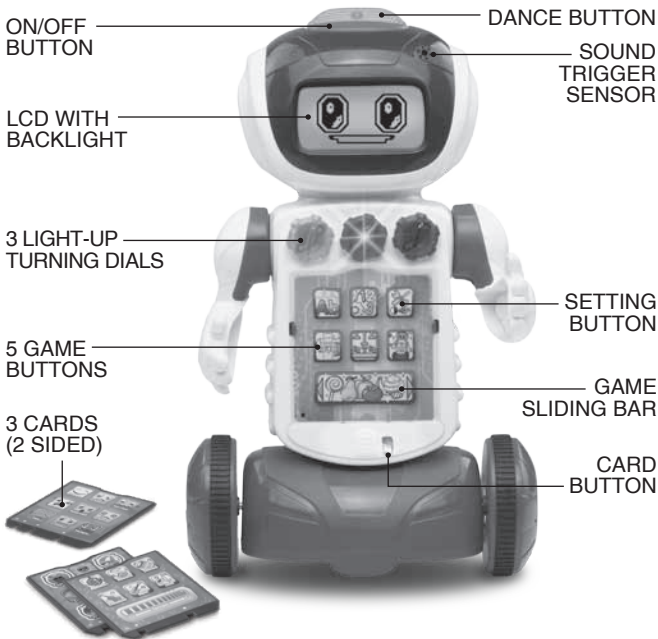

INCLUDED IN THIS PACKAGE

- One **VTech® Gadget the Learning Robot**
- 3 two sided game cards
- One **VTech® Gadget the Learning Robot** instruction manual

 
WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

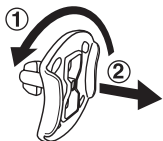

① Rotate the packaging lock counter-clockwise 90 degrees.

② Pull out the packaging lock.

GETTING STARTED

 
POWER SOURCE

The **VTech® Gadget the Learning Robot** operates on 4 AA batteries (AM-3/LR6). The AA sized batteries included in the unit are for demo purposes only and are not long-life batteries.

BATTERY INSTALLATION

NOTE: For best performance, remove all factory-installed batteries from the **VTech® Gadget the Learning Robot** and use new alkaline batteries.

1. Make sure the unit is turned OFF.

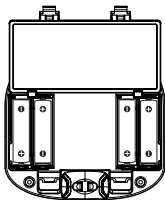

2. Locate the battery compartment at the bottom of the unit and open it.
3. Insert 4 AA sized batteries as illustrated.
4. Close the battery cover.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

 
www.recyclenow.com

ACTIVATE NORMAL PLAY MODE

When the product is taken out of the packaging, turn it on and insert a card, when you see Normal Mode on the screen and hear beep sounds you are in normal play mode.

SAFETY GUIDELINE

For your child's safety, do not put Gadget on your clothing, body or hair. For best performance, only put Gadget on hard and flat surfaces. Please note that Gadget will move. To avoid any accidents please don't put Gadget on any small or tall surfaces.

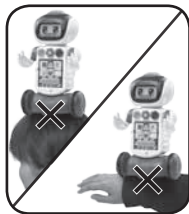

PRODUCT FEATURES

1. TURNING THE UNIT ON AND OFF

Press the **ON/OFF button** () to turn the unit **ON**, press the button again to turn the unit **OFF**.



 
2. DANCE BUTTON

Press the dance button anytime to see Gadget dance! The button will light up while dancing.



3. MOVING ARMS AND WHEELS

See Gadget spin, turn and move around while dancing.

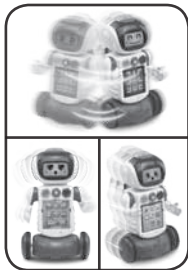


4. LIGHT-UP TURNING DIALS

Turn the dials to select an answer or hear fun responses. The dials will light up when turned or when Gadget is dancing.



5. 5 GAME BUTTONS

 Press the 5 game buttons on Gadget's tummy to choose a game.

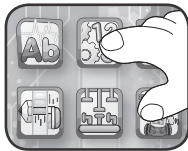

6. GAME SLIDING BAR

Press the bar to enter the feeding game. Slide the bar to select a food for Gadget.



7. SETTING BUTTON

Press this button to set the volume level and screen brightness. Pressing this button once will enter the volume setting and pressing it again will enter the screen brightness setting. Choose the screen brightness and volume level by turning the 3 dials. After selecting your preferred setting, wait for several seconds and the screen will return to the main menu.



 
8. TWO SIDED GAME CARDS

There are 3 two sided game cards, insert the game card in the **VTech® Gadget the Learning Robot** to enter the corresponding game to play.



9. CARD SLOT

Insert a game card into the slot on Gadget's tummy to play the corresponding game.

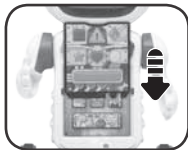

10. CARD BUTTON

Press this button to eject the card from Gadget's tummy.



11. SOUND TRIGGER SENSOR

Clap your hands to provide a beat for Gadget to dance to!



IMPORTANT NOTE

When asked to clap your hands make sure you are close to Gadget's sound trigger sensor for this to work effectively.

12. CARD STORAGE

Store the cards away in the card holder.



13. AUTOMATIC POWER OFF

To save power, the **VTech® Gadget the Learning Robot** automatically shuts down if it does not have any input after several minutes. Press the ON/OFF button to turn the unit ON again.

ACTIVITIES:

TUMMY ACTIVITIES:

Press the tummy buttons to enter the corresponding activity.

ACTIVITY 1: Letter Learning

Gadget has received a radio signal, turn the dial to see what is it. Turn the selection dial to the right or left, the screen will show the radio signal animation with sound, then show a fun transition animation of letters. Turn the middle dial to get a surprise. Clap your hands and the unit will display a letter and play a rap song about that letter.




ACTIVITY 2: Number Learning

Gadget wants to learn numbers with you! Turn the selection dial to the right or left, the screen will show the next or previous number. Turn the middle dial to get a surprise. Clap your hands and the unit will display a number and play a rap song about that number.




ACTIVITY 3 : Puzzle Fun

 Help Gadget solve the puzzles! There are 10 different objects that are jumbled up. An object will be divided into 3 different parts. Turn the dials to find the matching parts to complete the puzzle. Once the puzzle is completed, Gadget will say what the object is.

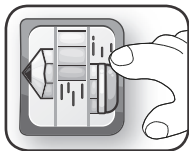


ACTIVITY 4: Find the Difference

 The nailing system is out of order. There are 3 nails and 1 is different. The 3 dials represent three hammers. Turn the correct dial and hammer the different nail within the time limit.

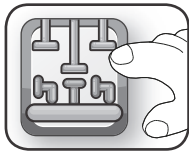

ACTIVITY 5: Beatbox Dancing

 Let's teach Gadget how to dance! Clap your hands to give him a dancing beat and he will dance. There are several built-in beats to choose from. Turn the left or right dials to choose and turn the middle dial to repeat the current beat pattern.

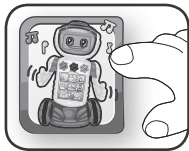

ACTIVITY 6: Feeding Time

Gadget is hungry, slide the feeding bar to choose a food for him to eat. Gadget will say the food you have chosen and you will see an animation of him eating it.

Turn the left dial and listen to funny sounds. Turn the right dial to find the food according to the question. Turn the middle dial to enter the guessing game and clap your hands to see what's Gadget's been eating.



SETTINGS:

You can adjust the screen brightness and volume loudness in settings. Turn the left dial to decrease the level, turn the right dial to increase the level.




CARD ACTIVITIES:

Insert the card in Gadget's tummy to play the card activities.

CARD 1A: System Checking

Help Gadget to check his computer system to make sure everything is fine. Gadget will give instructions and you need to follow the order correctly. When the answer is correct, the unit will show a rewarding response. Turn the dials and press the card buttons to play.

 When you answer 5 questions correctly, you will level up. When you reach level 3 you will stay at this level until you exit this activity.

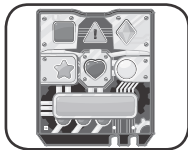


CARD 2A: Wire Fixing

Gadget's wire system is down! There are some problems with his wires. Help him to fix it and turn on the power.

A wire route will be shown on the screen but there are some parts missing. Turn the left dial to get a hint. Turn the right dial to choose the answer area. Turn the middle dial to repeat the question. Press the buttons on the card to complete the route.

 When you answer 5 questions correctly, you will level up. When you reach level 3, you will stay at this level until you exit this activity.

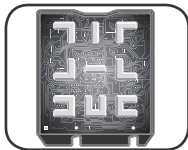

CARD 3A: Animal Rush

A UFO has appeared and will invite some animals to travel into space! Which animals will be invited? Different animals will be shown on the screen and the UFO will invite some of them onto the spaceship. There are 9 animals on the card. Look carefully and press the correct animal buttons on the card to answer. If the correct answer is given a rewarding animation will be shown.

Turn the left or right dial to get different hints, turn the middle dial to repeat the question.

When you answer 5 questions correctly, you will level up. When you reach level 3, you will stay at this level until you exit this activity.



CARD 1B: Weather or Season

Can you guess what the weather or season is? Gadget will show you something and ask you to guess what weather or season is. Press a button on the card to answer. Turn the left or right dials to hear some funny sounds, turn the middle dial to repeat the question.



CARD 2B: Music Fun

Learn different music styles with Gadget. There are 5 music style buttons on the card: Robotic, Samba, Classical, Rock and Jazz. Each music style plays 3 different melodies. Turn the dials to choose a melody. When you press the Random button, Gadget will play one of 15 melodies. Slide the tempo bar to the left to make the tempo slower, slide to the right to make the tempo faster.



CARD 3B: Robot Face

Let's design Gadget a new face! Turn the dials to choose him different eyes or mouth. Or press the card buttons to learn different emotions and you will see the corresponding animations with fun sounds.



CARE & MAINTENANCE

1. Keep your **VTech® Gadget the Learning Robot** clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Avoid dropping it. Never try to dismantle it.
5. Always keep **VTech® Gadget the Learning Robot** away from water.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

