 


DIGIART **Squiggles & Sounds**

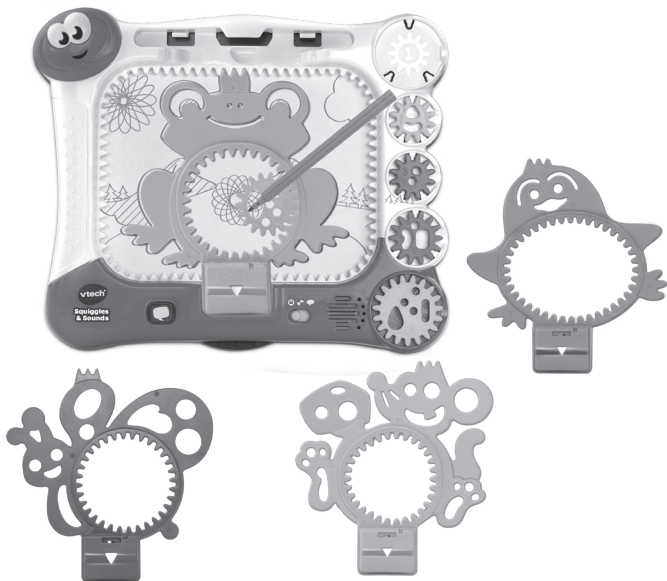

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® DigiArt Squiggles & Sounds**. Create unique spiral designs using the four animal stencils and five gears on the spiral art board. Hear playful responses, learn fun facts about animals or listen to melodies while you create your masterpiece!

INCLUDED IN THIS PACKAGE

 
- One Squiggles & Sounds Board
- Four animal stencils
- Five gears
- One back board
- One marker
- One parent's guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

Unlock the packaging locks:

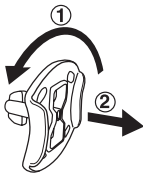

① Rotate the packaging locks 90 degrees anticlockwise.

 
② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.

3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover.

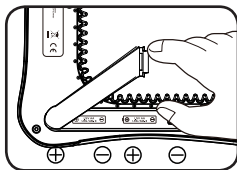

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

TRY ME MODE

If you've just taken the **DigiArt Squiggles & Sounds** out of the packaging for the first time, you need to disable Try Me mode before playing. To disable Try Me mode, insert one of the animal stencils and the program will be reset to normal mode.

PRODUCT FEATURES

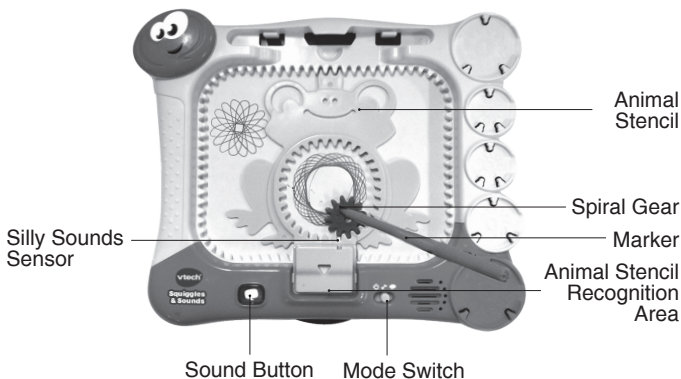


BACK BOARD INSTALLATION

1. Start with the spiral art board face down.
2. Insert the back board first into the upper left-hand corner and then into the right-hand corner.




STENCILS & GEARS STORAGE

 Stack the four stencils together with the frog stencil on the top, then insert the stacked stencils into the frame. All of the gears can be stored on the side of the Squiggles & Sounds board, as illustrated below.

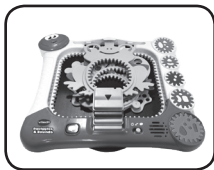

Paper Installation

 1. Unclip the frame from the back board, and insert a sheet of A4 paper.
2. Clasp the frame to the back board to keep the paper secure.
3. Only use one piece of paper at a time.

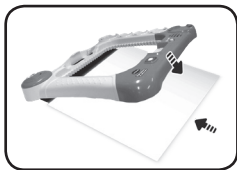

Animal Stencil Installation

1. Locate the **Animal Stencil Recognition Area**.
2. When installing a stencil, be sure the bottom is firmly inserted into the **Animal Stencil Recognition Area** and that the top is firmly inserted into the teeth of the frame.



Mode Switch

To turn the unit **ON**, slide the **Mode Switch** to the Music Mode or the Drawing Mode position. To turn the unit **OFF**, slide the **Mode Switch** to the **OFF** position.

Sound Button

In Music Mode, press this button to play melodies. Press it again to play the next melody.

In Drawing Mode, press this button to hear fun responses.

Silly Sounds Sensor

Roll a gear across the **Silly Sounds Sensor** within the **Animal Stencil** to trigger fun sounds.



Automatic Shut Off

To preserve battery life, the **DigiArt Squiggles & Sounds** will automatically power down after approximately two minutes without input. The unit can be turned on again by pressing the **Sound Button**.

Low Battery

When the batteries are exhausted, the **DigiArt Squiggles & Sounds** may shut off or restart suddenly. Please replace the batteries with a full set of new batteries before further use.

ACTIVITIES:

1. Drawing Mode

Insert one of the animal stencils and use any spiral gear to draw. Roll the gear inside the animal stencil to hear funny sounds. Or press the **Sound Button** to hear the animal talk, give fun facts or say a funny rhyme!

2. Music Mode

In this mode you can listen to 20 melodies. Press the **Sound Button** to play the next melody.

RHYMES:

Frog

I'm a jumping frog, jump, jump, jump!
From my lilypad to the tree stump!
I love flies, yummy and delicious!
I eat them every day, they're so nutritious!

Mouse

I'm a squeaky mouse, squeak, squeak, squeak!
When people see me, they give a little shriek!
I'm just a friendly mouse, looking for some cheese!
If you have any, will you give it to me please?

Penguin

 
 
I'm a little penguin, in the snow!
I slide on my tummy, here I go! Whoa!
I love eating fish from the deep blue sea!
Let's be friends, you and me!

 
 
 
 
 
 
Butterfly

 
 
 
 
 
 
I'm a butterfly who loves to fly!
I use my wings to soar sky high!
I love to stop, and smell the flowers!
I could play with you for hours and hours!

 
 
 
 
 
 
SPIRAL ART GUIDELINES:

The table below shows the basic patterns you can draw with the included gears and stencils:

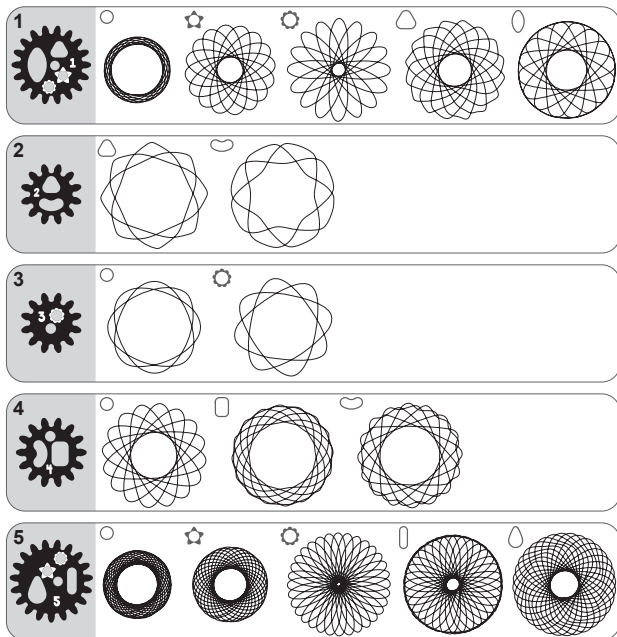
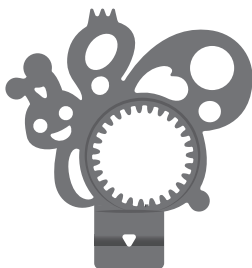


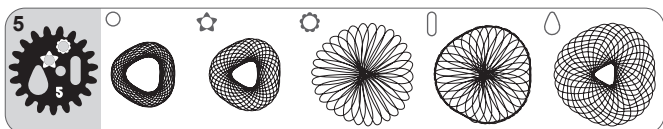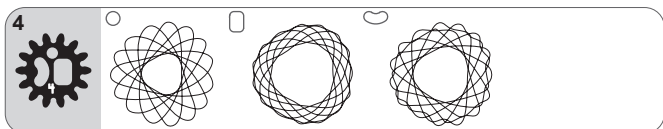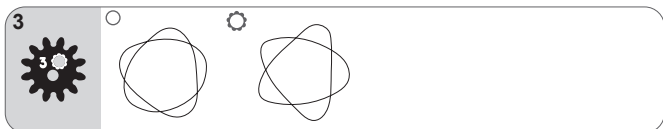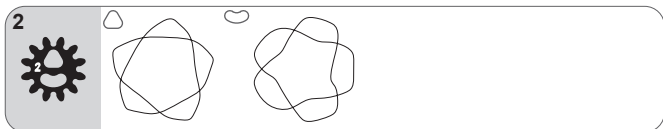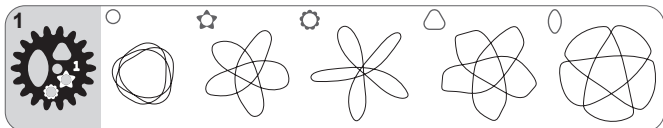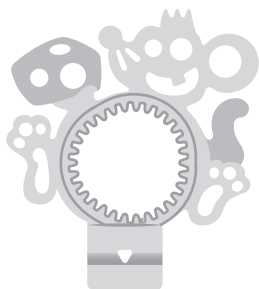


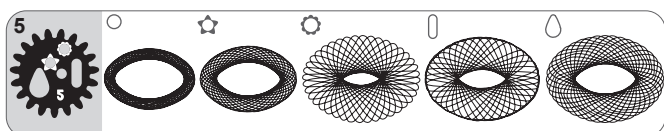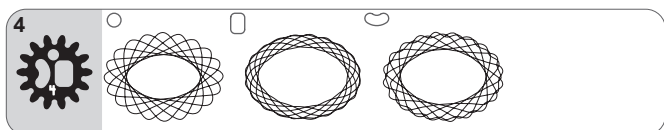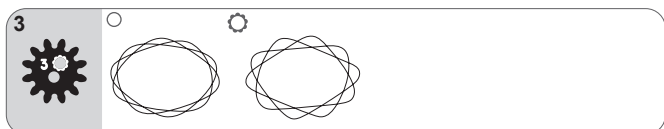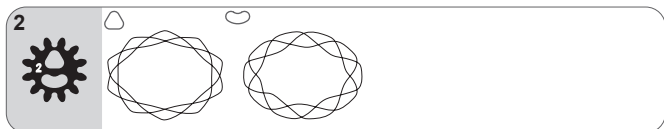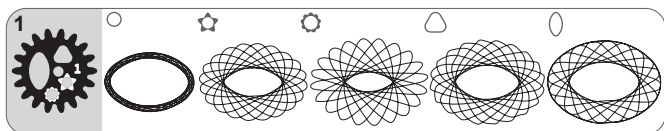
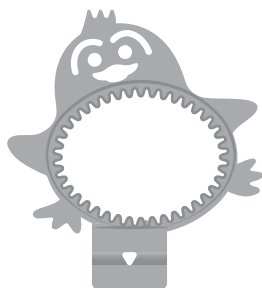


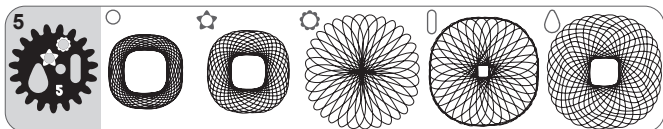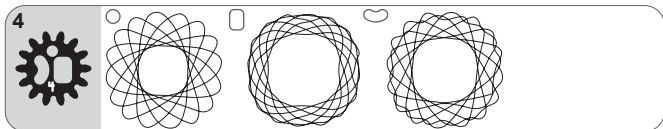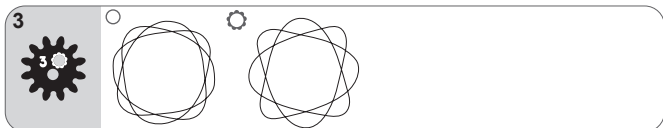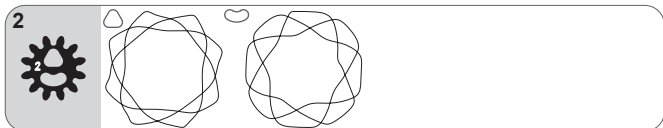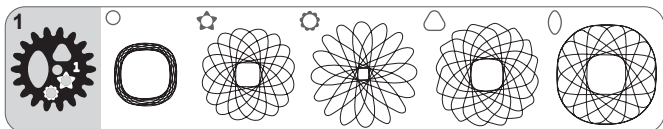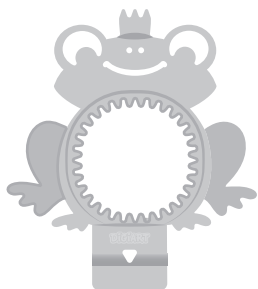

     See the below designs for more inspiration!

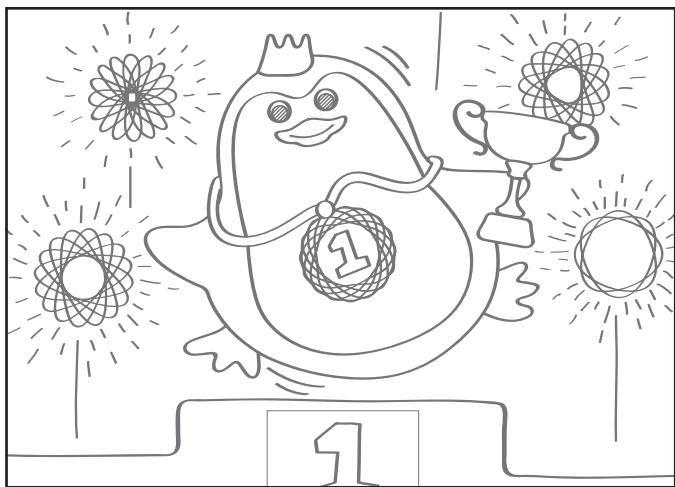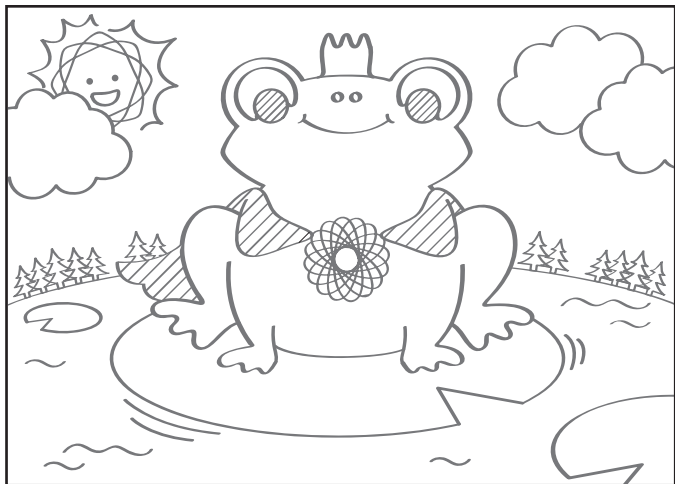

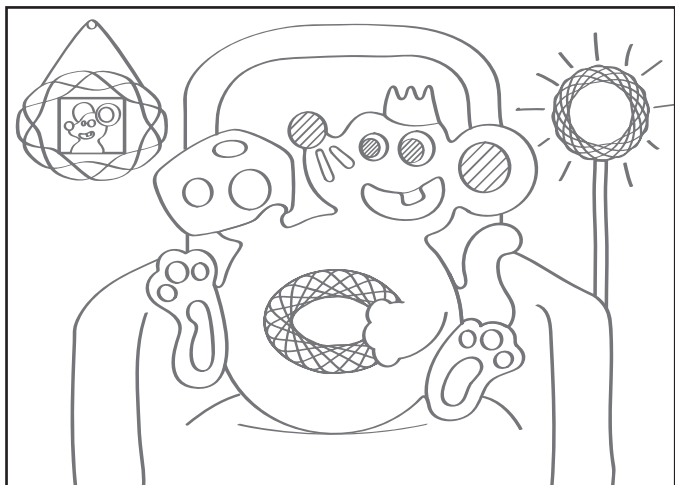

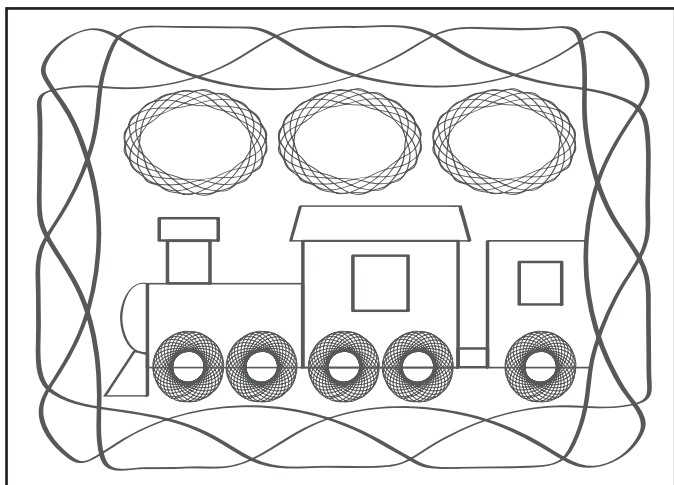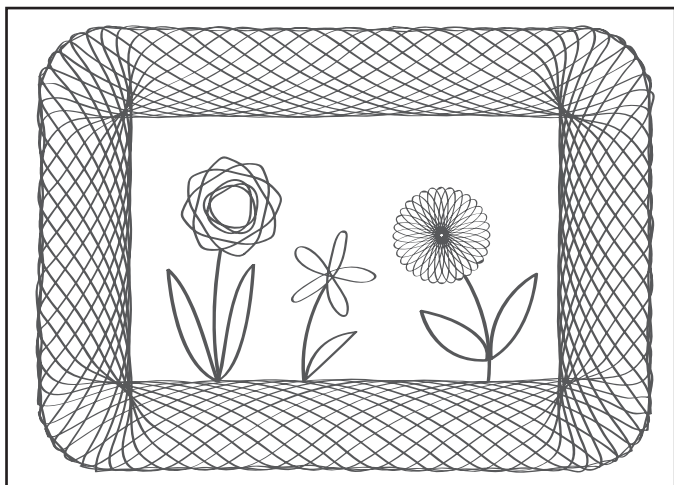

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
 2. Interrupt the power supply by removing the batteries.
 3. Let the unit stand for a few minutes, then replace the batteries.
 4. Turn the unit back **ON**. The unit will now be ready to play with again.
 5. If the unit still does not work, install a brand new set of batteries.
- If the problem persists, please call our Consumer Services Department on 0330 678 0149 (from UK) +44 330 678 0149 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this guide, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtech.co.uk

Phone: 0330 678 0149 (from UK) +44 330 678 0149 (outside UK)

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 0330 678 0149 (from UK) +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Conforms to ASTM D-4236.



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk

