

vtech®

User's Manual

Gadget™



© 2012 VTech

Printed in China

91-002766-001 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

Birth-36 months

3-6 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech's Gadget™**!

Gadget™ is the perfect learning friend for your child! With his quirky personality, rockin' dance moves and funny responses, your child will love playing and interacting with him as they learn about letters, words, counting and more! This little guy comes with 30 learning chips that trigger fun animations on his LCD screen when they are inserted in the slot above his nose. **Gadget™** also has a sound sensor. Just clap your hands and watch him do some robot dancing. With 6 modes of play, your child will have fun for hours as they hang out with their new robot pal.

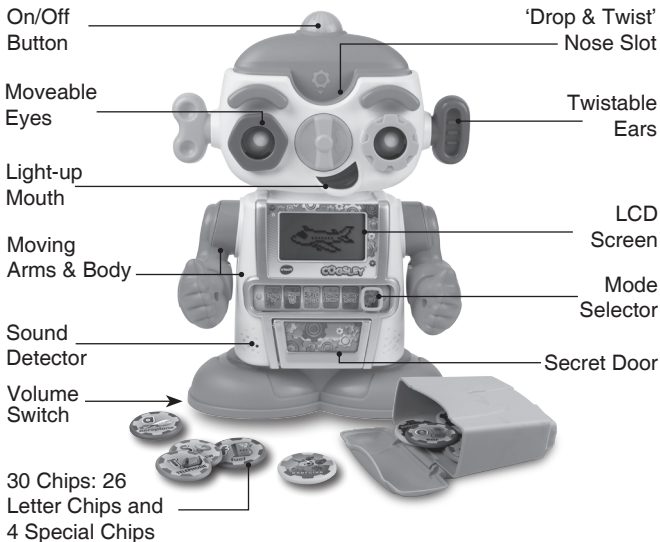

INCLUDED IN THIS PACKAGE

 
1. One VTech® Gadget™
2. One User's Manual
3. One Backpack
4. 26 Letter Chips and 4 Special Chips

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo cable from the unit to activate normal play mode.

Unlock the packaging locks:

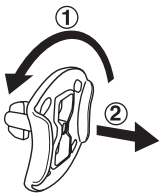


- ① Rotate the packaging locks 90 degrees anit-clockwise.
- ② Pull out the packaging locks.

NOTE: Please keep instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 4 new “AA” size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

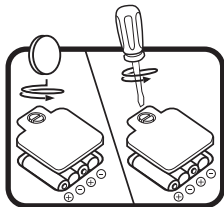

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).

- Rechargeable batteries are only to be charged under adult supervision.

DO NOT USE RECHARGEABLE BATTERIES.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **On/Off Button** to wake up **Gadget™**. Press again to put **Gadget™** to sleep.



 
2. MODE SELECTOR

Slide the **Mode Selector** to choose an activity.



3. 30 CHIPS

Insert any of the **26 Letter Chips** or **4 Special Chips** to get a response or answer a question (in related modes).

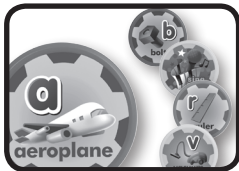


4. 'Drop & Twist' Nose Slot

- Put a chip into the **Nose Slot**.



 - b. Turn the **Nose** and then release it. The chip will fall down inside **Gadget™**.

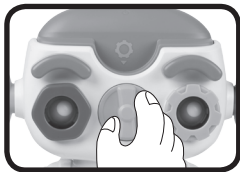


- c. **Gadget™** will analyse the chip and give a response.



5. MOVEABLE EARS & EYES

 Turn his **Ears** or **Eyes** at any time and **Gadget™** will respond with funny phrases.

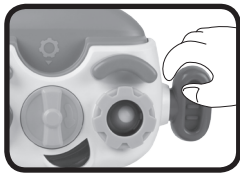

6. SOUND DETECTOR

Clap your hands and watch **Gadget™** do his robot dance moves!



7. SECRET DOOR

After 3-5 chips have been inserted into **Gadget™**, he will automatically open his secret door and release the chips.

NOTE: The door is intended as a surprise feature, and will open at random intervals during game play.



 
8. STORAGE BACKPACK

Use the **Backpack** as a storage space for the 30 chips.



9. VOLUME SWITCH

Move the **Volume Switch** to adjust the volume.

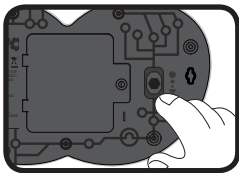

10. AUTOMATIC SHUT-OFF

To preserve battery life, **VTech's Gadget™** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **On/Off Button**.

ACTIVITIES

Explore It

Explore and learn with **Gadget™**! Put in any of the letter chips to learn about letters and words, put in any of the 4 special chips to watch **Gadget™** sing, play, exercise, or say foreign language phrases. You can also twist his ears, nose and eyes for funny responses!

Charge Me Up

Gadget™ is hungry! Listen for how many chips he would like to eat and then feed him the correct amount. He will count out the chips as you feed them to him until you have reached the correct number.

Super Speller

Gadget™ is a super speller. Feed him any of the 26 letter chips and he will say the word for you. Then twist his ear to hear **Gadget™** spell the word. Keep twisting his ear until he finishes spelling the word, and then insert another chip for a new word.

Follow Along

Follow along as fast as you can! Listen carefully as **Gadget™** gives instructions, and then turn the relevant body parts in the correct order.

Robot Rock

Gadget™ loves to dance. In this mode, listen for **Gadget™** to give instructions, then clap your hands to make him dance!

Gadget's Quiz

Listen closely. **Gadget™** will ask you a question and you need to answer it. In this mode, you can either insert the correct letter chip to answer the question, or twist his ear until the correct answer appears on his screen, and then turn his nose to choose it.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING:

If for some reason the program/activity stops working or malfunctions, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT:

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

COPYRIGHT NOTICES:

Copyright ©2011 **VTech**® Electronics Europe PLC. All Rights Reserved. **VTech**® and the **VTech**® logo are registered trademarks of **VTech**® Electronics Europe PLC. All other trademarks are property of their respective owners.





PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

Join the VTech club online at www.vtechuk.com

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

