

vtech®

User's Manual

My 1st Tablet



© 2013 VTech

Printed in China

91-xxxxxx-xxx UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® My 1st Tablet**

The **My 1st Tablet** by **VTech®** is just the right size for little hands. There are eight learning games that teach letters, words, numbers, counting, puzzles and more. The tablet also features four special interactive games, including question time. There's even a piano keyboard for playing music and a pretend camera game for endless hours of learning fun. The colour backlit screen shows fun animations.

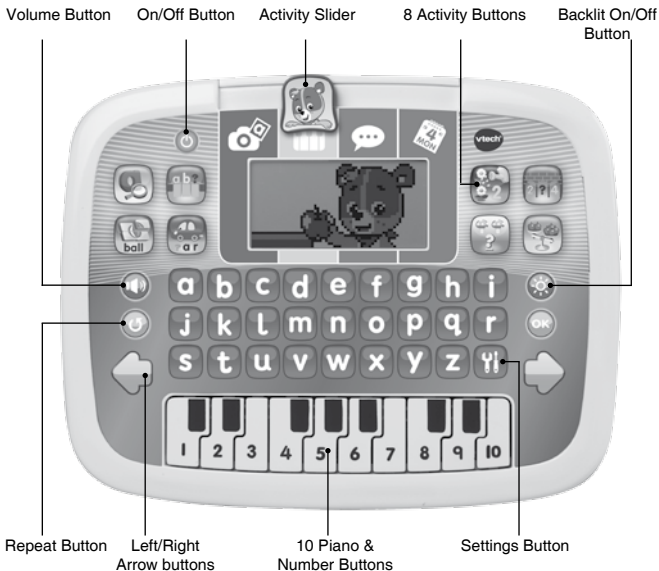


INCLUDED IN THIS PACKAGE

- One VTech® My 1st Tablet
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

Unlock the packaging locks:

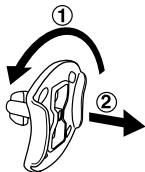

- ① Rotate the packaging locks 90 degrees anti-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Open the battery cover.
4. Install 2 new “AA” batteries into the compartment as illustrated.
(The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover.

NOTE: The clock will be reset each time the batteries are replaced.



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

The button will turn the unit ON. Pressing the power button again will turn the unit OFF.

2. Activity Slider

Move the slider to choose an activity:

Photo Fun, My Piano, Ask Me and Calendar Check.



3. 8 ACTIVITY BUTTONS

Press one of the 8 activity buttons to go to an activity.



4. VOLUME BUTTON

To adjust the volume, press the volume button and a pop-up screen will appear. Use the arrow buttons to move the cursor bar to the right to increase the volume and to the left to decrease the volume. Press the OK button to confirm the volume setting.

5. SETTINGS BUTTON

To adjust the screen contrast and background music press the Settings Button. Use the arrow buttons to move the cursor bar to the right to increase the contrast and to the left to decrease the contrast. Press OK to go to set the background music to on or off. Press the arrow buttons to select the music on or off then press the OK to finish the setting.

6. LETTER BUTTONS

You can press the letter buttons to hear letter names, sound effects and words related to that letter.



7. 10 PIANO & NUMBER BUTTONS

You can press the piano & number keys to play piano tunes in the piano activity or input numbers in the number related activities.



8. BACKLIGHT BUTTON

Press this button to turn the screen backlight on or off.

9. REPEAT BUTTON

Press this to hear a question or instruction again.

10. OK BUTTON

Press this to enter your answer.

11. ARROW BUTTONS

Press the   to select your answer.

12. AUTOMATIC POWER OFF

To save power **My 1st Tablet** will automatically shut down if it does not receive any input after 90 seconds. Press the power button to turn the unit on again. We recommend that you turn off the unit when you've finished playing. Remove the batteries if your **My 1st Tablet** will not be used for an extended period of time.

ACTIVITIES

Your **My 1st Tablet** includes a total of 12 activities.

| | Activity Name |
|----|----------------|
| 1 | Photo Fun |
| 2 | My Piano |
| 3 | Ask Me |
| 4 | Calendar Check |
| 5 | Hidden Letters |
| 6 | Letter Bridge |
| 7 | Picture Puzzle |
| 8 | Word Party |
| 9 | Planting Fun |
| 10 | Number Bridge |
| 11 | Counting Fun |
| 12 | More or Less |

1. Photo Fun



Press a letter button and it will pretend to take a picture of the word beginning with that letter and show a fun animation. Press a number button and it will display the number pressed and a fun animation.

2. My Piano



Use the Piano keys to play your favourite melodies. It can play as many as 6 piano key notes at a time. To have more fun, you can press the letter buttons to jam funny sound effects into your melodies.

3. Ask Me

Have great fun answering questions! **My 1st Tablet** will ask funny questions and you need to press the Arrow buttons to select your answer and press the OK button to confirm your choice. Then the **My 1st Tablet** replies to your choice.

4. Calendar Check

Check what has been planned for the week. Press the Arrow buttons to choose a day and then press the OK button to see what is happening on that day!

5. Hidden Letters

Can you guess what letter is hidden? Press the arrow buttons to find the clue and then press the letter buttons to give your answer.

6. Letter Bridge

The bridge is broken. Help find the missing letter that completes the letter order to build the bridge. You can press the Arrow buttons to choose a letter and then press the OK button to confirm. Or you can press the Letter buttons directly to give your answer.

7. Picture Puzzle

Can you help to solve the puzzle? Press the Arrow buttons to toggle the puzzle pieces and press the OK button to confirm the completed puzzle.

8. Word Party

Help to find the missing letter to complete the word. You can press the Arrow buttons to choose a letter and press the OK button to confirm your answer. Or you can press a letter directly to give your answer.

9. Planting Fun

Have fun planting and learning to count! Press a number and see the number of plants appear on the screen!

10. Number Bridge



The bridge is broken. Help find the missing number that completes the number order to build the bridge. You can press the Arrow buttons to choose a number and then press the OK button to confirm. Or you can press the number buttons directly to give your answer

11. Counting Fun



Can you count how many objects there are on the screen? Press the Arrow buttons to choose a number and press the OK button to confirm. Or you can press the number buttons directly to give your answer.

12. More or Less



Which side has more or less objects? Listen carefully to the question. Then press the Arrow buttons to choose and press the OK button to confirm.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.

4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at +44 1235 546810 with any problems and/or suggestions that you might have. A service representative will be happy to help you.



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

