

# **User's Manual**



# Learn to Write with CEDY & CERA THE LEARNING TABLET LINDIAB

© VTech. All rights reserved. VTech® and the VTech® logo are registered trademarks of VTech. Cody The Smart Cub® and Cora The Smart Cub® are registered trademarks of VTech Electronics Ltd. VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Boby

in different textures, sounds and colours

... responding to colours,

...understanding cause

grasp, sit-up, crawl and

...learning to touch, reach,

Birth-36months

sounds and textures

Toys that will stimulate their interest

lam...

and effect

toddle

## Pre-School

Interactive toys to develop their imagination and encourage language development

## l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops 3.69<sup>(e3t5</sup>

#### Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

# I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10years

To learn more about this and other VTech® products, visit www.vtechuk.com

#### Dear Parent,

At **VTech®**, we know how much you enjoy staying on top of the hottest trends and having the most high-tech gadgets around. We also know that your children feel the same way. With that in mind, we developed **InnoTab®**, our first multi-function tablet just for children that brings all the magic of Mum's and Dad's tablets into a fun-filled learning experience that fits their active lifestyles.

**InnoTab**<sup>®</sup> is the next generation of learning toy for children aged 3-9 that has a rich library of cartridge software with interactive animated e-books, learning games, creative activities along with a wide variety of additional apps to download. It features a 5" colour LCD touch screen, a G-sensor for game control, as well as a USB port for downloads, SD card slot for memory expansion and a headphone jack, all housed in a stylish, durable and compact design for easy portability.

When playing with **InnoTab**<sup>®</sup>, children can look, listen, touch, and tilt their way through activities to discover a world of fun whenever they want and wherever they go. Through interactive play, your child will develop skills in reading, maths, social studies, science, music, creativity, and more—which we know is important to you.

At **VTech**<sup>®</sup>, we are dedicated to helping your children uncover their talents. We thank you for your trust in our products that encourage active minds through imaginative play.

sincerely,

Your friends at VTech®

# INTRODUCTION

Cody and Cora want to play some card games, but they don't have any cards. Help them prepare cards with letters to play fun games and activities! You can also read an exciting story about Cody's and Cora's adventure with a special marker. Join them as they play card games, navigate mazes, draw pictures and even create animations!

# INCLUDED IN THIS PACKAGE

- 1 InnoTab® cartridge Learn to Write with Cody & Cora
- 1 InnoTab® cartridge user's manual
- **WARNING:** All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep the user's manual as it contains important information.

# **GETTING STARTED**

## STEP 1: Insert the InnoTab® Cartridge

Make sure the unit is turned off. Insert the **InnoTab**<sup>®</sup> cartridge firmly down into the cartridge slot located on the back of the unit and push until it clicks into place as shown in the below image.



## **STEP 2: Select the Cartridge Icon**

Touch the cartridge icon on InnoTab® desktop.

Note: Your InnoTab<sup>®</sup> desktop may look slightly different from the image on the right, depending on which version of InnoTab<sup>®</sup> you own.

## **STEP 3: Choose How You Want to Play**

There are four ways to play. Touch an icon to choose one.

Prepare & Play: Touch Prepare & Play to prepare letter cards and play games with Cody and Cora. In Free Play, games can be replayed. Note: To unlock the games in Free Play, first play them in Prepare & Play.

**E-Book:** Read the interactive e-Book. Listen to the story, touch individual words on the page to hear them read, or touch the art for fun responses.

Handwriting Practice: Practise writing uppercase and lowercase letters and numbers.

Creativity Time: There are three great activities in Creativity Time. In Photo Fun\*, take pictures and add Cody and Cora frames and graphics to them. In What Is It?, draw one half of a picture and guess what the object will be when the other half is revealed. In Animation Fun, follow step by step instructions to create your own animations.

Cartridge icon

Note: \*If your version of InnoTab<sup>®</sup> has a built-in camera, a camera activity will appear in the creativity menu. If your version of InnoTab<sup>®</sup> does not have a built-in camera, this activity will not be available.





# THE HARD KEYS



HOME

Exit the current activity and return to the **InnoTab**<sup>®</sup> desktop.



Replay instructions, or ask for a hint.



## **Music On/Off**

To turn the background music on or off, touch the Music On/Off icon on the cartridge menu.



### Levels

In Prepare & Play, choose Easy or Difficult to select a level.



# ACTIVITIES

# E-Book

#### Menu Page

The e-Book menu offers the following options:	
Read the Story:	Touch this icon to read the story.
Story Dictionary:	Learn new vocabulary in the Story Dictionary.
Settings:	Use the Settings menu to turn the background music or the vocabulary highlights on or off.

#### **Index Page**

After touching the Read the Story icon, you will see an index page. You can start the story from the beginning or choose any page to start reading. You can also touch the Whole Story icon to read the complete story from the beginning.





#### **Story Page**

In each story page, touch anywhere on the screen to stop the story narration and enter **Free Play**. When the story narration has finished, you will enter **Free Play** mode automatically. In **Free Play**, you can touch the words one by one to read the story at your own pace, touch highlighted vocabulary words to hear their definitions, or touch the screen for a while, the story narration will continue automatically to the next page.

Flick the screen left or right or press the left or right arrow to play the previous or next page.

To listen to the story narration again, touch the **Replay** icon () on the screen. To go back to the index page, touch the **Index** icon () on the screen.





#### **Story Dictionary**

Touch the Story Dictionary icon to access the dictionary index page. Then touch a word to hear its definition.

#### 

## **Prepare & Play**

Cody and Cora want to play some card games, but they don't have any cards. Help them prepare cards with letters to play fun games and activities! Look for bonus cards that unlock special games.

Tap a card to select it, or swipe the card to choose another. When the card is flipped over, follow the instructions to complete the letter and form the card.

Curriculum: Handwriting, Letters, Numbers

After completing several letter cards, a game will be activated.

#### **Game 1: Memory Challenge**

Curriculum: Memory, Letters

Memorise the arrangement of the letters, then find the ones that Cody and Cora are looking for.





#### Game 2: Number Hunt

**Curriculum:** Numbers, Number sequence Choose the number card that completes the sequence.

#### **Game 3: Matching Pairs**

Curriculum: Letter case, Memory

Find the matching pairs of cards. As the game progresses, match the uppercase letters to their lower case versions. On the Difficult level, the cards are flipped over for an additional challenge.

#### **Game 4: Which Is Different?**

**Curriculum:** Letters, Problem solving Find the card that doesn't belong in the set.

Prepare & Play also includes several bonus games. Players unlock these games when they find bonus game cards.

#### **Bonus Game 1: Uncover and Match**

Curriculum: Problem solving, Matching

Rub the paper to reveal the hidden leaf below. Then match it to the leaf on the right.









#### Bonus Game 2: Maze Craze

Curriculum: Problem solving Help Cody and Cora find their way through the maze of hedges.

# Bonus Game 3: Mirror Paths



Curriculum: Problem solving

Draw a path on the right that mirrors the one on the left. Then tilt the InnoTab<sup>®</sup> to watch the marble roll!

#### **Bonus Game 4: Twisted Trails**

Curriculum: Problem solving

The paths are twisted! Point Cody or Cora in the right direction to reach the end of the trail.

## **Creativity Time**

In Creativity Time, you'll find Photo Fun for adding Cody and Cora frames and graphics to your pictures. You can also explore two creative learning activities, What Is It? and Animation Creation.

#### **Creativity Game 1: Photo Fun**

Take pictures with the InnoTab® and add Cody and Cora frames to get creative!

Note: If your version of InnoTab® has a built-in camera, a camera activity will appear in the creativity menu. If your version of InnoTab® does not have a built-in camera, this activity will not be available.









#### Creativity Game 2: What Is It?

Curriculum: Creativity, Counting

Connect the dots to draw half of the object. Press the mirror button to mirror what you drew on the other half of the page.

#### **Creativity Game 3: Animation Creation**

#### Curriculum: Creativity

Follow the instructions to draw simple pictures that work together to create an animation. When you're done, watch your creation move! You can even make up your own animations.

# SD CARD

Some early versions of the InnoTab® firmware require an SD card in order to save creations in What Is It? and Animation Creation. In this case, you will need to insert an SD card into the InnoTab® SD card slot. See your InnoTab® console manual for more details on using an SD card. If your InnoTab® includes a builtin camera, this does not apply.

# **Handwriting Practice**

In Handwriting Practice, review and practise writing uppercase and lowercase letters and numbers. Each letter and number includes a simple demonstration to help you write it.





# ONLINE FEATURE

Register online to keep track of your child's learning journey with personalised recommendations. You can also connect to our **Learning Lodge™** to download great apps, games, e-Books and more! If you have not already installed the **InnoTab®** version of the **Learning Lodge™** software on your computer, go to www.vtechuk.com/download to download and install it.

# CARE & MAINTENANCE

- 1. Keep InnoTab® cartridge clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
- 2. Keep it out of direct sunlight and away from direct sources of heat.
- 3. Avoid dropping it. NEVER try to dismantle it.
- 4. Always keep InnoTab® cartridge away from water.

#### WARNING

A very small percentage of the public, due to an existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colours or patterns. While InnoTab® The Learning App Tablet does not contribute to any additional risks, we do recommend that parents supervise their children while they play video games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor. Please note that focusing on an LCD screen at close range and handling touch screen or g-sensor controls for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

# TROUBLESHOOTING

Please note that if you try to insert or remove an **InnoTab**<sup>®</sup> cartridge without first turning the unit **OFF**, you may experience a malfunction. If this happens, and the unit does not respond to pressing the **ON/OFF** button, disconnect the AC adaptor from the main unit or remove the batteries. Then, reconnect the adaptor, or reinstall the batteries.



# **TECHNICAL SUPPORT**

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- · The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

# COPYRIGHT NOTICES

© VTech. All Rights Reserved. VTech<sup>®</sup>, the VTech<sup>®</sup> logo and InnoTab<sup>®</sup> are registered trademarks of VTech. Learning Lodge<sup>™</sup> is a trademark of VTech.

Cody The Smart Cub® and Cora The Smart Cub® are registered trademarks of VTech Electronics Ltd.

## **IMPORTANT NOTE:**

Creating and developing **InnoTab®** The Learning App Tablet products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 01235 546810 (from UK), or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

# OTHER INFO

## **DISCLAIMER AND LIMITATION OF LIABILITY**

VTech® Electronics Europe PLC. and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. VTech® Electronics Europe PLC. and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this software. VTech® Electronics Europe PLC, and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of important data on other media to protect against data loss.

COMPANY : VTech® Electronics Europe PLC.

ADDRESS : Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT.

TEL NO.: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

# vtech PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).

Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

© 2014 VTech Printed in China (UK) 91-002838-126