

vtech[®]
Baby

User's Manual

Bounce & Discover Frog



© 2013 VTech
Printed in China
91-002854-001 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years




To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Bounce & Discover Frog** learning toy!

Get baby hop into learning with the **Bounce & Discover Frog** by **VTech®**! This cute frog-themed bouncer lets your little one leap into learning. Introduces colours, insects, music and more. The **Bounce & Discover Frog** rewards your child's movements with lots of engaging songs and sounds while enhancing their coordination, motor and balancing skills. Get ready for some amphibious fun ... it's time to bounce!

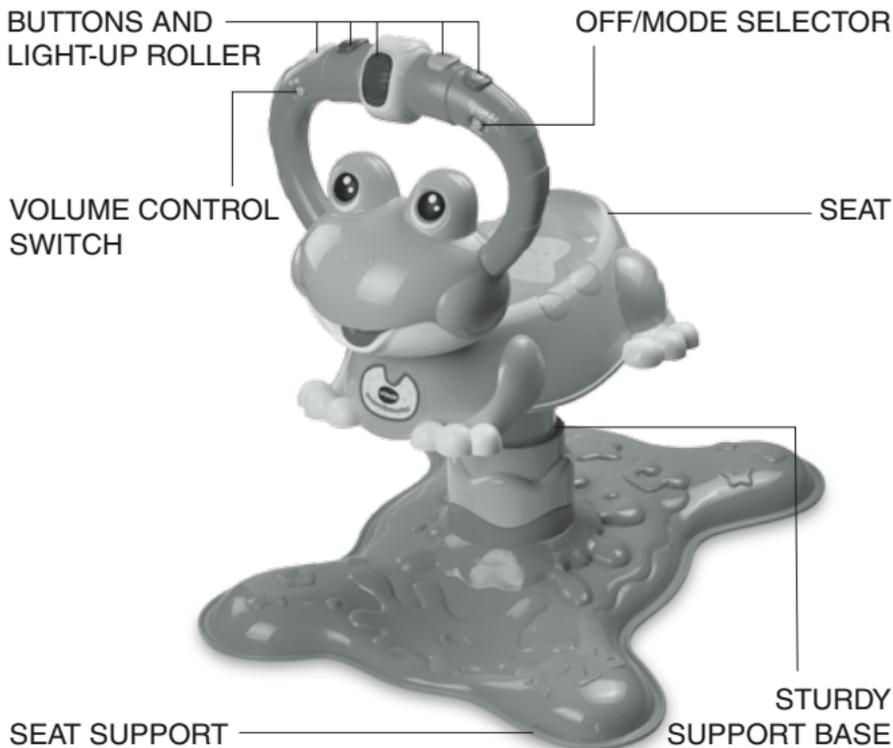


INCLUDED IN THIS PACKAGE

- One VTech® Bounce & Discover Frog

- One electronic frog head



- One frog seat

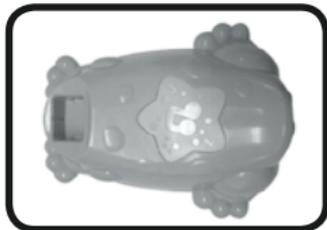

- One sturdy support base



- One seat support



- One instruction manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this instruction manual as it contains important information.

INSTRUCTIONS

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the frog's head. Use a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:


www.recycle-more.co.uk

www.recyclenow.com


PRODUCT ASSEMBLY

With the VTech® **Bounce & Discover Frog**, safety comes first. To ensure your child's safety, adult assembly is required. Only to be used under the direct supervision of an adult.


1. Insert the seat support into the bottom of the seat. You will hear a loud 'click' sound, which indicates that the seat support is securely fixed into the seat.

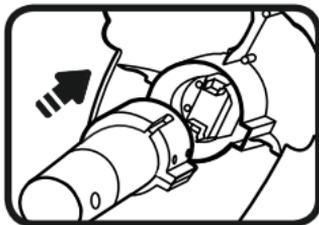

2. Insert the other side of the seat support into the recessed slot of the support base. Again, once the seat support is securely in place, you should hear a loud 'click.'

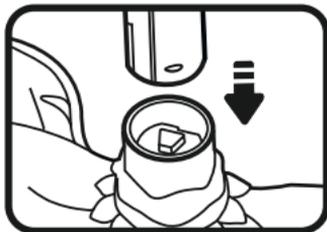

3. Insert the electronic frog head into the corresponding slot on the seat. Once the electronic head is securely in place, you should hear a loud 'click.'

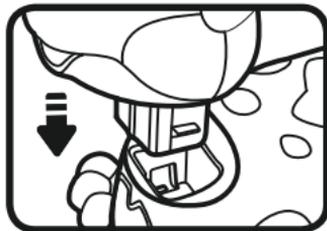

WARNING:

Not to be used by children over 36 months. Insufficient strength. Regularly check for signs of wear and tear on the snap-in or locking devices. If damaged do not use until repaired or replaced.

PRODUCT FEATURES


1. OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** () or **MUSIC MODE** () position. To turn the unit **OFF**, slide the **OFF/MODE SELECTOR SWITCH** to the **OFF** (**Off**) position.



2. LIGHT-UP ROLLER

Spin the roller to hear fun phrases, sounds, sing-along songs and short tunes.

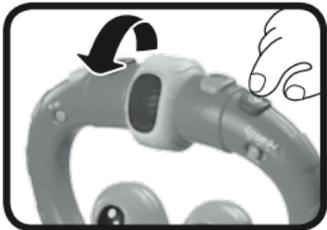

3. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Bounce & Discover Frog** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by any input.

ACTIVITIES

1. Slide the **OFF/ MODE SELECTOR SWITCH** to turn the unit ON. You will hear fun sounds, a sing-along song, a phrase and a sound effect. The light will flash with the sound.




2. Press the **4 INSECT BUTTONS** to hear fun sounds, melodies, and phrases. In Learning Mode, pressing the buttons will teach colours and insects. In Music Mode, pressing the buttons will play sing-along songs and fun sounds.

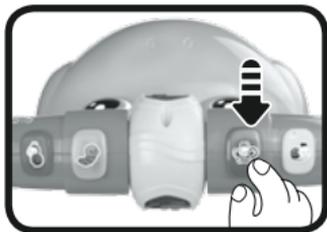

3. Spin the **LIGHT-UP ROLLER** to hear fun sounds, melodies, and phrases. When melodies are playing, pressing buttons will interrupt melodies. The light will flash with the sounds.



4. Bounce on the **SEAT** to activate phrases and music. The light will flash with the sounds.

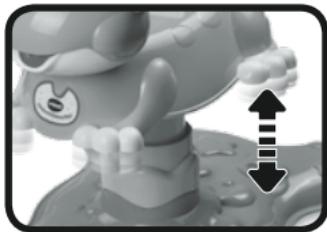

5. If there is no input after approximately 6 seconds, you will hear a fun sound and phrases. If there continues to be no input after another 6 seconds, you will hear a sing-along song and a fun sound. If there continues to be no input after another 6 seconds, you will hear a closing short tune and the unit will automatically power down. The unit can be re-activated by pressing any button or spinning the roller.

MELODY LIST

1. Pease Porridge Hot
2. Skip to My Lou
3. The Glow Worm
4. London Bridge
5. Hot Cross Buns
6. Polly Wolly Doodle
7. Shoo, Fly
8. Little Miss Muffet
9. Three Blind Mice
10. Bingo
11. Three Little Kittens
12. Teddy Bears Picnic
13. Mary Had a Little Lamb
14. Humpty Dumpty

SING-ALONG SONG LYRICS

SING-ALONG SONG 1

It's time to learn and bounce and play!
Let's get started, hip, hip, hooray

SING-ALONG SONG 2

Fly, purple butterfly, flying in the air.
Can you see her, flying there?

SING-ALONG SONG 3

See the yellow snail, slowly moving by.
When he takes a break, stop and say, "Hi."

SING-ALONG SONG 4

Bounce, bounce, up and down.
Let's sing and bounce, all around!

SING-ALONG SONG 5

The red ladybird is ready to fly.
Up, up she goes - she's flying high!

SING-ALONG SONG 6

The green worm wriggles back and forth,
to and fro.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

