

User's Manual

Nursery Rhymes Book[™]



© 2010 VTech
Printed in China
91-002113-003-000 (#)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Selicol

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of

...National Curriculum based content to support what I'm learning at school

learning

l want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

Lam...

vtech Bally

Tovs that will

...responding to colours, sounds and textures

stimulate their interest

in different textures. sounds and colours

- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36*months






INTRODUCTION

Thank you for purchasing the VTech® Baby Nursery Rhymes Book™.

The **Nursery Rhymes Book**™ is an interactive book that brings nursery rhymes to life! It features 6 classic nursery rhymes each with its own delightful picture, sound effects, sing-along song and melody. With flashing, interactive arrow lights, little ones will learn cause and effect relationships and develop an early love of reading and music. Nursery rhyme time has never been so much fun!

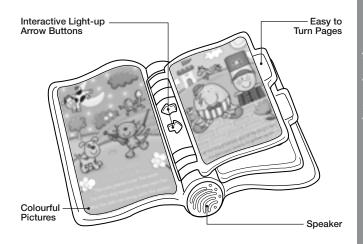

INCLUDED IN THIS PACKAGE

- One VTech® Baby Nursery Rhymes Book™
- One user's manual

WARNING:

 
All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

 
NOTE: Please keep user's manual as it contains important information.

 
GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the top of the spine of the book. Use a screwdriver to loosen the screw.
- Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
- Replace the battery cover and tighten the screw to secure.







BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

NOTE:

 
Help the environment by disposing of your product responsibly. The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

More information can be found on: http://www.recycle-more.co.uk; www.recyclenow.com



ACTIVITIES

1. Open the book to turn the unit ON.



2. As you turn each page, you will hear a fun sound effect, sung nursery rhyme and melody related to one of the pages shown. The light-up arrow buttons will flash to show the page that corresponds with the response. The first two lines of every nursery rhyme are sung, sing-along to the second two lines with your child to encourage learning and interaction.



 Press the Interactive Light-up Arrow Buttons to hear the fun sound effect, sung nursery rhyme and melody for the page that the arrow is pointing at.



4. Close the book to turn the unit OFF.



AUTOMATIC SHUT-OFF

To preserve battery life, the VTech® Baby Nursery Rhymes Book™ will automatically power-down after several seconds without input. The unit can be turned on again by turning the pages or pressing the arrow buttons.

MELODY LIST

- 1. Hey Diddle Diddle
- 2. Humpty Dumpty
- 3. London Bridge
- 4. Ring-a-Ring o' Roses
- 5. Twinkle, Twinkle Little Star
- 6. The Wheels on the Bus

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Remove the batteries when the unit is not in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
 - 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).

Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, Please contact your local distributor or place of purchase.

