



User's Manual

Peek-A-Boo Book™




© 2008 VTech

Printed in China

91-001589-019-000 (英)

Dear Parent,

We at *VTech* understand that a child's needs and abilities change as they grow and with that in mind we can develop our toys to teach and entertain at just the right level. Babies need toys that will stimulate their interest in different textures, sounds and colours, while on-the-go toddlers and pre-schoolers want more interactive toys to develop their imaginations and encourage their language development. As they progress to more challenging curriculum at school, *VTech* keeps pace with a wide variety of cool, aspirational and interesting computers for learning. Every toy is unique and helps your child develop in different ways for the best all-around learning.



vtech®
Much more than meets the eye...

5-10 years

Electronic Learning Computers I need...

- ...challenging activities that can keep pace with my growing mind
- ...cool stuff to keep me entertained, busy and up-to-date
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum-based content to support school teaching
- ...space to be flexible and creative and to find my own style

3-6 years

Pre-School I want...

- ...toys that let me pretend to be a grown-up so I can learn how the world works
- ...to get ready for school by starting on the alphabet and counting
- ...great games that keep me interested and make me laugh
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

0-36 months

vtech Baby I am...

 
- ...exploring, learning and understanding the world around me
- ...experiencing and responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to move, touch, reach, grasp, hold, wiggle, sit up and crawl
- ...understanding what people say and beginning to respond
- ...interacting with toys and developing my own imagination

 
To learn more about *VTech* toys, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Peek-A-Boo Book™**!

The **VTech® Peek-A-Boo Book™** is an interactive storybook for toddlers aged 3 months and up. This book will come to life with lights, sounds and music as well as a variety of buttons to push and slide. Baby can choose from six nursery rhymes. Each nursery rhyme is accompanied by a melody and sound effect relating to the nursery rhyme.

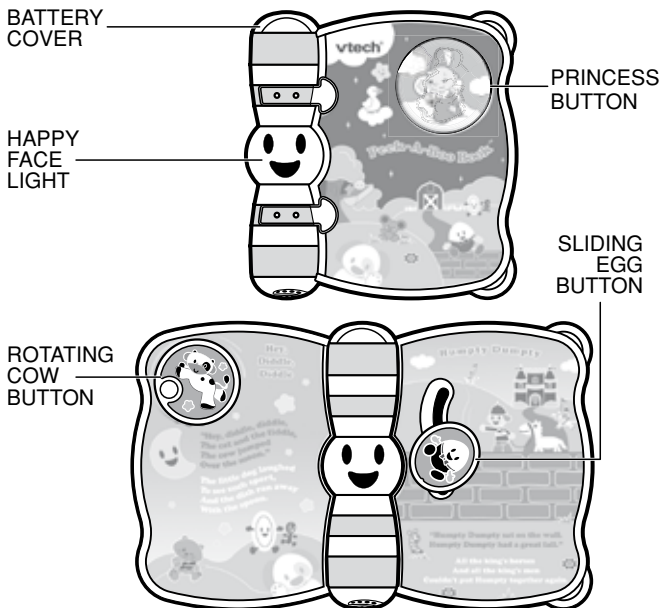

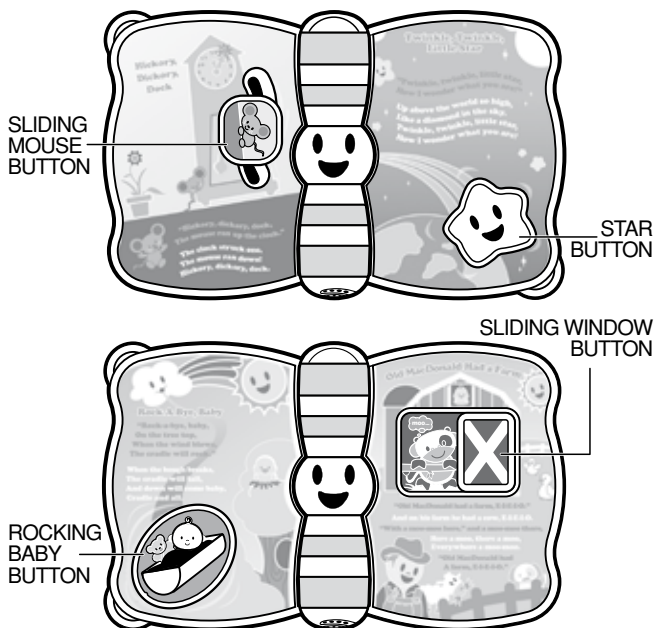

INCLUDED IN THIS PACKAGE

 
- One VTech® Peek-A-Boo Book™.
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the spine of the book. Use a screwdriver to loosen the screw.
3. Install 2 new “AAA” (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

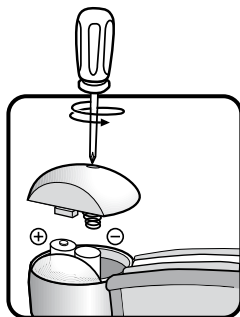

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance;
- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the toy before being charged (if removable);
- Rechargeable batteries are only to be charged under adult supervision (if removable);
- Different types of batteries or new and used batteries are not to be mixed;
- Only batteries of the same or equivalent type as recommended are to be used;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the toy;
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than recommended number of power supplies.

 
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES


1. ON/OFF

To turn the unit **ON**, press the **PRINCESS BUTTON** on the front cover or open the book to any page. To turn the unit **OFF**, simply close the book.

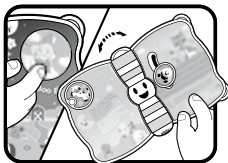


2. VOLUME CONTROL SWITCH

 To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** ((C▶)) or the **HIGH VOLUME** (▶)) position.

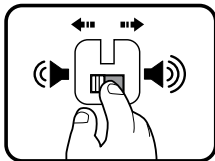

3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **Peek-A-Boo Book™** will automatically power-down after several minutes without input. The book can be turned on again by turning the pages, or pressing any button.

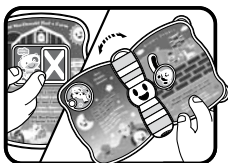

4. SIX NURSERY RHYMES

The six nursery rhymes include

 - Hey, Diddle, Diddle
- Humpty Dumpty
- Hickory, Dickory, Dock
- Twinkle, Twinkle, Little Star



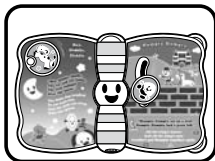


- Rock-A-Bye Baby
- Old MacDonald Had a Farm

Turn the pages or press or move the buttons to hear the nursery rhymes.

ACTIVITIES

   1. When the book is closed, press the **PRINCESS BUTTON** to hear a random story and melody. Press the button again while the story is playing to hear a sound effect play over the story. The happy face light will flash along with the music.
2. When the book is open, turn the pages or slide or move the buttons to hear the story and melody relating to the two pages facing you. Slide or move the button again while the story is playing to hear a sound effect play over the story. The happy face will flash with the music.
3. Slide or move the button again after the story has been told, and you will hear the melody of that nursery rhyme. Slide or move the button while the melody is playing, and the sound effect will play along with the melody.
4. If there is no input to the book after approximately 8 seconds, you will hear a phrase or sound effect encouraging you to continue playing with the book.

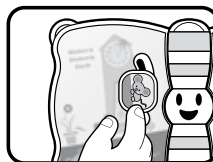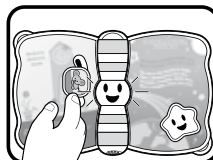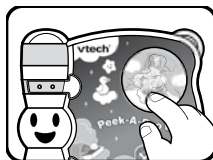



MELODY LIST

1. Hey, Diddle, Diddle
2. Humpty Dumpty
3. Hickory, Dickory, Dock
4. Twinkle, Twinkle, Little Star
5. Rock-A-Bye, Baby
6. Old MacDonald Had a Farm

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.

If the problem persists, please call our Consumer Services Department on (01235) 546810 and a service representative will be happy to help you.



IMPORTANT NOTE

Creating and developing infant/toddler products is accompanied by a responsibility that we at **VTECH®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on (01235) 546810.



Other Info





vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK only. For products purchased outside the UK, please contact your local distributor or place of purchase.

To win a fantastic prize, join the VTech club online at www.vtechuk.com

