

**vtech**<sup>®</sup>  
Baby

User's Manual

## Sing and Splash Fish



© 2010 VTech

Printed in China

91-002438-006-000 (英)

Dear Parent,

We at **VTech**<sup>®</sup> understand that a child's needs and abilities change as they grow and with that in mind we can develop our toys to teach and entertain at just the right level. Babies need toys that will stimulate their interest in different textures, sounds and colours, while on-the-go toddlers and pre-schoolers want more interactive toys to develop their imaginations and encourage their language development. As they progress to more challenging curriculum at school, **VTech**<sup>®</sup> keeps pace with a wide variety of cool, aspirational and interesting computers for learning. Every toy is unique and helps your child develop in different ways for the best all-around learning.

**vtech**<sup>®</sup>

Much more than meets the eye...

4-10 years

## Electronic Learning Computers I need...

- ...challenging activities that can keep pace with my growing mind
- ...cool stuff to keep me entertained, busy and up-to-date
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum-based content to support school teaching
- ...space to be flexible and creative and to find my own style

3-6 years

 
## Pre-School I want...

- ...toys that let me pretend to be a grown-up so I can learn how the world works
- ...to get ready for school by starting on the alphabet and counting
- ...great games that keep me interested and make me laugh
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

0-36 months

## vtech Baby I am...

- ...exploring, learning and understanding the world around me
- ...experiencing and responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to move, touch, reach, grasp, hold, wiggle, sit up and crawl
- ...understanding what people say and beginning to respond
- ...interacting with toys and developing my own imagination

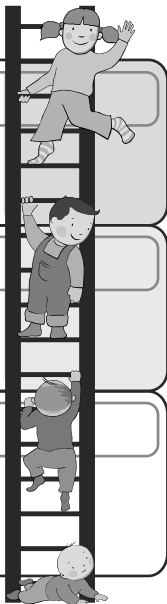

To learn more about **VTech**<sup>®</sup> toys, visit [www.vtechuk.com](http://www.vtechuk.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Sing and Splash Fish!**

 
The **VTech® Sing and Splash Fish** is a fun bath toy with interactive features for water-play fun! Introducing first numbers through funny sing-along songs. Baby will hear happy tunes when the water pours out from the fish's mouth. Having a Bath has never been so much fun!

ON/OFF  
BUTTON

LIGHT-UP FIN

1 2 3 BUTTON

WATER  
SENSOR

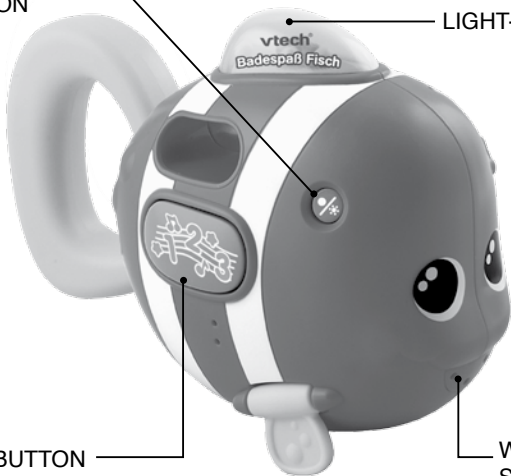

# INCLUDED IN THIS PACKAGE

- One VTech® Sing and Splash Fish
- One user's manual

 
 
**WARNING:** All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep instruction manual as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF** and the battery cover, battery box and unit are all dry.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure and lock the fastener. (Make sure the compartment lid is fixed correctly so that the child can't open it and so that the product is waterproof.)
5. When closing the battery cover ensure that the screw is securely tightened. This will avoid any water leakage.

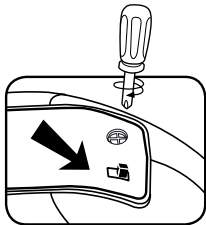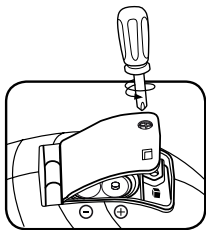

## BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

### **WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.**

Help the environment by disposing of your product responsibly. The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

More information can be found on:

 
<http://www.recycle-more.co.uk>;

[www.recyclenow.com](http://www.recyclenow.com)



# PRODUCT FEATURES

## 1. ON/OFF BUTTON

To turn the unit **ON** or **OFF**, press the **ON/OFF** button (  ).




## 2. AUTOMATIC SHUT-OFF

 To preserve battery life, the **VTech® Sing and Splash Fish** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.



## WARNING:

- **The batteries must be changed by an adult.**
- **This toy cannot be used in salt water.**
- **After using this toy, do not leave it in the water for a long time.**
- **Make sure to empty the water out of all elements of the toy and to rinse them out before drying.**
- **This toy can be operated in water only when fully assembled in accordance with the instructions.**
- **This is not a lifesaving device. Do not leave child unattended while the VTech® Sing and Splash Fish is in use.**
- **Never leave a child unattended or with an older child in the bathroom or in the bath, not even for one minute.**
- **Always check with a thermometer the temperature of the water coming from the tap before sitting the child in the bath. Toddlers have very sensitive skin and can easily get burned if the water is too hot.**
- **When finishing play, remove the fish from the water and pour any remaining water out through the mouth. Rinse the unit in clean water and wipe with a dry cloth. Suspend the unit upright to dry out.**

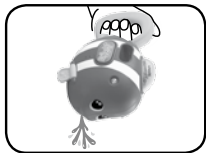

# ACTIVITIES

  1. Press the **ON/OFF** button. You will hear a fun sing-along song. The light will flash with the sounds.
2. Press the **123** button to hear fun phrases and music. The light will flash with the sounds.
3. Take the fish out of the water, then shake the fish to hear cheerful melodies. When the melody is playing, shake the fish continuously to hear bubble sounds jammed into the melody. The light will flash with the sounds.
4. Put the fish in the water to hear fun bubble and giggle sounds. The light will flash with the sounds.
5. Take the fish out of the water, then pour the water through the mouth to hear bubble sounds, giggling and fun short tunes. The light will flash with the sounds.

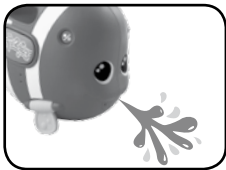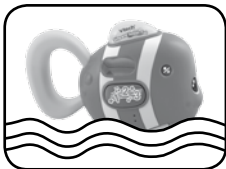

## MELODY LIST

1. Row, Row, Row Your Boat
2. Sailing, Sailing
3. My Bonnie Lies Over the Ocean
4. Fur Elise
5. Air on a G String

## SING-ALONG SONG 01 LYRICS

To the tune of “hickory dickory dock”

Come and have fun in the sea.

Can you swim all around like me?

Let’s splash around, swim up and down

Come and have fun in the sea.

## SING-ALONG SONG 02 LYRICS

1 little, 2 little, 3 little fishes

4 little, 5 little, 6 little fishes,

7 little, 8 little, 9 little fishes,

10 little fishes at sea!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Make sure to empty the water out of all the elements of the toy and to rinse them out correctly before drying them so that no layer of sediment or of cleaning products is left on the product.
4. Make sure you dry all the toy elements thoroughly before tidying them away in order to avoid mould.
5. Remove the batteries when the unit is not in use for an extended period of time.
6. Do not drop the unit on hard surfaces.



# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

## **IMPORTANT NOTE:**

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1  
LED PRODUCT**



Join the VTech club online at [www.vtechuk.com](http://www.vtechuk.com)

# vtech®

## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

**This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.**