

vtech[®]
Baby

User's Manual

Splash & Sing Bath Book



© 2013 VTech
Printed in China
91-002828-001 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Splash & Sing Bath Book** learning toy!

Bath time can now also be reading time! This interactive and fully waterproof floating bath book features 3 soft, pliable and interactive pages that are easy to clean. Within each page are buttons that trigger great sing-along songs and sounds that help teach bathing concepts and numbers. There is also a light-up music button that plays songs and melodies sung by the monkey or the duck.



INCLUDED IN THIS PACKAGE

- One brush



- One bath book



- One instruction manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

 
NOTE:

Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF** and the battery cover, battery box and unit are all dry.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the two screws.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)

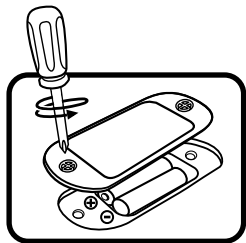

- When closing the battery cover ensure that the two screws are tightened securely. This will avoid any water leakage.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. To turn the unit **OFF**, press the **ON/OFF BUTTON** a second time.



 
2. VOLUME BUTTON

When the unit is first turned on the volume is set to the high volume position. To adjust the volume, press the **VOLUME BUTTON** once to decrease the volume. Press the **VOLUME BUTTON** as second time to increase the volume.



3. DETACHABLE BRUSH

Snap the **DETACHABLE BRUSH** on to the ring on the spine of the book. For your child's safety, adult assembly is recommended.

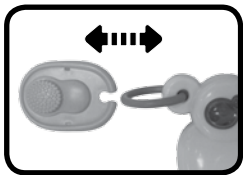

4. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Splash & Sing Bath Book** will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button. Pressing the **volume button** will not turn the unit back on.

WARNING:

 
- **Batteries must be changed by an adult.**
- **Only use this product in water between 10 and 45 degrees celsius (between 50 and 104 degrees Fahrenheit).**
- **This product cannot be used in salt water.**
- **Do not leave this product submerged in water for a long period of time.**
- **This product should only be operated in water when fully assembled in accordance with the instructions.**
- **To prevent drowning, never leave a child unattended in the bath.**
- **Use a thermometer to check the temperature of the water before sitting a child in the bath. Toddlers have very sensitive skin and can burn easily if the water is too hot.**
- **When finished playing, remove the unit from the water and pour out any remaining water. Rinse the unit with clean water and wipe with a dry cloth. Suspend the unit in an upright position to dry.**

ACTIVITIES


1. Press the **on/off button** to turn the unit on. You will hear a playful sing-along song, fun sounds and a phrase. The light will flash with the sound.





2. Press the **bubble button** to hear a playful sing-along song, fun sounds and a phrase. The light will flash with the sound.

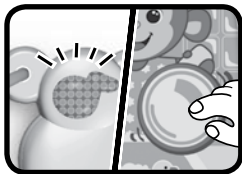

 3. Press the **duck button** to hear a playful sing-along song about body parts, fun sounds and a phrase. The light will flash with the sound.

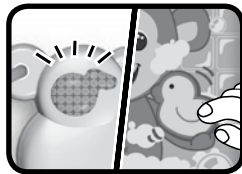

  4. Press the **music button** to hear ten different melodies. When a melody is playing, press the bubble or duck button to hear that animal sing along with the melody. The light will flash with the sound.

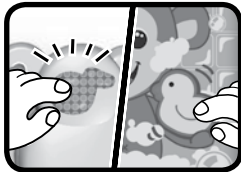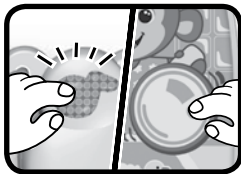

MELODY LIST

1. Row, Row, Row Your Boat
2. Animal Fair
3. Rub-a-dub-dub
4. My Bonnie
5. London Bridge
6. Sailing, Sailing
7. Sailor's Hornpipe
8. Au Claire de la Lune
9. One, Two, Buckle My Shoe
10. Pop! Goes the Weasel

SING-ALONG SONG LYRICS

SING-ALONG SONG 1

Bath time, bath time,
I need to get in the tub.
I can scrub and I can play.
Rubber ducky's waiting for me, hooray!

SING-ALONG SONG 2

Bubbles, bubbles, everywhere!
Lots of bubbles fill the air.
One, two, three, four, five,
Bubbles floating in the sky!

SING-ALONG SONG 3

Splish, splash, I love the bath!
I wash my face and I clean my tummy.
I splash with my hands and play with ducky.
Bath time is lots of fun!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Make sure to empty the water out of all the elements of the unit and rinse thoroughly before drying so no sediment or cleaning products are left on the unit.
4. Make sure to dry all the elements of the unit before storing.
5. Remove the batteries when the unit is not in use for an extended period of time.
6. Do not drop the unit on hard surfaces.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

