 


INTRODUCTION

Thank you for purchasing the **VTech® Tiny Touch Phone™**!

The **VTech® Tiny Touch Phone™** is an interactive phone that's full of role-play fun! The 3 modes of play and ten bright, light-up buttons encourage little ones to explore and discover as they learn numbers, shapes and colours. With friendly phrases, fun sound effects and a cute sung song, learning has never been so exciting!

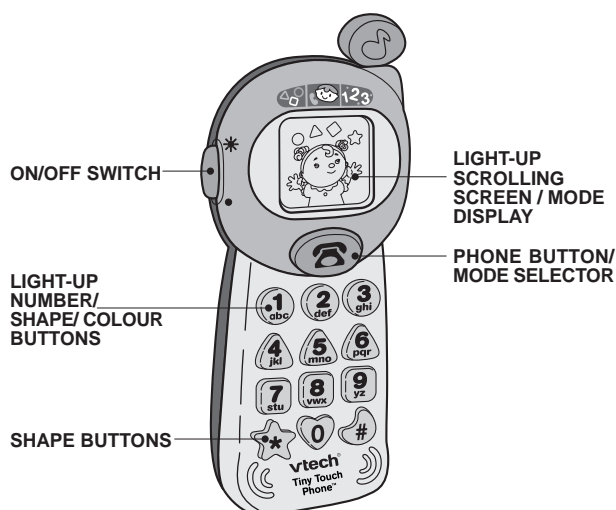

INCLUDED IN THIS PACKAGE

 
- One VTech® Tiny Touch Phone™
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver or coin to loosen the screw.
3. Install 2 new "AA" size (UM3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

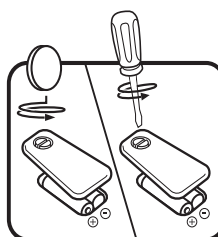

BATTERY NOTICE

 
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (☀) position. To turn the unit off, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

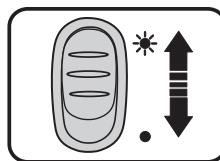


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Tiny Touch Phone™** will automatically power-down after approximately 20 seconds without input. The unit can be turned on again by pressing any button.

3. MODES OF PLAY

 There are three modes of play - numbers, colour and shape, and role-play. Select a mode by pressing the **PHONE BUTTON** until the screen displays the mode you would like to play. You will hear a fun phrase related to the mode.

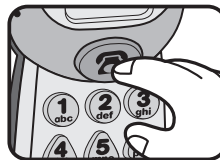

The lights will flash with the sounds.

If the **LIGHT-UP SCROLLING SCREEN** gets stuck between two modes, the buttons will give random responses only. To revert to normal play, press the **PHONE BUTTON** until a mode is selected.



Number Mode



Colour & Shape Mode



Role-Play Mode

ACTIVITIES

 
1. Press the **PHONE BUTTON** to scroll through the three screens to select a mode of play. You will hear a fun phrase related to the selected mode. The lights will flash with the sound.



2. Press the **NUMBER BUTTONS** to hear the numbers one to nine identified in number mode, colours and shapes in the colour and shape mode and a variety of phrases and music in the role-play mode. The lights will flash with the sound.



3. Press the **HEART BUTTON** to call the operator when in the number or role-play mode. In the colour and shape mode, you will hear the colour and shape of the button identified. The lights will flash with the sound.

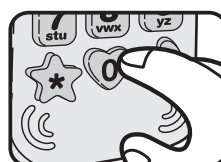

4. Press the **STAR BUTTON** to hear random phone sounds or the colour and shape identified, depending on the selected mode. The lights will flash with the sound.



5. Press the **MOON BUTTON** to hear a song, a variety of melodies or the colour and shape identified, depending on the selected mode. The lights will flash with the sound.



MELODY LIST

1. Ring-a-ring-o' roses
2. Jack and Jill
3. Lavender's Blue
4. Pop! Goes the Weasel
5. Row Row Row Your Boat

SUNG SONG LYRICS

Call your friends, mummy too,
You can ask, "How do you do?"
With a ring-ring-ring-a-ding,
Say hello today,
Ask your friends to come and play.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

NOTE: When this product is removed from the packaging the volume will reduce to a level that complies with safety regulations for 'close-to-the-ear' toys for children under 12 Months. The volume level is set higher when in packaging to allow the product to be tried and heard over the in-store noise level.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **Smart Start**® products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on (01235) 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

To win a fantastic prize, join the VTech club online at www.vtechuk.com



vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Didcot, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

© 2005 VTech
Printed in China

