

**vtech®**

**User's Manual**

# **Safari Sounds Piano**



© 2016 VTech  
Printed in China  
91-003188-001 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
**4-10 years**



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Safari Sounds Piano!**  
Play and learn with the **Safari Sounds Piano** by **VTech®**! Join the animal band and play music with the zebra, sing along and create your own songs!

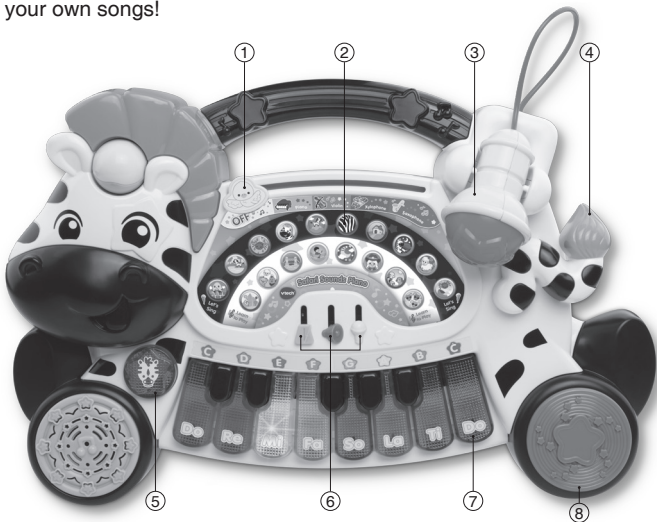

- ① OFF/PIANO/VIOLIN/XYLOPHONE/SAXOPHONE SWITCH
- ② 10 LET'S SING & 8 LEARN TO PLAY BUTTONS
- ③ MICROPHONE
- ④ TAIL SWITCH
- ⑤ ANIMAL BAND BUTTON
- ⑥ 3 SLIDE SWITCHES
- ⑦ 8 LIGHT-UP PIANO BUTTONS
- ⑧ SCRATCH DISC

# INCLUDED IN THIS PACKAGE

- One VTech® Safari Sounds Piano
- User's Manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

## NOTE:

Please keep user's manual as it contains important information.

 
## DEMO STRIP REMOVAL:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

## WARNING:

The tape and demo tag are packaging materials, and should be discarded for your child's safety.

## Unlock the packaging locks:

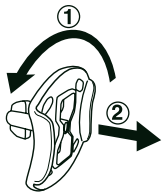


- ① Rotate the packaging lock counter-clockwise for 90 degrees.
- ② Pull out the packaging locks.

# GETTING STARTED
 
## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to open the cover.
4. Install 2 new AA size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten to secure.

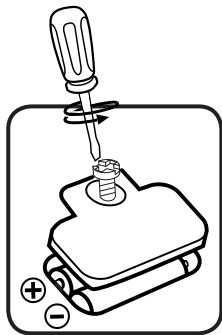

**Note: If there is no response when the unit is switched on, please insert new batteries and try switching it on again.**

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES

## 1. OFF/PIANO/VIOLIN/XYLOPHONE/SAXOPHONE SWITCH

Slide the switch to select an instrument to play. Slide the switch to **OFF** to turn the unit off.

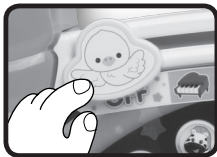

## 2. LET'S SING & LEARN TO PLAY BUTTONS

Press one of the **LET'S SING BUTTONS** to play a sing-along song or one of the **LEARN TO PLAY BUTTONS** to play a melody.



## 3. MICROPHONE

Turn the **MICROPHONE** on by sliding the microphone switch. Sing into the **MICROPHONE** to amplify your voice.



## 4. TAIL SWITCH

Move the **TAIL SWITCH** to hear cool distortion guitar sounds.



 
## 5. SCRATCH DISC

Spin the **SCRATCH DISC** to add fun sound effects over the melody.



## 6. 8 LIGHT-UP PIANO BUTTONS

Press any of the **LIGHT-UP PIANO BUTTONS** to play along!

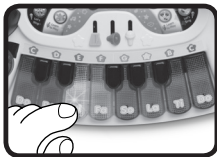

## 7. ANIMAL BAND BUTTON

Press the **ANIMAL BAND BUTTON** to hear the zebra sing with the lion from **Safari Sounds Microphone** and the giraffe from **Safari Sounds Guitar** (each sold separately).



## 8. 3 SLIDE SWITCHES

- 1) **TEMPO**: Control the tempo, up=fast, down=slow, middle=normal.
- 2) **VOLUME**: Control the volume, up=high, down=low, middle=normal.
- 3) **MICROPHONE**: Turn the microphone on/off.





# ACTIVITIES

## Activity 1: LET'S SING

Press one of the **LET'S SING BUTTONS** to hear a song. The first time the song plays, the zebra sings the song. Then, the song plays again so you can sing the song solo.



 
## Activity 2: LEARN TO PLAY

Press one of the **LEARN TO PLAY BUTTONS** to hear a song. After the song plays once, follow along with the **LIGHT-UP PIANO BUTTONS** to play the song on your own!



## Activity 3: COMPOSE YOUR OWN SONG

Press the **LIGHT-UP PIANO BUTTONS** to compose your own music. Add in fun sound effects by turning the **SCRATCH DISC**.

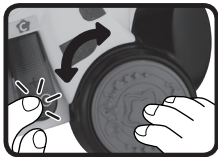

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

### IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1  
LED PRODUCT

The Vtech logo consists of the word "vtech" in a lowercase, sans-serif font, with a registered trademark symbol (®) to its upper right. The logo is contained within a dark, horizontally-oriented oval shape.

## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

**This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.**

