 


vtech[®]

Instruction Manual

SWITCH&GO[®]
DiNOS 

RESCUE RAIDERS 3-IN-1

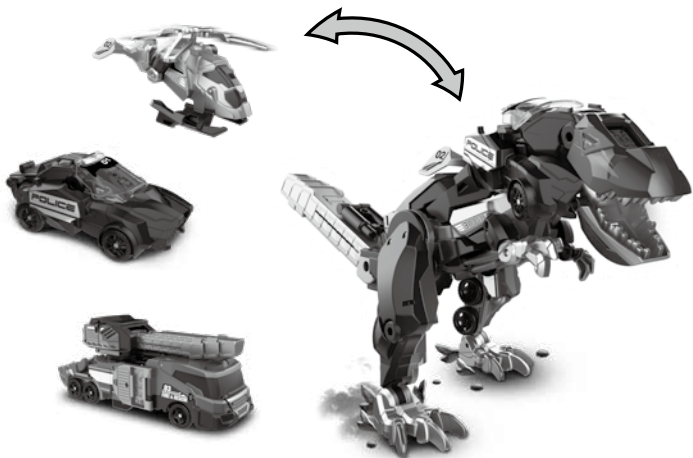

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Switch into fun with the **Switch & Go Dinos® Rescue Raiders 3-In-1!** Combine these 3 rescue vehicles into a mega rescue T-Rex. Split the T-Rex apart and send each vehicle on separate rescue missions. Let's go!

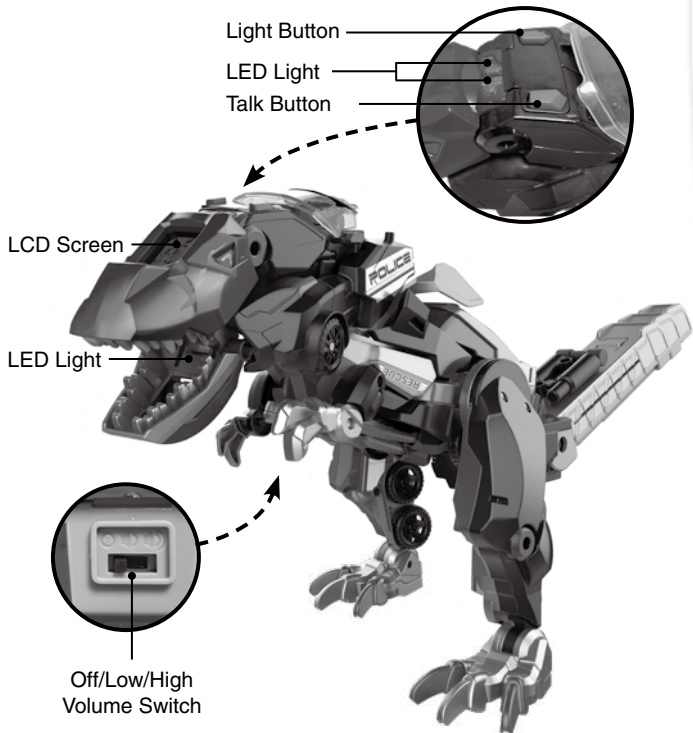

INCLUDED IN THE PACKAGE

- **Switch & Go Dinos® Rescue Raiders 3-In-1**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this manual as it contains important information.

GETTING STARTED

 
The **Rescue Raiders 3-In-1** is in try-me mode in the packaging. To exit try-me mode, switch from “Dino Head Mode” to “Vehicle Mode” or connect the Dino Head to the Dino Body (Rescue Helicopter).

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

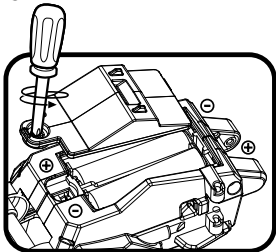

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:




www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On** or adjust the volume, slide the switch to the Low  or High  volume position. To turn the unit **Off**, slide the switch to the **Off**  position.

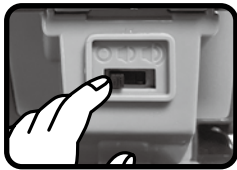

2. Talk Button

Press the **Talk Button** to hear fun phrases and cool dino sounds with light effects in T-Rex mode, or to hear fun phrases and police car sounds in Vehicle mode.



3. Light Button

Press the **Light Button** to trigger cool light effects with sound effects.



4. LCD Screen

The **LCD Screen** shows dino eye animations in Dino mode and shows driver animations in Vehicle mode.



5. Automatic Shut-Off

To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be turned on again by pressing the **Game Button**, **Light Button**, or by switching between Dino Head mode and Vehicle mode, or by attaching the dino head to the dino body. The unit will also automatically turn off when battery power is very low.

 
NOTE

If the unit powers down, or if the light fades out during play, please install a new set of batteries.


HOW TO SWITCH

Switching from Dino Head Mode to Police Car Mode


1. Begin in Dino Head Mode.

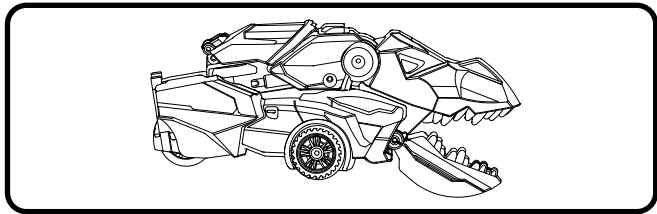

 
2. Flip the windscreen back and flip up the Dino's mouth.

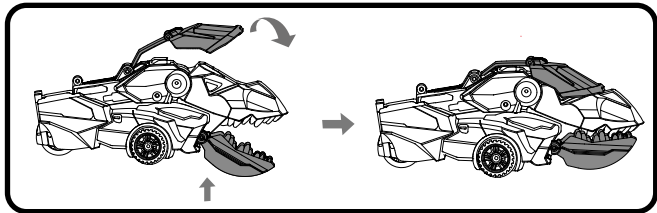

 
3. Flip the jaw cover backward.

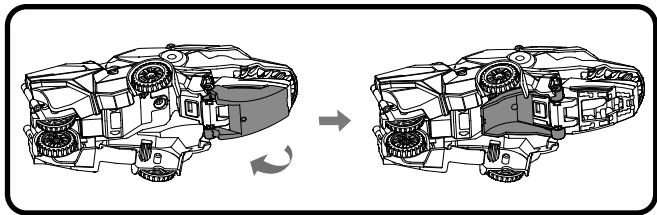

 4. Swing the side panels out and fold them forward.

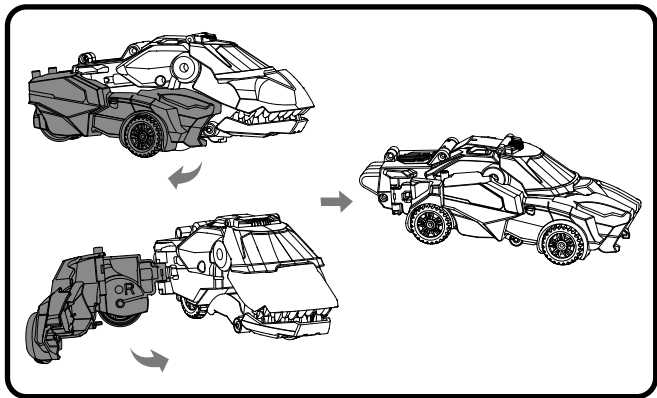


 5. The Dino Head is now in Police Car Mode.

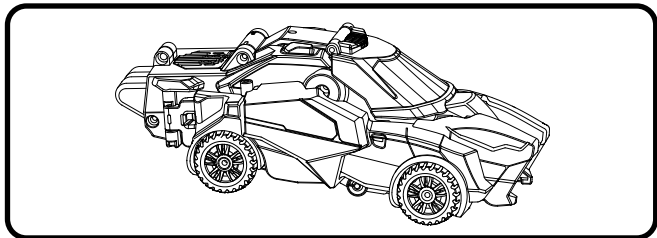


Switching from Helicopter Mode to Dino Body Mode

 
1. Begin in Helicopter Mode.

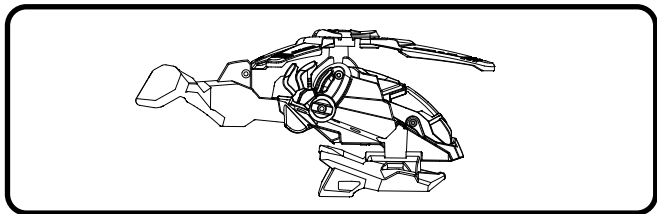

 
2. Flip both landing skids out.

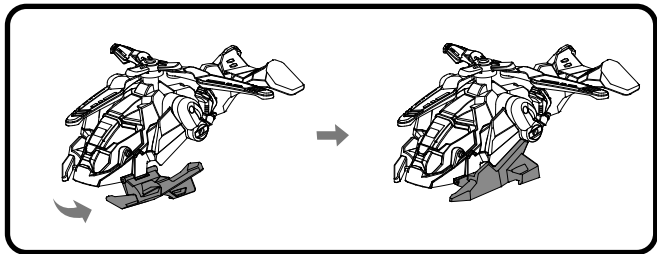

 
3. Rotate 2 of the rotor blades towards the centre.

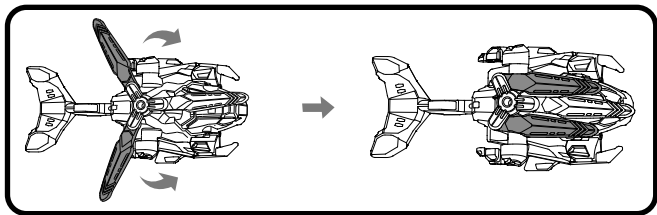

 
4. Rotate both arms up and then flip the claws out.

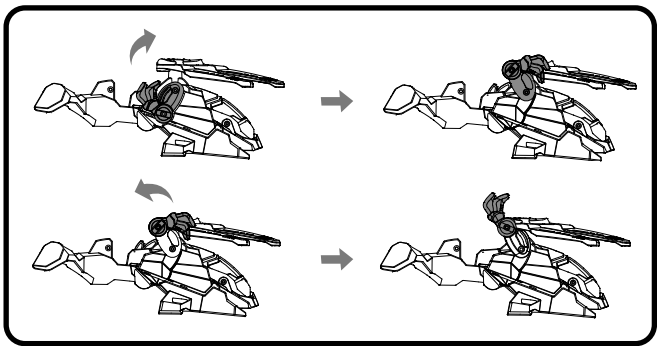

 5. Flip the helicopter tail under the body of the helicopter.

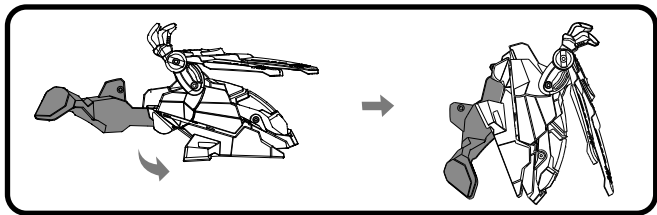


 6. The Helicopter is now in Dino Body Mode.

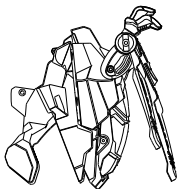


Switching from Fire Engine Mode to Dino Legs Mode

 
1. Begin in Fire Engine Mode.

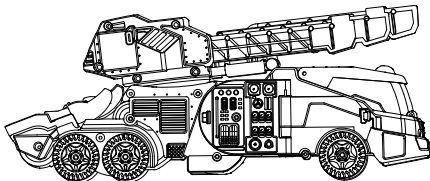

 
2. Flip the base cover to the front.



 
3. Swing both legs forward.

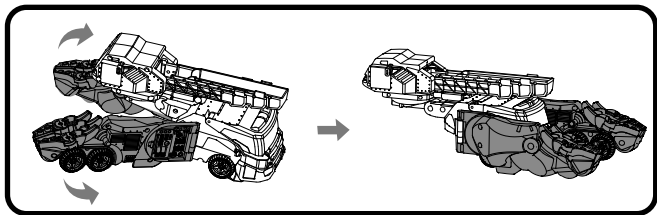

 
4. Flip the ladder back.

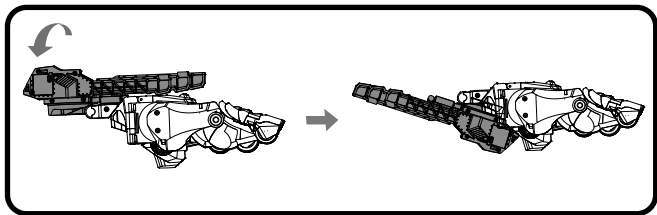

 
5. Swing the feet out.

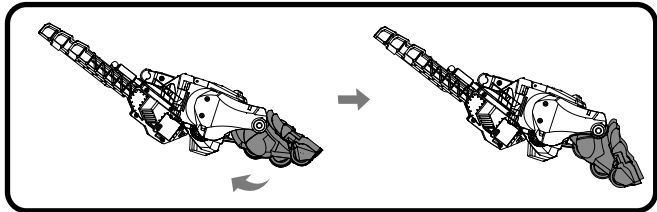

 
6. Flip the toes forward.

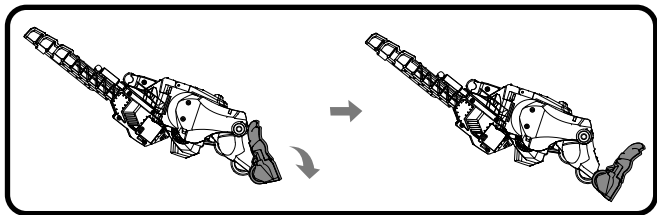

 
7. Flip the legs down.

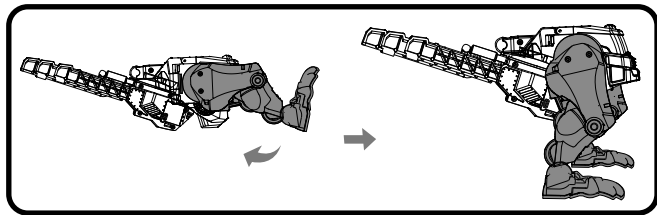

 
8. Spread the toes for additional stability.

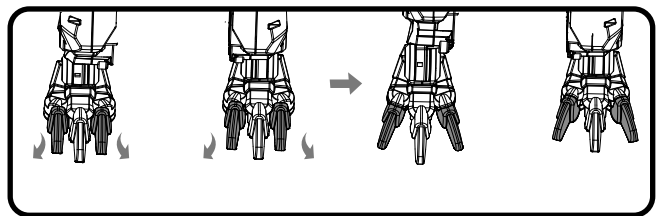

 9. Flip the cab of the fire engine up.

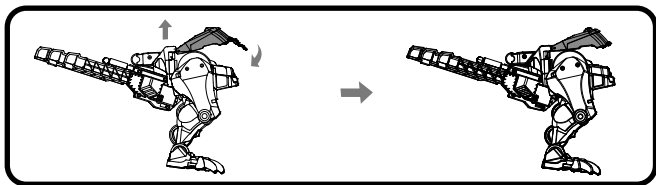

 10. The Fire Engine is now in Dino Legs Mode.

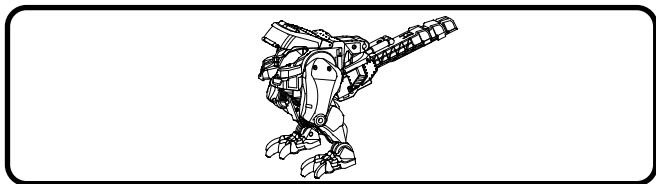


NOTE


To switch the Dino Head, Dino Body and Dino Legs back into the Police Car, Helicopter and Fire Engine, follow the above steps in reverse order.

COMBINATION

 
1. Combine the Dino Body with the Dino Legs.

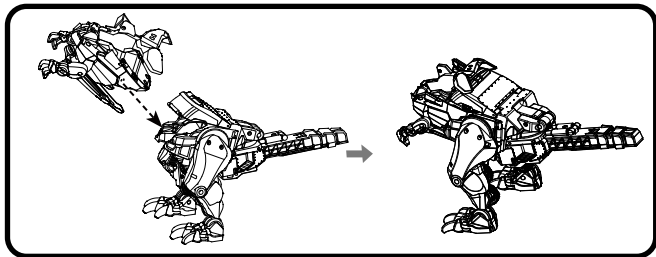

 2. Snap the Dino Head to the Dino Body.

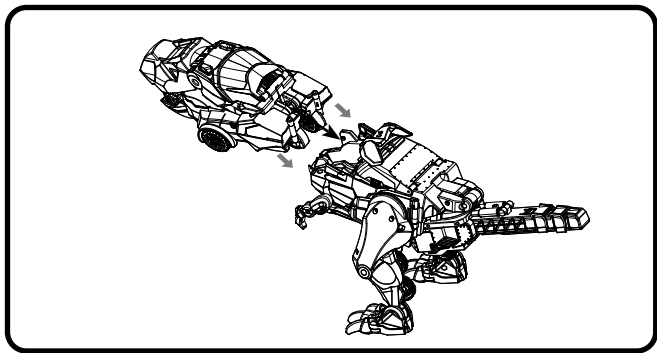

 3. The combined Rescue Raiders are now in Rescue Rex Mode.

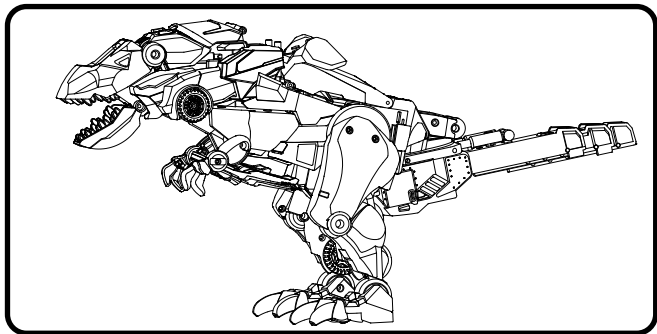

NOTE

To separate the T-Rex into the Dino Head, Dino Body and Dino Legs, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

