


Little Friendlies Shake & Roll Busy Ball



© 2017 VTech All rights reserved Printed in China 91-003326-001 (8)

۲

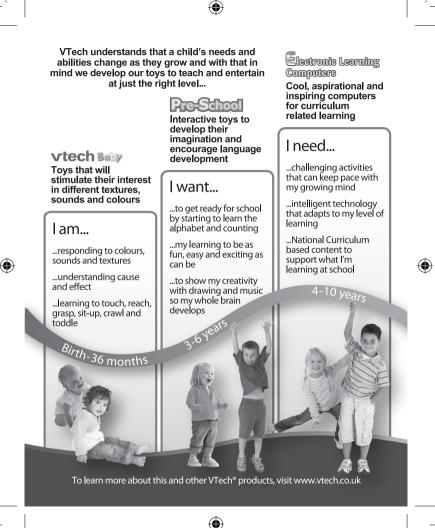


502903 IM.indd 2

INTRODUCTION

Thank you for purchasing the VTech® Little Friendlies Shake & Roll Busy Ball!

•

Get ready to twist, slide and learn with the Little Friendlies Shake & Roll Busy Ball. Six bead tracks with colourful beads and a friendly cow encourage little ones to develop hand/eye coordination and fine motor skills. The 3 chunky press buttons introduce a variety of age appropriate vocabulary, playful songs, silly sounds and music.

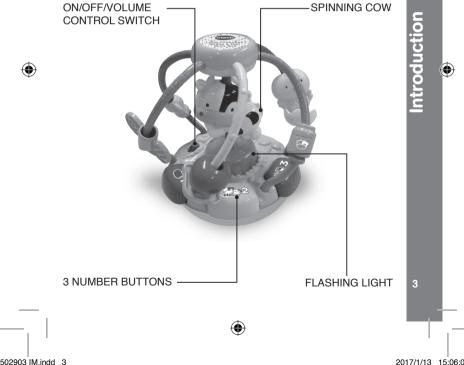

INCLUDED IN THIS PACKAGE

- One VTech® Little Friendlies Shake & Roll Busy Ball
- One User's Manual

WARNING:

NOTE:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety. Please keep user's manual as it contains important information.

Unlock the packaging locks:



 Rotate the packaging locks 90 degrees anticlockwise.

 
2 Pull out the packaging locks.

•

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the ball. Use a screwdriver to loosen the screw.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).



4. Replace the battery cover and tighten the screw to secure.



 (\blacklozenge)

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- · Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or



on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

 $(\mathbf{\Phi})$

 \bigcirc

For more information, please visit: www.recycle-more.co.uk www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit ON, slide the ON/OFF/ VOLUME CONTROL SWITCH to the LOW VOLUME (())) or the HIGH VOLUME (())) position. To turn the unit OFF, slide the ON/OFF/VOLUME CONTROL SWITCH to the OFF (\bullet) position.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Little Friendlies Shake & Roll Busy Ball** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

()

ACTIVITIES

 Slide the ON/OFF/VOLUME CONTROL SWITCH to turn the unit on. You will hear a song, a phrase and a fun sound.The light will flash along with the sounds.



Product Features/Activities



()

- 2. Press the **number buttons** to learn numbers, colours and phrases and hear playful music and songs. The light will flash along with the sounds.
- Shake the ball to hear fun sounds and short tunes. The light will flash along with the sounds.





4. If there is no input after a certain sound of time, you will hear a phrase to encourage you to keep ssing the buttons. Or hear a short tune before the unit automatically powers down.

Note: Please keep your child's feet away from the gaps in this toy. Adult supervision is recommended.

MELODY LIST:

- 1. Farmer in the Dell
- 2. Hey Diddle Diddle
- 3. Animal Fair
- 4. Teddy Bears' Picnic
- 5. Yankee Doodle
- 6. Camptown Races
- 7. Incy Wincy Spider
- 8. Old MacDonald Had a Farm
- 9. Turkey in the Straw
- 10. Three Blind Mice

Activities/Melody List

502903 IM.indd 7

 $(\blacklozenge$

- 11. Three Little Kittens
- 12. Oh, Where Has My Little Dog Gone
- 13. Froggy Went a Courting
- 14. BINGO
- 15. Humpty Dumpty

SING-ALONG SONG LYRICS

SONG 1

I'm a cow, small and cute. My friends like spinning and sliding all around me.

SONG 2

Apples, apples, crunchy and sweet, Are a healthy snack for me to eat.

SONG 3

•

Milk is good for my bones, It's good for my teeth.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.

•

- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

•

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

 
٠

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



 $(\mathbf{\Phi})$

Froubleshooting

 \bigcirc



()



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
 Please include details of the fault together with your name and address.
- 9. To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



 (\mathbf{b})