

Disney

# User's Manual



## DISCOVER & LEARN BIG BOOK OF BOO-BOOS



**2-5  
Years**

**vtech®**

© Disney  
Visit [DisneyJunior.com](http://DisneyJunior.com)

© 2014 VTech  
**Printed in China**  
91-002930-001 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


**4-10 years**



To learn more about this and other VTech® products, visit [www.vtechuk.com](http://www.vtechuk.com)

# INTRODUCTION

Thank you for purchasing the **VTech® Discover & Learn Big Book of Boo-Boos**. The Doc is in, so let's get learning! Touch the interactive pages to learn words, beginning letters, health tips and to enjoy music and sounds with Doc and her friends. With four fun modes of play and ten colourful pages to explore.

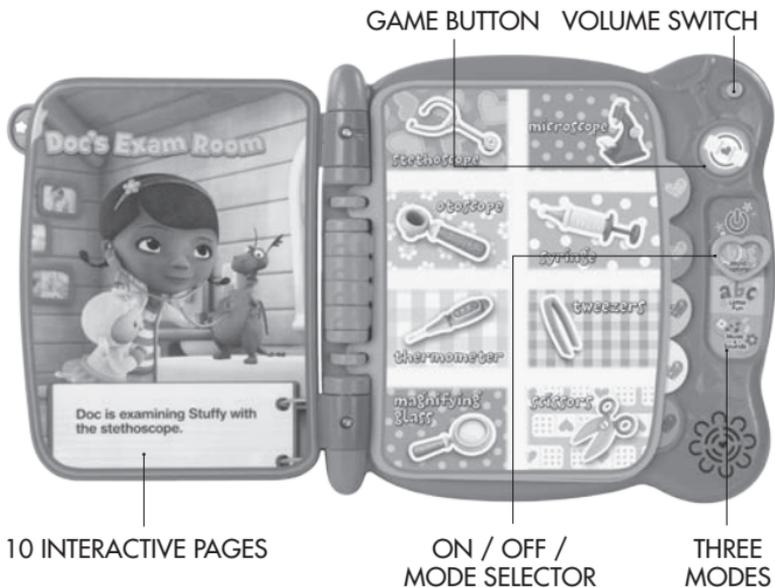

# INCLUDED IN THIS PACKAGE


- One VTech® Discover & Learn Big Book of Boo-Boos
- One User's Manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep instruction manual as it contains important information.

Unlock the packaging locks:

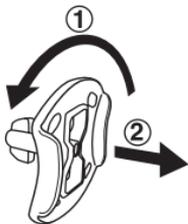


- ① Rotate the packaging lock 90 degrees anti-clockwise.
- ② Pull out the packaging lock.

# GETTING STARTED

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver or coin to loosen the screw.
3. Install 2 new AA size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

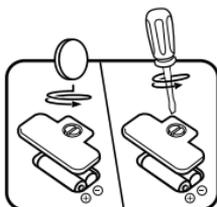

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product

### Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

## PRODUCT FEATURES

### 1. ON / OFF / MODE SELECTOR

Slide the **MODE SELECTOR** to one of the activity icons to turn the unit **ON**. Slide the **MODE SELECTOR** to the top of the mode selector panel to turn the unit **OFF**.



## 2. THREE MODES

Slide the **MODE SELECTOR** to choose one of the **THREE MODES**. Your child can explore words, letters and music!




## 3. 10 INTERACTIVE PAGES

Turn to any of the **10 INTERACTIVE PAGES** and touch the surface to explore and learn.




## 4. CHECK-UP GAME BUTTON

Press the **CHECK-UP GAME BUTTON** to play a finding game. The light flashes when a question is given or when the player gives a correct answer.

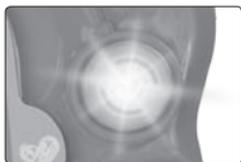

## 5. VOLUME SWITCH

Slide the **VOLUME SWITCH** to select a high or low volume setting.

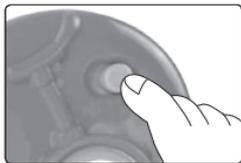

## 6. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Discover & Learn Big Book of Boo-Boos** will automatically turn off after a few minutes without input. The unit can be turned on again by sliding the **MODE SELECTOR** or pressing the **CHECK-UP GAME BUTTON**.

# HOW TO PLAY

To get the most from your **Discover & Learn Big Book of Boo-Boos**, follow these simple instructions:

1. When playing, make sure the book is fully open. The pages should lay flat against the front and back panels of the book.
2. For optimal performance, use one finger when touching the pages.
3. For optimal performance, use one finger to touch the centre of the text or picture.

# INCORRECT OPERATION

To ensure proper touch responses, avoid the following actions when playing with your **Discover & Learn Big Book of Boo-Boos**.

1. Do not touch a picture if the pages are not laying down flat.
2. Do not touch more than one picture at a time.
3. Do not use more than one finger to touch a picture on the page. Avoid resting your hand on the page.




# ACTIVITIES

## 1. Word Explorer

Touch the pictures to learn about words and objects related to Doc's exam room, Doc's waiting room, Doc's bedroom, Doc's house and Doc's backyard.

Touch the story sensors on the left page to hear fun responses and health tips.

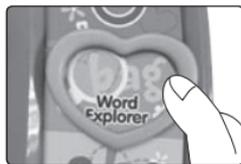

## 2. Letter Fun

Touch the pictures to learn beginning letters.

Touch the story sensors on the left page to hear fun responses and health tips.




## 3. Music & Sounds

Touch the story sensors on the left page to choose a melody. Touch the words to add some fun sounds while the melody is playing.



## 4. Check-up

Press the stethoscope button to play a finding game. Listen to the questions and touch the pictures to answer.

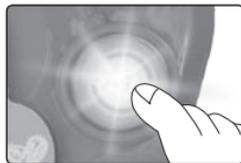

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Make sure the book pages are kept dry and flat.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.

- The actions you took right before the problem started.

**Internet:** [www.vtechuk.com](http://www.vtechuk.com)

**Phone:** 01235 546810 (from UK), or +44 1235 546810 (outside UK)

## COPYRIGHT NOTICES:

Copyright ©2014 **VTech**<sup>®</sup> Electronics Europe PLC. All Rights Reserved. **VTech**<sup>®</sup> and the **VTech**<sup>®</sup> logo are registered trademarks of **VTech**<sup>®</sup> Electronics Europe PLC. All other trademarks are property of their respective owners.

### **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

The Vtech logo consists of the word "vtech" in a lowercase, sans-serif font, enclosed within a dark, rounded rectangular shape that has a slight gradient and a shadow effect.

## PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).  
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

**THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.**

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at [www.vtechuk.com](http://www.vtechuk.com)

