BLUEY

vtech®

Instruction Manual

BLUEY'S BOOK OF GAMES

LUDO

BBC STUDIOS

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Pre-School

Interactive toys to develop their imagination and encourage language development

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

4-10 years

3-6 years

Birth-36 months

INTRODUCTION

Thank you for purchasing **Bluey's Book of Games**! Turn the pages and play with Bluey and Bingo for real life! Discover the games Bluey has imagined and find items around your house to play along.

① Light-Up Buttons	⑦	Play Together Mode Button
② Bluey Button	⑧	Chilli Button
③ Story Mode Button	⑨	Music Mode Button
④ On/Off Button	⑩	Bingo Button
⑤ Volume Button	⑪	Follow Me Mode Button
⑥ Bandit Button	⑫	Book Pages

INCLUDED IN THE PACKAGE
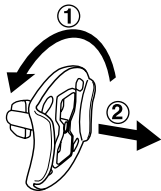
- Bluey's Book of Games
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.
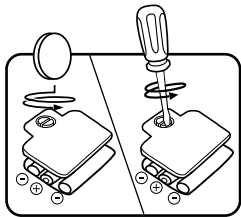
Unlock the Packaging Locks

① Rotate the packaging locks 90 degrees anti-clockwise.

② Pull out the packaging locks and discard.

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.).

5. Replace the battery cover and tighten the screw to secure.

WARNING:
Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. **On/Off Button**
   Press the **On/Off Button** to turn the unit On. To turn the unit Off, press the **On/Off Button** again.

2. **Volume Button**
   Press **Volume Button** to adjust the volume level.

3. Story Mode Button

Press the **Story Mode Button** to learn about Bluey's favourite pretend-play games with a short story.

4. Play Together Mode Button

Press the **Play Together Mode Button** to hear about the rules and items needed to play Bluey's silly invented games.

5. Music Mode Button

Press the **Music Mode Button** to add sound effects to the melodies by pressing the colourful buttons.
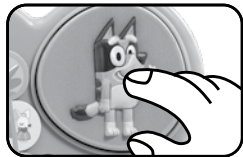

6. Follow Me Mode Button

Press the **Follow Me Mode Button** to remember a list of items Bluey needs and get them in the correct order.

7. Character Buttons

Press the **Bluey**, **Bandit**, **Chilli** and **Bingo Buttons** to hear Bluey and Bingo introduce themselves or family members.

8. Four Light-Up Buttons

Press the colourful **Light-Up Buttons** to play games and hear phrases from Bluey and Bingo. The lights flash with the sounds and music.

9. 14 Book Pages

Turn to any page to hear and play different role-playing stories, melodies and games.

10. Automatic Shut-Off

To preserve battery life, the unit will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off Button**. If the unit repeatedly turns itself off or displays abnormal responses, please insert new batteries and try again.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:
1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:
Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:
Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:
Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:
Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:
VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES
Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk
www.vtech.com.au

vtech®